




#### PARTS DESCRIPTION

- 1 Wireless Antenna - adjustable
- 2 On/Off Switch & Power indicator light
- 3 Wireless Mic Volume & Indicator Light
- 4 Wired Microphone Jack with Volume Control
- 5 Audio input jack w/ volume control
- 6 Treble/Base Control
- 7 Jack Out for Recording
- 8 Reverb/Echo control
- 9 Speaker 6.5-in
- 10 Wireless Handheld Mic or Lapel Mic with Transmitter
- 11 Power Cord & Audio Input Cable
- 12 Handle

**FRONT VIEW**

#### OPERATING INSTRUCTIONS

1. Ready to speak out of the box!
  - a. AC power – Before use, please make sure the voltage of power supply is the same as that indicated on the unit. If different, it will cause damage to the unit.
  - b. DC power – supplied from the DC input jack. The voltage should be 12V-15V
  - c. Battery – Included SLA (sealed lead acid) rechargeable battery.
2. Before switching the unit on, adjust the master volume, treble, bass and echo (reverb) controls to minimum, then turn unit on. Adjust levels accordingly.
3. If feedback occurs turn down the treble tone control. If feedback still exists, turn master volume down.
4. If volume is getting lower, receiving distance is shortened or sound is not normal, change the batteries.
5. The wireless microphone and wired microphone can be used together.
6. CD IN can connect with the portable Radio, CD player, VCR player or MP3 Player and other sound sources.
7. REC OUT can connect with a recorder to have on-site recording of your presentation OR with the output jack of a larger amplifier to enlarge the coverage. You can also plug into a house system.

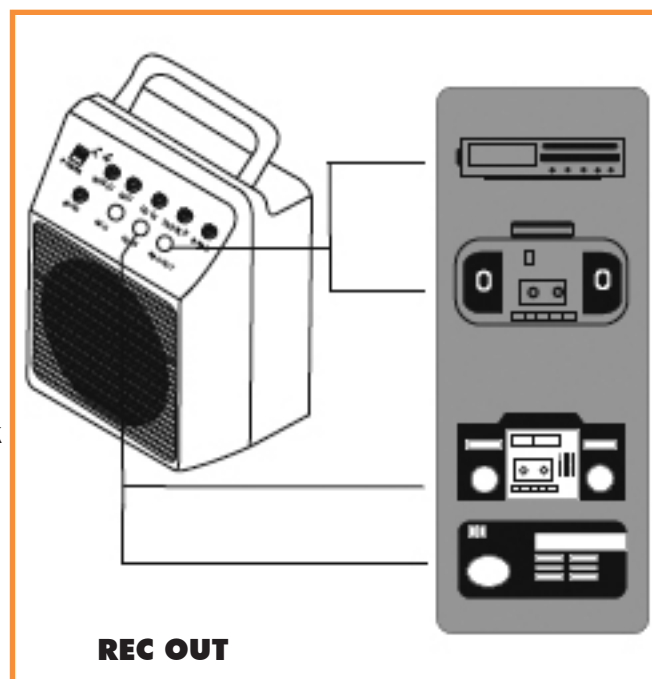

**REC OUT**



**REAR VIEW**

**PARTS DESCRIPTION**

- 14 Carrying Case
- 15 Rechargeable Battery
- 16 Compartment for AC cord
- 17 AC Input
- 18 Fuse
- 19 Camera Tripod Mount
- 20 Optional Alkaline Battery Compartment
- 21 DC Input Jack
- 22 Charge LED Indicator
- 23 Power Supply Label



8. When not using the system, remember to turn off the ON/OFF switch of the microphone and turn off the switch on the amplifier in order to avoid wasting power.
9. Do not use different brands of batteries together or mix old and new batteries together. Always change all 8 batteries at the same time.
10. Remove the optional 8-D cell batteries when the amplifier will not be used for long periods of time, since they can leak and damage the unit. Our warranty does not cover damage caused by leaking batteries.
11. Don't open the chassis.
12. Don't get unit wet.
13. Don't use any volatile chemicals on unit.

**If you have any questions please call 1-800-267-5486 Monday to Friday 8 am to 6 pm CST.**

**Specs:**

Operating Range: 64 to 128 ft (20-40m)  
 Receiving Mode: VHF  
 S/N Radio: 60dB  
 Dynamic Range: 80dB  
 Power: 30 Watts  
 Impedance: 600 Ohm  
 Amplifier Battery: Built in SLA rechargeable or optional 8 D-cells  
 Transmitter Battery: 9V  
 Frequency Range: 100 - 15,000Hz  
 VHF FM Band  
 1 Unbalanced 6.3mm jack input for microphone  
 1 unbalanced 6.3mm jack for CD  
 1 unbalanced 6.3mm jack out for REC  
 Dimensions: 11.25-in. H x 9-in. W x 6.5-in.D  
 Weight: 7.5 lbs. without batteries