

silverbox quartz softbox

**7297-S-1622**

INSTRUCTIONS



 **angler**<sup>™</sup>

## Introduction

Congratulations on your purchase of the Angler Silverbox Quartz Softbox!

The Angler Silverbox Quartz Softbox is designed to control and soften light for your specific photographic needs. Silverbox softboxes are compatible with continuous light sources (including quartz, tungsten, HMI and other “hot” lights, as well as LED or fluorescent lights) and flash (strobe) lighting sources. The textured silver interior provides a punchy and high-contrast light, but the included interior baffle and front diffuser give the photographer control over the level of diffusion. This heat-resistant fabric can be used with hot lights up to 300 watts. Built-in vents and vent doors control the temperature when using quartz, tungsten, or HMI lights.

This versatile softbox has a front surface of 16" × 22". This softbox has a front diffuser, which can be attached using touch fasteners. The diffuser can be removed to produce more intense light with increased contrast. The brightly textured silver interior finish produces a bright light with less light loss than a white interior. A speed ring (not included) is required to mount the softbox to a light.

## Highlights

- ▶ For continuous, strobe, fluorescent, and LED light sources
- ▶ Textured silver interior
- ▶ Removable, recessed front diffuser
- ▶ Removable inner baffle
- ▶ Fits most brands of speed rings and lights
- ▶ Accepts optional fabric grids

## Contents


Front diffuser ●



● Flex rods (x4)



● Fabric shell

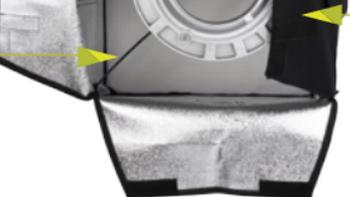

User manual ●



● Carrying case




## User Instructions

**Please follow these instructions carefully when assembling your Angler softbox.**

**There are three parts to your softbox:**


1. Fabric shell
2. Four flex rods
3. Front diffuser

A speed ring (not included) is required to assemble the Angler softbox and mount it to a light. Speed rings are available separately.

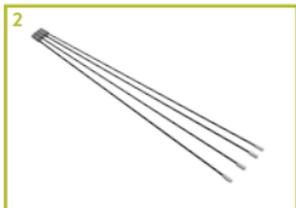

## Assembling the Silverbox

1. Insert the small metal tip of a flex rod into the sleeve along the inner seam of the softbox shell. Slide the flex rod through the sleeve until the tip fits into the end of the sleeve in the front corner of the softbox. The large metal tip is now at the rear of the softbox shell. Repeat this step with the remaining flex rods.
2. Insert the large metal tip of one of the flex rods into a hole in your speed ring (not included), positioning the speed ring with the narrower opening facing away from the softbox.
3. Insert the next flex rod into the speed ring in the hole directly across from the first one.
4. Insert the third and fourth flex rods into the speed ring. As each flex rod is inserted, flex it gently yet firmly into position.

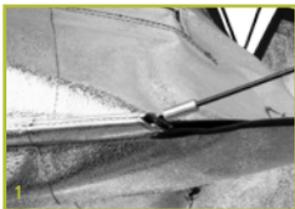

5. Fold the flaps of the softbox shell over the speed ring and press down on the touch fasteners to close the back of the softbox.
6. If you're using a hot light (quartz, tungsten, HMI, etc.), make sure to open the four vents on the sides of the softbox, securing them in place with the touch fasteners.
7. Attach the diffuser to the front of the softbox with the touch fastener. Make sure that the touch fastener is in contact with the softbox all the way around the perimeter, so that no direct light can escape.
8. Attach the softbox speed ring to your light unit. Make sure the light is off when attaching the softbox.

NOTE: The first time you use your 7297-S-1622 softbox with a hot light, there may be a slight odor and a small amount of smoke. This is a result of manufacturing residue burning off, and it should only last briefly.



## Using an optional grid

An optional grid provides more control over the light of your softbox by producing a narrower beam of light than the softbox alone.

1. Be sure to install the softbox front diffuser at the rear edge of the softbox touch-fastener strip.
2. Press the grid's touch fastener firmly against the softbox's touch-fastener strip as smoothly as possible along the length of one side.
3. Repeat for the remaining sides of the grid, attaching sides in opposite pairs.



## Disassembling the softbox

1. Turn off the power to your light head and disconnect the power cord from the power supply.
2. Allow time for the light unit, flex rods, and speed ring to cool off before proceeding.
3. Unmount the softbox assembly from the light head.
4. Pull the flex rods out of the speed ring using the same opposite rod pattern used in assembly.
5. You can leave the diffuser and flex rods in place if you wish. The softbox will roll up for storage with its diffuser and flex rods in place.

### SPECIFICATIONS

DIMENSIONS	16" X 22" X 14" (40.6 X 55.9 X 35.5 CM)
SHAPE	RECTANGULAR
INTERIOR	TEXTURED, HEAT-RESISTANT SILVER
COMPATIBILITY	FLASH, LED, FLUORESCENT QUARTZ, TUNGSTEN, HMI AND OTHER HOT LIGHTS UP TO 300 W
REMOVABLE FRONT DIFFUSER	YES
ACCEPTS GRIDS	YES
WEIGHT	1.75 LB. (0.8 KG)

## Warnings

- ▶ Please read and follow these instructions and keep this manual in a safe place.
- ▶ Keep this unit away from water and any flammable gas or liquid.
- ▶ Use only with lights of the recommended wattage.
- ▶ Handle this unit with care.
- ▶ Keep this unit away from children.
- ▶ Use parts provided by the manufacturer only.
- ▶ Make sure this item is intact and that no parts are missing.
- ▶ All photos in this manual are for illustrative purposes only.

## One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.anglerlights.com](http://www.anglerlights.com) or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.  
[www.gradusgroup.com](http://www.gradusgroup.com)



Angler is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.

GG1



[anglerlights.com](http://anglerlights.com)