

## User Manual



# XENYX

## QX2442USB

Premium 24-Input 4/2-Bus Mixer with XENYX Mic Preamps & Compressors, KLARK TEKNIK Multi-FX Processor, Wireless Option and USB/Audio Interface

## QX2222USB

Premium 22-Input 2/2-Bus Mixer with XENYX Mic Preamps & Compressors, KLARK TEKNIK Multi-FX Processor, Wireless Option and USB/Audio Interface

## QX1832USB

Premium 18-Input 3/2-Bus Mixer with XENYX Mic Preamps & Compressors, KLARK TEKNIK Multi-FX Processor, Wireless Option and USB/Audio Interface

## QX1622USB

Premium 16-Input 2/2-Bus Mixer with XENYX Mic Preamps & Compressors, KLARK TEKNIK Multi-FX Processor, Wireless Option and USB/Audio Interface

# Table of Contents

<b>Thank you .....</b>	<b>2</b>
<b>Important Safety Instructions .....</b>	<b>3</b>
<b>Legal Disclaimer .....</b>	<b>3</b>
<b>Limited warranty.....</b>	<b>3</b>
<b>1. Introduction .....</b>	<b>4</b>
1.1 General mixing console functions.....	4
1.2 The user's manual.....	5
1.3 Before you get started.....	5
<b>2. Control Elements and Connectors .....</b>	<b>5</b>
2.1 Mono channels.....	5
2.2 Stereo channels.....	7
2.3 Interface panel and main section.....	8
<b>3. Graphic 9-Band Equalizer (QX1832USB only) .....</b>	<b>12</b>
<b>4. Digital Effects Processor .....</b>	<b>13</b>
<b>5. Rear Panel Connectors .....</b>	<b>16</b>
5.1 Main mix outputs, insert points and control room outputs.....	16
5.2 Subgroup outputs.....	16
5.3 Inserts .....	16
5.4 USB input/output .....	16
5.5 Voltage supply, phantom power supply and fuse.....	17
<b>6. Installation .....</b>	<b>17</b>
6.1 Cable connections.....	17
<b>7. Specifications .....</b>	<b>19</b>

## Thank you

Congratulations! In purchasing the BEHRINGER XENYX you have acquired a mixer whose small size belies its incredible versatility and audio performance.

The XENYX Series represents a milestone in the development of mixing console technology. With the new XENYX microphone preamps including phantom power as an option, balanced line inputs and a powerful effects section, the mixing consoles in the XENYX Series are optimally equipped for live and studio applications. Owing to state-of-the-art circuitry, your XENYX console produces a warm analog sound that is unrivalled. With the addition of the latest digital technology, these best-in-class consoles combine the advantages of both analog and digital technology.

**EN Important Safety Instructions**

Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock.

Use only high-quality professional speaker cables with ¼" TS or twist-locking plugs pre-installed. All other installation or modification should be performed only by qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

**Caution**

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.

**Caution**

To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**Caution**

These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Use only attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid

injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.

16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



TO BIND MUSIC GROUP BY ANY EXPRESS OR IMPLIED UNDERTAKING OR REPRESENTATION. THIS MANUAL IS COPYRIGHTED. NO PART OF THIS MANUAL MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING AND RECORDING OF ANY KIND, FOR ANY PURPOSE, WITHOUT THE EXPRESS WRITTEN PERMISSION OF MUSIC GROUP IP LTD.

ALL RIGHTS RESERVED.

© 2013 MUSIC Group IP Ltd.

Trident Chambers, Wickhams Cay, P.O. Box 146, Road Town, Tortola, British Virgin Islands

**LIMITED WARRANTY**

For the applicable warranty terms and conditions and additional information regarding MUSIC Group's Limited Warranty, please see complete details online at [www.music-group.com/warranty](http://www.music-group.com/warranty).

**LEGAL DISCLAIMER**

TECHNICAL SPECIFICATIONS AND APPEARANCES ARE SUBJECT TO CHANGE WITHOUT NOTICE AND ACCURACY IS NOT GUARANTEED. BEHRINGER, KLARK TEKNIK, MIDAS, BUGERA, AND TURBOSOUND ARE PART OF THE MUSIC GROUP (MUSIC-GROUP.COM). ALL TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. MUSIC GROUP ACCEPTS NO LIABILITY FOR ANY LOSS WHICH MAY BE SUFFERED BY ANY PERSON WHO RELIES EITHER WHOLLY OR IN PART UPON ANY DESCRIPTION, PHOTOGRAPH OR STATEMENT CONTAINED HEREIN. COLORS AND SPECIFICATIONS MAY VARY FROM ACTUAL PRODUCT. MUSIC GROUP PRODUCTS ARE SOLD THROUGH AUTHORIZED FULLFILLERS AND RESELLERS ONLY. FULLFILLERS AND RESELLERS ARE NOT AGENTS OF MUSIC GROUP AND HAVE ABSOLUTELY NO AUTHORITY

# 1. Introduction

## XENYX Mic Preamp

The microphone channels feature high-end XENYX Mic Preamps that compare well with costly outboard preamps in terms of sound quality and dynamics and boast the following features:

- ◆ 130 dB dynamic range for an incredible amount of headroom
- ◆ A bandwidth ranging from below 10 Hz to over 200 kHz for crystal-clear reproduction of even the finest nuances
- ◆ The extremely low-noise and distortion-free circuitry guarantees absolutely natural and transparent signal reproduction
- ◆ They are perfectly matched to every conceivable microphone with up to 60 dB gain and +48 volt phantom power supply
- ◆ They enable you to use the greatly extended dynamic range of your 24-bit/192-kHz HD recorder to the full, thereby maintaining optimal audio quality

### “British EQ”

The equalizers used for the XENYX Series are based on the legendary circuitry of top-notch consoles made in Britain, which are renowned throughout the world for their incredibly warm and musical sound character. Even with extreme gain settings these equalizers ensure outstanding audio properties.

## KLARK TEKNIK Effects Processor



Additionally, your XENYX mixing console has an effects processor designed by KLARK TEKNIK that has 24-bit A/D and D/A converters included, which gives you 32 presets producing first-class reverb, delay and modulation effects plus numerous multi-effects in excellent audio quality.



The XENYX mixing consoles are equipped with a state-of-the-art switched-mode power supply (SMPS). Unlike conventional circuitry an SMPS provides an optimum supply current regardless of the input voltage. And thanks to its considerably higher efficiency a switched-mode power supply uses less energy than conventional power supplies.

## FBQ Feedback Detection System



The FBQ Feedback Detection System integrated into the graphic EQ of your QX1832USB is one of this mixer's most outstanding features.

This ingenious circuitry lets you immediately recognize and eliminate feedback frequencies. The FBQ Feedback Detection System uses the LEDs in the frequency band faders of the graphic EQ to indicate the critical frequencies. This way, what once used to be a labor-intensive search for feedback frequencies is now an activity that even a child could master.

## Voice Canceller



We have added another useful feature to the XENYX QX1832USB: the Voice Canceller.

The Voice Canceller is a filter circuitry that filters out vocal portions from a track. Therefore, this mixing console is ideally suited for use as a karaoke machine. This feature is also an optimal solution for singers who need accompanying music for their rehearsals.



## CAUTION!

- ◆ We should like to draw your attention to the fact that extreme volumes may damage your hearing and/or your headphones or loudspeakers. Turn the MAIN MIX faders and phones control in the main section fully down before you switch on the unit. Always be careful to set the appropriate volume.

## 1.1 General mixing console functions

A mixing console fulfils three main functions:

### • Signal processing:

#### Preamplification

Microphones convert sound waves into voltage that has to be amplified several-fold; then, this voltage is turned into sound that is reproduced in a loudspeaker. Because microphone capsules are very delicate in their construction, output voltage is very low and therefore susceptible to interference. Therefore, mic signal voltage is amplified directly at the mixer input to a higher signal level that is less prone to interference. This higher, interference-safe signal level has to be achieved through amplification using an amplifier of the highest quality in order to amplify the signal and add as little noise to it as possible. The XENYX Mic Preamp performs this role beautifully, leaving no traces of noise or sound coloration. Interference that could take place at the preamplification level could affect signal quality and purity, and would then be passed on to all other devices, resulting in inaccurate sounding program during recording or playback.

#### Level-setting

Signals fed into the mixer using a DI-box (Direct Injection) or the output of a sound card or a keyboard, often have to be adjusted to the operating level of your mixing console.

#### Frequency response correction

Using the equalizers found in each channel strip, you can simply, quickly and effectively adjust the way a signal sounds.

#### Effects mixing

In addition to the effects processor contained in your mixer, using the insert connectors on the mono channels and both aux busses lets you insert additional signal processors into your signal path.

### • Signal distribution:

Individual signals adjusted at each channel strip are laid out at the aux sends and returns, and are either fed into external effects processors or fed back to the internal effects processor. Then, the signals are brought back into the main mix either via the aux return connectors or via direct internal wiring. The mix for the on-stage musicians is also created using the aux sends (monitor mix). Similarly, for example, signals for recording equipment, power amplifiers, headphones and 2-track outputs can also be taken.

- **Mix:**

All other mixing console functions fall under this vital category. Creating a mix means primarily adjusting the volume levels of individual instruments and voices to one another as well as giving them the appropriate weight within the overall frequency spectrum. Likewise, you'll have to sensibly spread individual voices across the stereo image of a signal. At the end of this process, adjusting the level of the entire mix to other equipment in the signal path is required (e. g. recorder/crossover/amplifier).

The control surface of BEHRINGER mixing consoles is optimized in such a way that these functions become easy to fulfill while the signal path remains simple to follow.

## 1.2 The user's manual

The user's manual is designed to give you both an overview of the controls, as well as detailed information on how to use them. In order to help you understand the links between the controls, we have arranged them in groups according to their function. If you need to know more about specific issues, please visit our website at <http://behringer.com>. Additional information and explanations about various music industry/audio technology terminology can be found on individual product pages as well as in the glossary.

## 1.3 Before you get started

### 1.3.1 Shipment

Your mixing console was carefully packed in the factory to guarantee safe transport. Nevertheless, we recommend that you carefully examine the packaging and its contents for any signs of physical damage, which may have occurred during transit.

### 1.3.2 Initial operation

Be sure that there is enough space around the unit for cooling purposes and to avoid over-heating please do not place your mixing console on high-temperature devices such as radiators or power amps. The console is connected to the mains via the supplied cable. The console meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating.

- ◆ **Please note that all units must be properly grounded. For your own safety, you should never remove any ground connectors from electrical devices or power cables, or render them inoperative.**
- ◆ **Please ensure that only qualified people install and operate the mixing console. During installation and operation, the user must have sufficient electrical contact to earth, otherwise electrostatic discharges might affect the operation of the unit.**

## 2. Control Elements and Connectors

This chapter describes the various control elements of your mixing console. All controls, switches and connectors will be discussed in detail.

### 2.1 Mono channels

#### 2.1.1 Microphone and line inputs

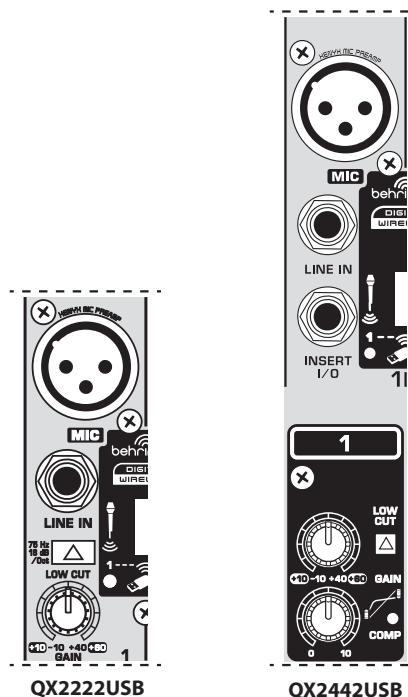


Fig. 2.1: Connectors and controls of mic/line inputs

#### MIC

Each mono input channel offers a balanced microphone input via the XLR connector and also features switchable +48 V phantom power supply for condenser microphones. The XENYX preamps provide undistorted and noise-free gain as is typically known only from costly outboard preamps.

#### LINE IN

Each mono input also has a balanced line input on a 1/4" jack. You can also connect unbalanced devices using mono cables to these inputs.

- ◆ **Please remember that you can use either the microphone input or the line input of a channel, but not both at the same time!**

#### INSERT

- ◆ **Insert points enable the processing of a signal with dynamic processors or equalizers. They are sourced pre-fader, pre-EQ and pre-aux send. Detailed information on using insert points can be found in chapter 5.3.**
- ◆ **Unlike the QX2442USB, the QX1622USB, QX1832USB and QX2222USB have their insert points located on the rear of the console.**

## WIRELESS INPUT

This connector accepts a USB receiver for use with BEHRINGER ULM wireless microphones. Note that only one source may be used per channel, either the wireless connection, XLR input, or the ¼" input.

## GAIN

Use the **GAIN** control to adjust the input gain. This control should always be turned fully counter-clockwise whenever you connect or disconnect a signal source to one of the inputs.

The scale has 2 different value ranges: the first value range (+10 to +60 dB) refers to the MIC input and shows the **amplification** for the signals fed in there.

The second value range (-10 to +40 dBu) refers to the line input and shows its **sensitivity**. The settings for equipment with standard line-level signals (-10 dBV or +4 dBu) look like this: While the GAIN control is turned all the way down, connect your equipment. Set the GAIN control to the external devices' standard output level. If that unit has an output signal level display, it should show 0 dB during signal peaks. For +4 dBu, turn up GAIN slightly, for -10 dBV a bit more. Fine-tuning of a signal being fed in is done using the level meter. To route the channel signal to the level meter, you have to press the SOLO switch and set the MODE switch in the main section to PFL (LEVEL SET).

Using the GAIN control, drive the signal to the 0-dB mark. This way you have a vast amount of drive headroom for use with very dynamic signals. The CLIP display should light up only rarely, preferably never. While fine-tuning, the equalizer should be set to neutral.

## LOW CUT

Additionally, the mono channels of the mixing consoles have a high-slope **LOW CUT** filter for eliminating unwanted, low-frequency signal components (75 Hz, 18 dB/octave).

## COMPRESSOR


Each mono channel features a built-in compressor which lowers the dynamic range of the signal and increases its perceived loudness. The loud peaks are squashed down and the quiet sections are boosted.

Turn the COMP knob clockwise to add more compression effect. The adjacent LED with light when the effect is engaged.

### 2.1.2 Equalizer

All mono input channels have a 3-band equalizer with semi-parametric mid bands. All bands provide boost or cut of up to 15 dB. In the central position, the equalizer is off (flat).

The circuitry of the British EQ is based on the technology used in the best-known top-of-the-line consoles and providing a warm sound without any unwanted side effects. The result are extremely musical equalizers which, unlike simple equalizers, cause no side effects such as phase shifting or bandwidth limitation, even with extreme gain settings of  $\pm 15$  dB.

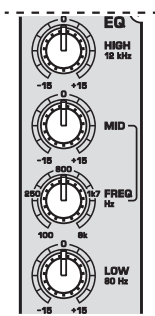

All Models

Fig. 2.2: Equalizer of the input channels

The upper (HIGH) and the lower (LOW) bands are shelving filters that increase or decrease all frequencies above or below their cut-off frequency. The cut-off frequencies of the upper and lower bands are 12 kHz and 80 Hz respectively. For the mid range, the console features a semi-parametric equalizer with a filter quality (Q) of 1 octave, tunable from 100 Hz to 8 kHz. Use the MID control to set the amount of boost or cut, and the FREQ control to determine the central frequency.

### 2.1.3 Monitor and effects busses (Aux Sends)

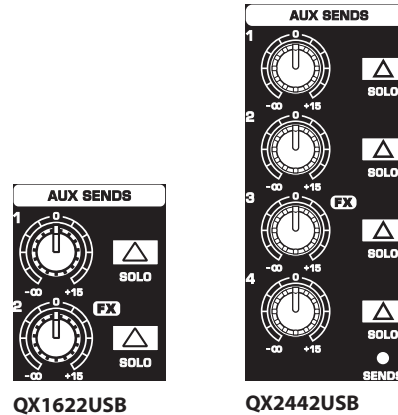


Fig. 2.3: Aux Send control MON and FX in the channel strips

Monitor and effects busses (AUX sends) source their signals via a control from one or more channels and sum these signals to a so-called bus. This bus signal is sent to an aux send connector (for monitoring applications: MON OUT - QX1832USB) and then routed, for example, to an active monitor speaker or external effects device. In the latter case, the effects return can then be brought back into the console via the aux return connectors.

All monitor and effects busses are mono, are tapped into post EQ and offer amplification of up to +15 dB.

#### Pre-fader/post-fader

When using effects on a channel signal, it is usual to have the aux send post fader so that the balance between effect and dry signal stays constant even when the channel fader is altered. If this were not the case, the effects signal of the channel would remain audible even when the channel fader is turned all the way down. For monitoring, the aux sends are generally pre-fader, i.e. they operate independently of the position of the channel fader.

#### PRE

When the PRE switch is pressed down, the associated aux send is taken pre-fader.

#### FX

The aux send marked FX offers a direct route to the built-in effects processor and is therefore post-fader and post-mute. Please refer to chapter 4 "Digital Effects Processor" for detailed information.

- ◆ If you are using the built-in effects processor, make sure that STEREO AUX RETURN 3 has nothing plugged into it (QX2442USB and QX2222USB), otherwise the internal effects return will be muted. This is not relevant if you use the FX OUT jack to drive an external effects device.
- ◆ QX1622USB and QX1832USB: On these consoles, the above note refers to the STEREO AUX RETURN 2 jacks as these models do not have a dedicated effect output.

## 2.1.4 Routing switch, PAN, SOLO and channel fader

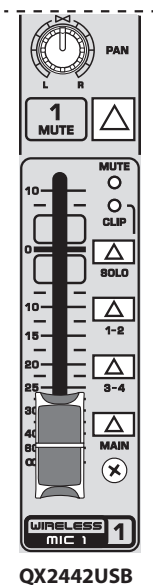


Fig. 2.4: The panorama and routing controls and the channel fader

### PAN

The **PAN** control determines the position of the channel signal within the stereo image. When working with subgroups, you can use the PAN control to assign the signal to just one output, which gives you additional flexibility in recording situations. For example, when routing to subgroups 3 and 4, panning hard left will route the signal to group output 3 only, and panning hard right will route to group output 4 only.

### MUTE

The **MUTE** switch breaks the signal path pre-channel fader, hence muting that channel in the main mix. The aux sends which are set to post-fader are likewise muted for that channel, while the pre-fader monitor paths remain active irrespective of whether the channel is muted or not.

### MUTE LED

The **MUTE LED** indicates a muted channel.

### CLIP-LED

The **CLIP-LED** lights up when the input signal is driven too high. If this happens, back off the GAIN control and, if necessary, check the setting of the channel EQ.

### SOLO

The **SOLO** switch is used to route the channel signal to the solo bus (Solo In Place) or to the PFL bus (Pre Fader Listen). This enables you to listen to a channel signal without affecting the main output signal. The signal you hear is taken either before the pan control (PFL, mono) or after the pan and channel fader (Solo, stereo) (cf. chap. 2.3.10 "Level meters and monitoring").

### SUB (1-2 and 3-4)

The **SUB** switch routes the signal to the corresponding subgroups. The QX2442USB has 4 subgroups (1-2 and 3-4).

## MAIN

The **MAIN** switch routes the signal to the main mix bus.

The channel fader determines the channel's volume in the main mix (or submix).

## 2.2 Stereo channels

### 2.2.1 Channel inputs

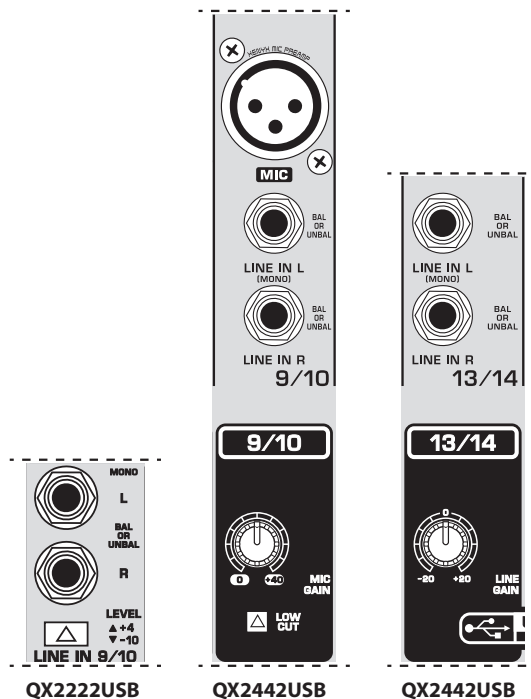


Fig. 2.5: The various stereo channel inputs

Each stereo channel has two balanced line level inputs on jacks for left and right channels. Channels 9/10 and 11/12 on the QX2442USB feature an additional XLR microphone jack with phantom power. If only the left jack (marked "L") is used, the channel operates in mono. The stereo channels are designed to handle typical line level signals, and, depending on model, have a level switch (+4 dBu or -10 dBV) and/or a line GAIN control. Both jack inputs will also accept unbalanced connectors.

### LOW CUT and MIC GAIN

These two control elements operate on the XLR connectors of the QX2442USB, and are used to filter out frequencies below 75 Hz (LOW CUT) and to adjust microphone levels (MIC GAIN).

### LINE GAIN

Use this control to adjust the line signal levels on channels 13-16 (QX2442USB only).

### LEVEL

For level matching, the stereo inputs on the QX1622USB, QX1832USB and QX2222USB have a LEVEL switch to select between +4 dBu and -10 dBV. At -10 dBV (homerecording level), the input is more sensitive than at +4 dBu (studio level).

## 2.2.2 Equalizer stereo channels

The stereo channels contain a stereo EQ section. The cut-off frequencies of the high and low bands are 12 kHz and 80 Hz respectively, while the center frequencies of the high-mid and low-mid bands are 3 kHz and 500 Hz respectively. The HIGH and LOW controls have the same characteristics as the EQ in the mono channels. Both mid range bands are of the peak filter type. A stereo EQ is superior to two mono EQs on a stereo signal as two separate EQs will usually result in a discrepancy between left and right channels.

## 2.2.3 Aux sends stereo channels

In principle, the aux sends of the stereo channels function the same way as those of the mono channels. As the aux sends are mono, the send from a stereo channel is first summed to mono before it reaches the aux bus.

## 2.2.4 Routing switch, solo and channel fader

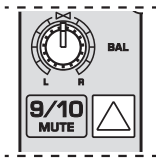


Fig. 2.6: Balance control and mute switch

### BAL

The **BAL**(ANCE) control has a similar function to the PAN control in the mono channels.

The balance control determines the levels of the left and right input signals relative to each other before both signals are routed to the left/right main mix bus (or odd/even subgroup).

The remaining control elements in the stereo channels perform the same functions as their counterparts in the mono channels (MUTE switch, MUTE and CLIP LEDs, SOLO switch, SUB and MAIN switches and channel fader).

## 2.3 Interface panel and main section

Where it was useful to trace the signal flow from top to bottom in order to gain an understanding of the channel strips, we now look at the mixing console from left to right. The signals are, so to speak, collected from the same point on each of the channel strips and then routed to the main section all together.

### 2.3.1 MON control, aux sends 1, 2 and 3 (FX)


Turning up the AUX 1 control in a channel routes the signal to the aux send bus 1.

- ◆ As the QX1832USB is equipped with an additional monitor path, its first aux control in the channel strips is named **MON**. The console also has a dedicated master fader (**MON SEND**) for this aux path.

## AUX SEND 1, 2 and 4

The AUX SEND 1 control governs the master send level of the mix created by the individual channel AUX 1 sends.

Likewise, the AUX SEND 2 control is the master control for the aux 2 bus, and AUX SEND 4 controls the AUX 4 bus.

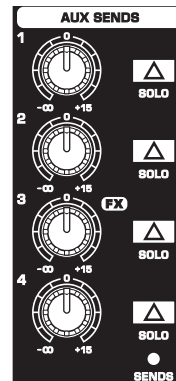

QX2442USB

Fig. 2.7: The AUX SEND controls of the main section

## AUX SEND 3 (FX)

The **FX** control determines the signal level for effects processing, i.e. regulates the level to an external (or the internal) effects device.


QX1622USB and QX1832USB: On these consoles, this function is performed by the AUX SEND 2 control (FX).

## SOLO

You can use the SOLO switch to separately monitor the aux sends via the CONTROL ROOM/PHONES outputs and check these with the level meters.

- ◆ If you want to monitor the signal of just one AUX bus, none of the other SOLO SWITCHES should be pressed and the MODE switch should be in the SOLO position (not depressed).

### 2.3.2 Aux send jacks

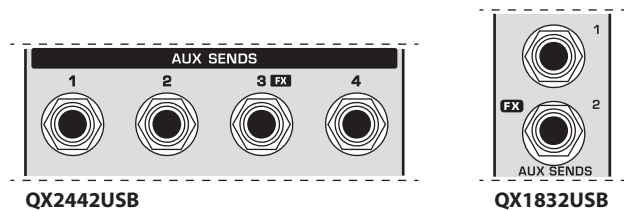

QX2442USB

QX1832USB

Fig. 2.8: Aux send jacks

## AUX SEND jacks

The **AUX SEND** jack should be used when hooking up a monitor power amp or active monitor speaker system. The relevant aux path should be set pre-fader.

- ◆ On the QX2222USB, aux send 1 is hard wired as pre-fader and hence called **MON**. Model QX1832USB has a dedicated monitor output (**MON OUT** jack), cf. chapter 2.3.4.

As already mentioned, the aux sends in the channels— if set post-fader— can be used to connect to external effects devices.



**AUX SEND (FX)**

The **AUX SEND (FX)** jack carries the master aux mix (from the channel’s FX controls). You can connect this to an external effects device to process the FX bus. The processed signal can then be brought from the effects device back into the STEREO AUX RETURN jacks.

**2.3.3 Stereo aux return connectors**

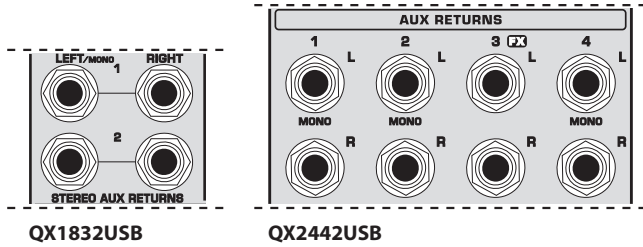


Fig. 2.9: The aux return connectors

On the QX2222USB, QX1832USB and QX1622USB the STEREO AUX RETURN jacks are located on the top panel of the unit.

**STEREO AUX RETURN**

The **STEREO AUX RETURN 1** jacks generally serve as the return for the effects mix (created using the post-fader aux sends) by connecting the output of an external effects device. If only the left jack is connected, the AUX RETURN is automatically switched to mono.

You can also use these jacks as additional line inputs.

All stereo aux returns are balanced, but can of course also be used with unbalanced connectors. If you use an aux send for monitoring, the associated unused stereo aux returns are available for other line level signals (e.g. keyboards).

A signal fed into the stereo return jacks can be output via an aux send jack. More information on this can be found in chapter 2.3.5 “STEREO AUX RETURN 1/2 (TO AUX SEND)”.

**STEREO AUX RETURN FX**

The **STEREO AUX RETURN FX** jacks accept the effects mix return (created using the channel FX sends). If these jacks are already in use as additional inputs, you can route the effects signal back into the console via a different channel. The advantage of this is that you can now use that channel’s EQ on the effects return signal.

In this instance, the FX control of the channel being used as an effects return should be turned fully counterclockwise, otherwise feedback problems could occur!

If you wish to use the internal effects processor, do not plug any connectors into the STEREO AUX RETURN FX jacks, unless you want to tap the processed signal via the FX OUT (QX2222USB and QX2442USB only).

**2.3.4 The monitor section of the QX1832USB**

One of the ways that the QX1832USB differs from the other models of this series is that it has a separate monitor output.



QX1832USB

Fig. 2.10: Monitor output of the QX1832USB

The first aux send (MON) on this console is used to set up the monitor mix from the channels and route it to the MON SEND fader.

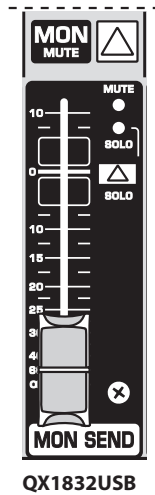


Fig. 2.11: Monitor fader of the QX1832USB

**MUTE**

Press the **MUTE** switch to mute the monitor send.

**SOLO**


The **SOLO** switch routes the monitor send to the solo bus (post-fader and post-mute) or to the PFL bus (pre-fader and pre-mute). The position of the MODE switch in the main section determines which of the buses is selected.

**2.3.5 Stereo aux return control**

**STEREO AUX RETURN 1**

The **STEREO AUX RETURN 1** control determines the level of this signal in the main mix. If STEREO AUX RETURN 1 is used as effects return, this will determine the level of the effects when mixed with any “dry” channel signal.

When used in this way, the effects device should be set at 100% effect.

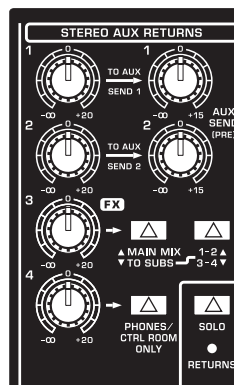

QX2442USB

Fig. 2.12: Stereo aux return and stereo aux return (to aux send) controls

**STEREO AUX RETURN 1/2 (TO AUX SEND)**

The two right-hand **STEREO AUX RETURN** controls have a special function: they can be used to add an effect to a monitor mix. An example follows (QX1622USB wired to an effects device):

## Monitor mix with effect

In this instance, your effects device should be set up as follows: the AUX SEND 2 jack should be connected to the L/Mono input of your effects device, with its outputs coming back into the STEREO AUX RETURN 1 jacks.

Connect the AUX SEND 1 jack output to the amplifier of your monitor system. The AUX SEND 1 master control determines the overall volume of the monitor mix.

Using the STEREO AUX RETURN (TO AUX SEND) control, the effect signal can now be blended into the monitor mix.

You can easily use the headphones distribution amplifier BEHRINGER POWERPLAY PRO HA4700/HA8000 to provide four (HA8000: eight) stereo headphone mixes for your studio.

The following table shows which jacks on the console can be used for this purpose.

	External effects device receives signal from...	External effects device routes signal back to...	The effect signal reaches the monitor mix via ...
<b>QX1622USB</b>	AUX SEND 2	STEREO AUX RETURN 1 connectors	STEREO AUX RETURN 1 (TO AUX SEND 1) control
<b>QX1832USB</b>	AUX SEND 1	STEREO AUX RETURN 2 connectors	MONITOR switch of the FX/AUX 2 RET
<b>QX2222USB</b>	AUX SEND 2	STEREO AUX RETURN connectors 1 or 2	STEREO AUX RETURN 1 (TO AUX SEND 1) control
<b>QX2442USB</b>	AUX SEND 2	STEREO AUX RETURN 1 connectors	STEREO AUX RETURN 1 (TO AUX SEND 1) control
<b>optional:</b>	AUX SEND 1	STEREO AUX RETURN 2 connectors	STEREO AUX RETURN 2 (TO AUX SEND 2) control

Tab. 2.1: Connectors and controls for monitor mix with effect

## STEREO AUX RETURN FX

On consoles QX1622USB and QX1832USB this is the **STEREO AUX RETURN 2**, on consoles QX2222USB and QX2442USB this is the **STEREO AUX RETURN 3**.

Use the STEREO AUX RETURN FX control to determine the level of the signal routed from the AUX RETURN FX jacks to the main mix. If nothing is connected to these jacks, the output of the built-in effects module will appear.

## MAIN MIX / TO SUBS

This switch routes the signal fed in via the STEREO AUX RETURN FX jacks either to the main mix (not pressed) or to the submix (pressed).

On the QX2442USB you can select which subgroup the signal is assigned to (switches 1-2 / 3-4, to the right of MAIN MIX / TO SUBS).

## SOLO RETURNS

Additionally, this model allows you to route the aux returns together to the solo bus and the PFL bus. The LED lights up when Solo is on.

## STEREO AUX RETURN 4 (QX2442USB only)


This control behaves the same way as the other stereo aux returns. Additionally, it provides for a simple monitor path using the switch PHONES/CTRL ROOM ONLY.

## PHONES/CTRL ROOM ONLY

Use this switch to route the signal appearing at the AUX RETURN 4 jacks to the control room and headphones outputs.

## 2.3.6 Supplement to QX1832USB

The QX1832USB has a stereo fader for the AUX RETURN FX and offers a variety of routing options: MUTE disables the effect return (but not PFL of course!), SOLO routes it to the Solo or PFL busses, SUB to the subgroups and MAIN to the main mix.

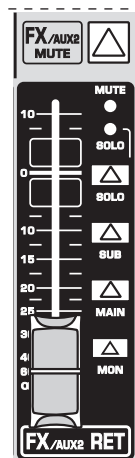

QX1832USB

Fig. 2.13: The FX/AUX 2 return fader of the QX1832USB

## MON

The MON switch routes the signals appearing at the AUX RETURN 2 jacks to the monitor path, along with the monitor signals from the channels.

If you wish to route the effect signal to the monitor mix, you can also switch aux 1 to pre-fader, drive the effect device from the aux 1 output and return the effect signal via AUX RETURN 2 to the monitor signal.

## 2.3.7 XPQ Surround function (QX1832USB only)



QX1832USB

Fig. 2.14: Control elements of the surround function



The XPQ surround function can be enabled/disabled with the **XPQ TO MAIN** switch. This is a built-in effect that widens the stereo width, thus making the sound more lively and transparent. Use the **SURROUND** control to determine the intensity of this effect.

## VOICE CANCELLER




Here, you have a filter circuitry that lets you almost entirely remove the vocal portion of a recording. The filter is constructed in such a way that voice frequencies are targeted without majorly affecting the rest of the signal. Additionally, the filter seizes only the middle of the stereo image, exactly there where the vocals are typically located.

- ◆ Connect the signal sources you wish to process using the Voice Cancellor to the 2-Track Input connectors. The Voice Cancellor circuitry is not available for other inputs.

Possible applications for the Voice Canceller are obvious: you can very simply stage background music for Karaoke events. Of course, you can also do this at home or at your rehearsal room before you hit the stage. Singers with their own band can practice singing difficult parts using a complete playback from a tape player or a CD, thus minimizing rehearsal time.

### 2.3.8 2-Track/USB In and Out

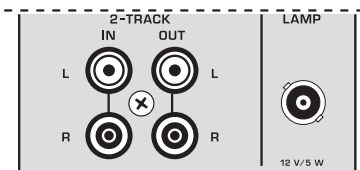

QX2442USB

Fig. 2.15: 2-track connectors and lamp socket

### 2-TRACK INPUT

The **2-TRACK INPUT** jacks (RCA) are designed to accept a 2-track recorder (e.g. DAT recorder), or they can be used as stereo line input. The output signal of a second XENYX can also be connected here. If you connect the output of a hi-fi amplifier (with a source selection switch) to the 2-TRACK INPUT, you can easily listen to additional sources (e.g. MP3 player, MD player, sound card, etc.).

Using the voice canceller function (QX1832USB only), you can process all signals being brought into your mixing console via these connectors.

### 2-TRACK OUTPUT


These connectors are wired in parallel to the MAIN OUT and carry the main mix signal (unbalanced). Connect this to the inputs of your recording device. The final output level can be adjusted via the high-precision MAIN MIX fader.

- ◆ If you connect a compressor or a noise gate post 2-track output, the main mix fader will probably not be able to create a satisfactory fade-out effect.

### 2.3.9 Lamp socket (QX2442USB only)

Use this BNC socket to connect a gooseneck lamp (12 V DC, max. 0.5 A).

### 2.3.10 Level meter and monitoring

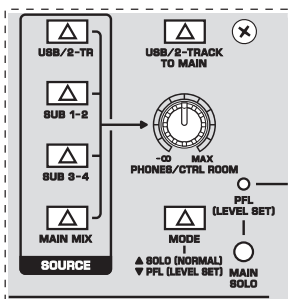

QX2442USB

Fig. 2.16: Control room and phones sections of the QX2442USB

### 2-TR/USB

The **2-TR/USB** switch routes the signal from the 2-TRACK and USB inputs to the level meter, the CONTROL ROOM OUT outputs and the PHONES jack—this is a simple way to check recorded signals via monitor speakers or headphones.

### SUB 1-2 or SUB

The **SUB 1-2** switch routes subgroup 1-2 to the level meter, CONTROL ROOM OUT and phones.

### SUB 3-4

The **SUB 3-4** switch performs a similar function for subgroup 3-4 (QX2442USB only).

### MAIN MIX

The **MAIN MIX** switch sends the main mix to the CONTROL ROOM OUT and the PHONES output as well as to the level meter.

### PHONES/CTRL ROOM

Use this control to adjust the control room output level and the headphones volume.

### 2-TR/USB TO MAIN

When the **2-TR/USB TO MAIN** switch is depressed, the 2-track input is routed to the main mix and thus serves as an additional input. You can also connect MIDI instruments or other signals here that do not require any further processing. At the same time, this switch disables the main mix to tape output link.

### POWER

The **POWER LED** indicates that the device is switched on.

### +48 V

The red "+48 V" LED lights up when phantom power is switched on. Phantom power is required to operate condenser microphones.

- ◆ While phantom power is switched on, do not connect or disconnect microphones on the mixer (or the stagebox/wallbox). Connect any microphones before switching on phantom power. Additionally, monitor/PA speakers should be muted before you activate the phantom power supply. After switching on, wait approx. one minute before adjusting the input gain so that the system has time to stabilize.

### 2.3.11 Level Meter

The high-precision level meters always give you an accurate display of signal level.

### LEVEL SETTING:

When recording to digital recorders, the recorder's meter should not go into overload. This is because, unlike analog recordings, it takes only slightly excessive levels to create unpleasant digital distortion.

When recording to analog, the VU meters of the recording machine should reach approx. +3 dB with low-frequency signals (e.g. kick drum). Due to their inertia, VU meters tend to display too low a signal level at frequencies above 1 kHz. You should only drive instruments such as a Hi-Hat as far as -10 dB. Snare drums should be driven to approx. 0 dB.

- ◆ The peak meters of your XENYX display level almost independent of frequency. A recording level of 0 dB is recommended for all types of signal.

### MODE

The **MODE** switch determines whether the channels' SOLO switch operates as PFL (Pre Fader Listen) or as solo (Solo In Place).

**PFL (LEVEL SET)**

To activate the PFL function, press the MODE switch. The PFL function should, as a rule, be used for level setting (GAIN). The signal is sourced pre-fader and assigned to the mono PFL bus. In "PFL" mode, only the left side of the peak meter is in operation. A PFL'd channel should be driven to the 0 dB mark of the VU meter.

**SOLO (NORMAL)**

When the MODE switch is not depressed, the stereo solo bus is active. Solo is actually short for "Solo In Place". This is the customary method for listening to an individual signal or to a group of signals. As soon as a solo switch is pressed, all channels not solo selected are muted in the monitor path (control room and phones). A channel's position in the stereo image is maintained. The solo bus carries the output signals of the channel pan controls, the aux sends and the stereo line inputs. On the QX2442USB all aux returns, and on the QX1832USB only aux return 2 can be routed to the solo bus. The solo bus is, as a rule, taken post-fader.

- ◆ The PAN control in the channel strip offers a constant power characteristic. This means that the signal is always at a constant level, irrespective of position in the stereo panorama. If the PAN control is moved fully left or right, the level in that channel increases by 4 dB. This ensures that, when set at the center of the stereo image, the audio signal does not appear louder. For this reason, with the solo function activated (Solo in Place), audio signals from channels with PAN controls that have not been moved fully left or right are displayed at a lower volume than in the PFL function.

As a rule, solo signals are monitored via the control room outputs and headphones jack and are displayed by the level meters. If a solo switch is pressed, the signals from the tape input, the subgroups and the main mix are cut from these outputs and the level meter.

**MAIN SOLO**

The **MAIN SOLO** LED lights up as soon as a channel or aux send solo switch is pressed. The MODE switch must be set to "Solo".

**PFL (LEVEL SET)**

The **PFL (LEVEL SET)** LED indicates that the peak meter is set to PFL mode.



Fig. 2.17: PHONES jack

**PHONES jack**


You can connect headphones to this 1/4" stereo jack (QX2442USB: 2 phones jacks). The signal routed to the **PHONES** connection is the same as that routed to the control room output.

**2.3.12 Subgroups and main mix fader**

You use the high-precision quality faders to control the output level of the subgroups and the main mix.

**LEFT/RIGHT switch**


The switches located above the subgroup faders assign the subgroup signal either to the left or right side of the main bus. Similarly, it can be routed to both sides or none at all. In the latter case, the submix is present only at the corresponding subgroup outputs.

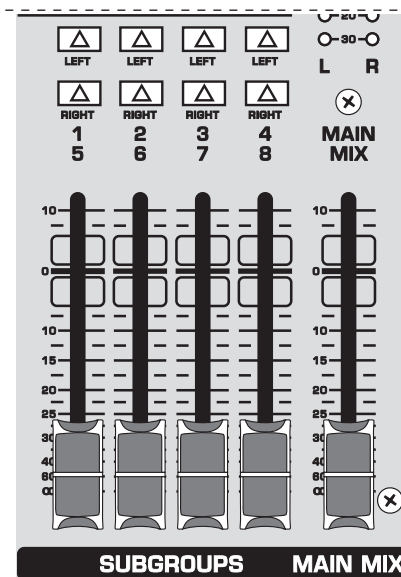

QX2442USB

Fig. 2.18: Subgroup and main mix fader

**3. Graphic 9-Band Equalizer (QX1832USB only)**

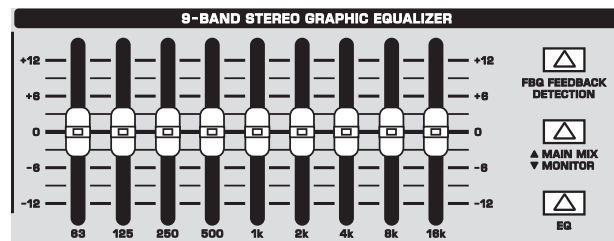

QX1832USB

Fig. 3.1: The graphic stereo equalizer of the QX1832USB

The graphic stereo equalizer allows you to tailor the sound to the room acoustics.

## EQ IN

Use this switch to activate the graphic equalizer.

## MAIN MIX/MONITOR

This toggles the graphic equalizer between the main mix and the monitor mix. With the switch up (not depressed), the equalizer is active in stereo on the main mix, and inactive on the monitor mix.

When the switch is depressed the equalizer is active in mono on the monitor mix, and inactive on the main mix.


## FBQ FEEDBACK DETECTION

The switch turns on the FBQ Feedback Detection System. It uses the LEDs in the frequency band faders to indicate the critical frequencies. On a per-need basis, lower the frequency range in question somewhat in order to avoid feedback. The graphic stereo equalizer has to be turned on in order to use this function.

♦ Logically, at least one (ideally several) microphone channels have to be open for feedback to occur at all!

Feedback is particularly common when stage monitors (“wedges”) are concerned, because monitors project sound in the direction of microphones. Therefore, you can also use the FBQ Feedback Detection for monitors by placing the equalizer in the monitor bus (see MAIN MIX/MONITOR).

## 4. Digital Effects Processor

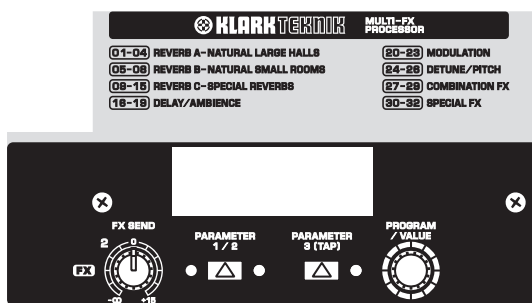

QX1832USB

Fig. 4.1: Digital effects module

Your mixer has a built-in multi-FX processor designed by KLARK TEKNIK, a renowned leader in signal processing. Follow these steps to add an effect to one or more channels.

1. Turn the FX knob up half way on each channel to which you would like to add an effect.
2. Turn the FX AUX SEND and FX AUX RETURN knobs to 0. You may adjust them later.
3. Scroll through the effects by turning the PROGRAM knob. The preset name will flash in the display. Press the PROGRAM knob to select the effect.

4. Adjust parameter 1 and 2:
  - After you have selected a preset (step 3), press the PARAM 1/2 button to enter Edit Mode. The LED on the left side of the PARAM 1/2 button will light to indicate parameter 1 is active.
  - Turn the PROGRAM knob to adjust the parameter.
  - After 4 seconds of inactivity, the mixer exits Edit Mode. You can also press the PROGRAM knob to manually exit Edit Mode.
  - Repeat the steps, using PARAM 1/2 button to select parameter 2 for editing.

5. Adjust parameter 3:
  - After you have selected a preset, press the PARAM 3/TAP button to enter Edit Mode. Depending on the parameter for the selected effect, the LED will either indicate the A/B value status of the parameter, or blink to show the current BPM/tempo.
  - Press the PARAM 3/TAP button to change the parameter A/B status, or press several times in rhythm to set a new BPM/tempo if applicable.
  - After 4 seconds of inactivity, the mixer exits Edit Mode. You can also press the PROGRAM knob to manually exit Edit Mode.

6. Read just each channel's FX knob to make sure the right amount of effect is added. If the OL (overload) meter segment lights in the display, turn the FX AUX SEND knob down.

## FX OUT

Mixing consoles QX2222USB and QX2442USB have a separate output for the effects device, which is unbalanced and stereo (tip = left signal; ring = right signal; sleeve = ground/shielding). Thus, you can record, for example, a vocal track enhanced with reverb in parallel to a “dry” vocal track; when doing the mix-down later on, you can freely determine the amount of reverb added.

♦ The QX2442USB has the effect output on the rear, QX2222USB has it located next to the aux sends on the top panel.

## FX FOOTSW.

Connect a standard foot switch to the foot switch jack and use this to switch the effects processor on and off. Connect a dual footswitch to the FX FOOTSW jack to control PARAMETER 3 (TAP) with the second footswitch.

## LEVEL

The level meter on the effects module should display a sufficiently high level. Take care to ensure that the overload (OL) meter segment only lights up at peak levels. If it is lit constantly, you are overloading the effects processor and this could cause unpleasant distortion.

# EN Multi-FX Processor Preset Chart

#	Preset Name	Param. 1	Range	Param. 2	Range	Param. 3/TAP	Range (LED indication)
<b>01 – 04 REVERB A – NATURAL LARGE HALLS</b>							
01	CHURCH	Decay Time	1.00 to 10.00	Room Shape	1 to 50	Damping	DARK (off) / BRIGHT (on)
02	CONCERT HALL 1	Decay Time	0.50 to 5.00	Chorus	1 to 30	Damping	DARK (off) / BRIGHT (on)
03	CONCERT HALL 2	Decay Time	1.00 to 5.00	Early Refl. Level	-12 to +12	Damping	DARK (off) / BRIGHT (on)
04	THEATER	Decay Time	0.40 to 3.00	Depth	0 to 9	Damping	DARK (off) / BRIGHT (on)
<b>05 – 08 REVERB B – NATURAL SMALL ROOMS</b>							
05	ROOM 1	Decay Time	0.50 to 5.00	Density	0 to 100	Damping	DARK (off) / BRIGHT (on)
06	ROOM 2	Decay Time	0.30 to 2.50	Pre Delay	0 to 50	Damping	DARK (off) / BRIGHT (on)
07	ROOM 3	Decay Time	0.20 to 10.00	Pre Delay	0 to 200	Position	FRONT (off) / REAR (on)
08	CHAMBER	Decay Time	0.10 to 3.00	Room Size	1 to 30	Damping	DARK (off) / BRIGHT (on)
<b>09 – 15 REVERB C – SPECIAL REVERBS</b>							
09	VINTAGE DIGITAL REVERB	Decay Time	0.40 to 4.50	High Freq. Damping	X 0.25, 0.33, 0.50, Max	Out Select	REAR (off) / FRONT (on)
10	PLATE REVERB 1	Decay Time	0.50 to 3.00	Pre Delay	0 to 40	Damping	DARK (off) / BRIGHT (on)
11	PLATE REVERB 2	Decay Time	0.30 to 4.00	Pre Delay	0 to 40	Damping	DARK (off) / BRIGHT (on)
12	SPRING REVERB	Decay Time	1.00 to 4.00	Pre Delay	0 to 150	Type	VINTAGE (off) / MODERN (on)
13	GATED REVERB 1	Decay Time	1 to 12	Pre Delay	0 to 400	Type	ALIVE (off) / GATED (on)
14	GATED REVERB 2	Decay Time	1 to 20	Pre Delay	0 to 30	Damping	DARK (off) / BRIGHT (on)
15	REVERSED REVERB	Decay Time	1 to 20	Pre Delay	0 to 30	Damping	DARK (off) / BRIGHT (on)
<b>16 – 19 DELAY / AMBIENCE</b>							
16	DELAY	Feedback	0 to 100	Mode	Mono, Pingpong, Spread	Delay Tempo	72 to 500 (blink @ tempo)
17	ECHO	Feedback	0 to 100	Damping	1 to 50	Echo Tempo	72 to 500 (blink @ tempo)
18	AMBIENCE	Room Size	1 to 30	Tail Gain	0 to 100	Damping	DARK (off) / BRIGHT (on)
19	EARLY REFLECTIONS	Room Size	1 to 30	Diffusion	1 to 20	Damping	DARK (off) / BRIGHT (on)

#	Preset Name	Param. 1	Range	Param. 2	Range	Param. 3/TAP	Range (LED indication)
<b>20 – 23 MODULATION</b>							
20	CHORUS	Depth	-20 to +20	LFO Speed	0.05 to 5.00	LFO Waveform	TRIANGLE (off), SINE (on)
21	FLANGER	Depth	-20 to +20	Resonance	-100 to +100	Mod Tempo	5 to 400 (blink @ tempo)
22	PHASER	Depth	-20 to +20	Resonance	1 to 50	Mod Tempo	5 to 400 (blink @ tempo)
23	AUTO-PAN / TREMOLO	Depth	-100 to +100	LFO Waveform	Triangle, Ramp, Square	Mod Tempo	5 to 400 (blink @ tempo)
<b>24 – 26 DETUNE / PITCH</b>							
24	DETUNE	Detune	-99 to +99	PreDelay	0 to 300	Damping	DARK (off) / BRIGHT (on)
25	PITCH SHIFTER 1	Note Shift	-12 to +12	PreDelay	0 to 300	Detune	0 (off) / 20 (on)
26	PITCH SHIFTER 2 (DUAL)	Note Shift A	-12 to +12	Note Shift B	-12 to +12	Stereo Spread	NARROW (off) / WIDE (on)
<b>27 – 29 COMBI-FX</b>							
27	DELAY + CHORUS	Delay<>Chorus Balance	-50 to +50	Chorus Depth	-20 to +20	Delay Tempo	75 to 500 (blink @ tempo)
28	DELAY + REVERB	Delay<>Reverb Balance	-50 to +50	Reverb Decay	1.00 to 5.00	Delay Tempo	114 to 500 (blink @ tempo)
29	CHORUS + REVERB	Chorus<>Reverb Balance	-50 to +50	Reverb Decay	1.00 to 5.00	Chorus Depth	SOFT (off) / DEEP (on)
<b>30 – 32 SPECIAL FX</b>							
30	LFO LOW-PASS FILTER	Depth	-20 to +20	Resonance	1 to 30	LFO Tempo	5 to 400 (blink @ tempo)
31	TALKBOX	Vowel 1	A, E, I, O, U	Vowel 2	A, E, I, O, U	LFO Tempo	5 to 400 (blink @ tempo)
32	CLIPPER DISTORTION	Distortion	1 to 100	Low Cut Filter	50.0 to 500.0	Damping	DARK (off) / BRIGHT (on)

## 5. Rear Panel Connectors

### 5.1 Main mix outputs, insert points and control room outputs

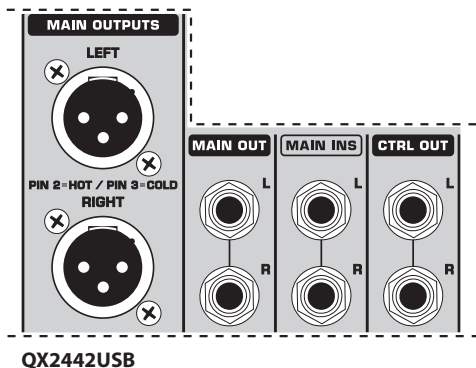


Fig. 5.1: Main Mix outputs, main mix insert points and control room outputs

#### MAIN OUTPUTS

The **MAIN** outputs carry the MAIN MIX signal and are on balanced XLR jacks with a nominal level of +4 dBu. In parallel with this, 1/4" phone jacks carry the main mix signal in a balanced format (QX1622USB: here, the phone jack outputs are unbalanced and located on the top panel).

#### CONTROL ROOM OUTPUTS (CTRL OUT)

The control room output is normally connected to the monitoring system in the control room and carries the stereo mix or, when selected, the solo signals.

#### MAIN INS(ERTS) (QX2442USB only)

These are the insert points for the main mix. In the signal path, they are post-main mix amp, but pre-main fader(s). Use them to insert, for example, a dynamics processor or graphic equalizer. Please also note the information on insert points in chapter 5.3.

### 5.2 Subgroup outputs

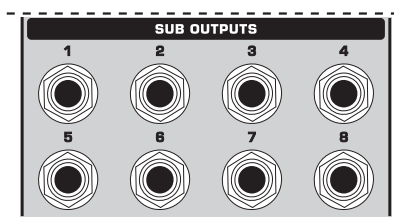



Fig. 5.2: Subgroup outputs

#### SUB OUTPUTS

The subgroup outputs are unbalanced and provide the mix of those channels assigned to each subgroup with the SUB switch (QX2442USB: switches 1-2 or 3-4) next to the channel faders. Thus, you can, for example, route a subgroup to a second console or use the output as a recording output in parallel to the main outputs. In this way, you can record several tracks simultaneously. With an 8-track recorder, use Y cables and wire the inputs of your machine so that you have 2 x 4 tracks available (e.g. channel 1 to track 1 and 2, etc.). In the first pass, you can record the tracks 1, 3, 5 and 7, in the second the tracks 2, 4, 6 and 8.

The XENYX QX2442USB already has subgroup outputs wired in parallel (1-5, 2-6, etc.).

### 5.3 Inserts

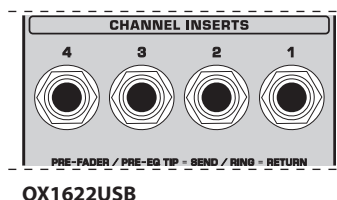


QX1622USB

Fig. 5.3: Insert points

♦ On the QX2442USB the channel insert points are located on the control panel between the line input and the GAIN control.

Insert points are very useful to process channel signals with dynamic processors or equalizers. Unlike reverb or other effects devices, whose signals are usually added to the dry signal, dynamic processors are most effective on the complete signal. In this case, aux send paths are a less-than-perfect solution. It is better to interrupt the signal path and insert a dynamic processor and/or equalizer. After processing, the signal is routed back to the console at precisely the same point it left. However, the channel signal path is interrupted only if a plug is inserted into the corresponding jack (stereo phone plug: tip = signal output; ring = return input). All mono input channels are equipped with inserts. They are pre-fader, pre-EQ and pre-aux send. Inserts can also be used as pre-EQ direct outputs, without interrupting the signal path. To this end, you will need a cable fitted with mono phone plugs on the tape machine or effect device end, and a bridged stereo phone plug on the console side (tip and ring connected).

#### Direct outputs (QX2442USB only)

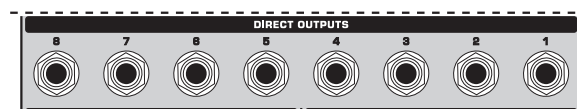

QX2442USB

Fig. 5.4: Direct outputs

#### DIRECT OUTPUTS

The direct outputs of the QX2442USB (1 each per mono input channel) are ideal for recording if several tracks are to be recorded simultaneously. These unbalanced phone jacks are post-EQ, post-mute and post-fader.

### 5.4 USB input/output

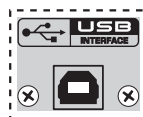


Fig. 5.5: USB input/output


The XENYX mixer line has built-in USB connectivity, allowing stereo signals to be sent to and from the mixer and a computer. The audio sent from the mixer to a computer is identical to the MAIN MIX. Audio being sent to the mixer from a computer can be routed to the main mix with the 2-TR/USB TO MAIN button.

Connect the USB type B plug into the USB jack on the mixer, and the other end into a free USB port on your computer. There are no required drivers, but we recommend that PC users install the ASIO driver which can be downloaded from [behringer.com](http://behringer.com).

Note - the mixer cannot be bus-powered via USB. Always use the internal power supply to power the unit.



## 5.5 Voltage supply, phantom power supply and fuse

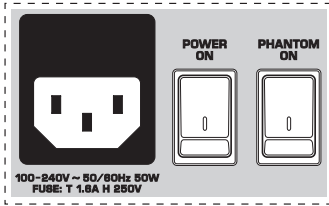

All Models

Fig. 5.6: Voltage supply and fuse

### FUSE HOLDER/IEC MAINS RECEPTACLE

The console is connected to the mains via the cable supplied, which meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating. The mains connection is made via a cable with IEC mains connector. An appropriate mains cable is supplied with the equipment.

### POWER switch

Use the **POWER** switch to turn on the mixing console. The POWER switch should always be in the "Off" position when you are about to connect your unit to the mains.

To disconnect the unit from the mains, pull out the main cord plug. When installing the product, ensure that the plug is easily accessible. If mounting in a rack, ensure that the mains can be easily disconnected by a plug pull or by an all-pole disconnect switch on or near the rack.

- ◆ **Attention: The POWER switch does not fully disconnect the unit from the mains. Unplug the power cord completely when the unit is not used for prolonged periods of time.**

### PHANTOM switch

The **PHANTOM** switch activates the phantom power (necessary to operate condenser microphones) on the XLR sockets. The red **+48 V** LED illuminates when phantom power is on. As a rule, dynamic microphones can still be used with phantom power, provided that they are wired in a balanced configuration. In case of doubt, contact the microphone manufacturer!

- ◆ **Connect microphones before you switch on the phantom power supply. Please do not connect microphones to the mixer (or the stagebox/wallbox) while the phantom power supply is switched on. In addition, the monitor/PA loudspeakers should be muted before you activate the phantom power supply. After switching on, wait approx. one minute to allow for system stabilization.**

## 6. Installation

### 6.1 Cable connections

You will need a large number of cables for the various connections of the console. The illustrations below show the wiring of these cables. Be sure to use only high-grade cables.

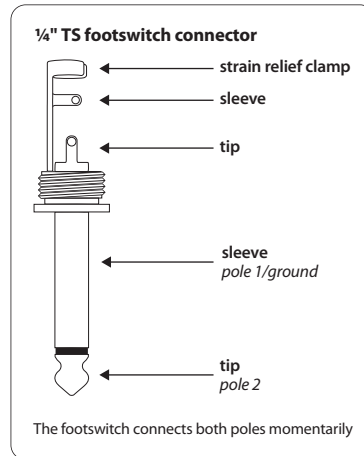


Fig. 6.1: Foot switch connector

#### 6.1.1 Audio connections

Please use commercial RCA cables to wire the 2-track inputs and outputs.

You can, of course, also connect unbalanced devices to the balanced input/outputs. Use either mono plugs, or use stereo plugs to link the ring and shaft (or pins 1 & 3 in the case of XLR connectors).

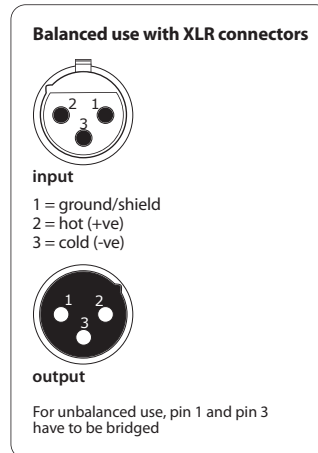


Fig. 6.2: XLR connections

- ◆ **Caution! You must never use unbalanced XLR connectors (PIN 1 and 3 connected) at the MIC input jacks if you want to use the phantom power supply.**

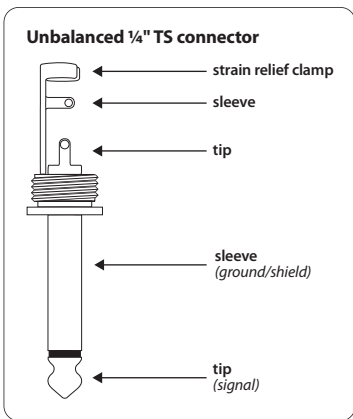


Fig. 6.3: 1/4" mono plug

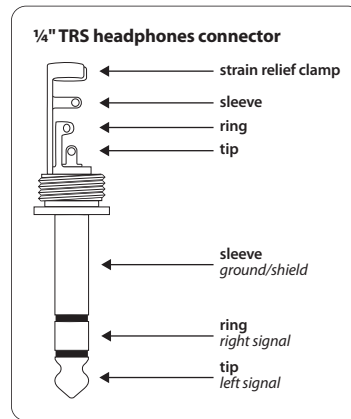


Fig. 6.6: Stereo plug for headphones connection

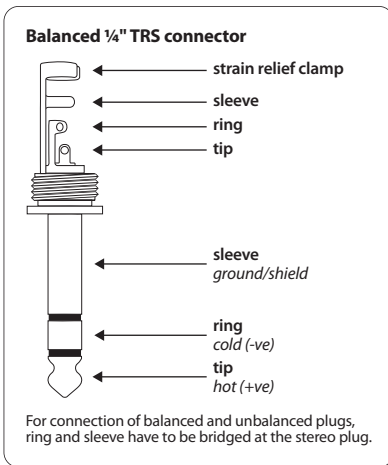


Fig. 6.4: 1/4" stereo plug

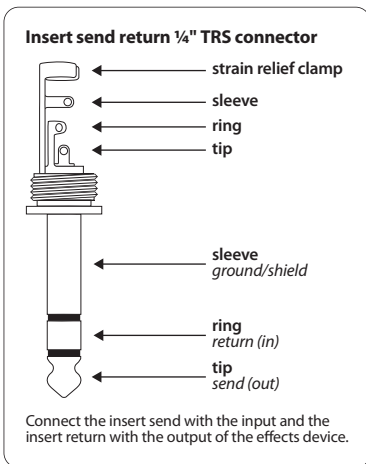


Fig. 6.5: Insert send/return stereo plug

## 7. Specifications

### QX2442USB

#### Microphone Inputs

XENYX Mic preamps	10
Type	XLR connector, balanced, discrete input circuit

#### Mic E.I.N. (20 Hz - 20 kHz)

@ 0 $\Omega$ source resistance	-134 dB / -136 dB A-weighted
@ 50 $\Omega$ source resistance	-131 dB / -133 dB A-weighted
@ 150 $\Omega$ source resistance	-129 dB / -131 dB A-weighted
Frequency response	<10 Hz - 150 kHz (-1 dB) <10 Hz - 200 kHz (-3 dB)
Gain range	+10 dB to +60 dB
Max. input level	+12 dBu @ +10 dB gain
Impedance	2 k $\Omega$ balanced
Signal-to-noise ratio	108 dB / 110 dB A-weighted (0 dBu In @ +22 dB gain)
Distortion (THD+N)	0.005% / 0.004% A-weighted
Phantom power	Switchable, +48 V

#### Line Input

Type	1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-10 dB to +40 dB
Max. input level	30 dBu

#### Frequency Response (Mic In → Main Out)

<10 Hz - 160 kHz	$\pm 3$ dB
------------------	------------

#### Stereo Inputs

Type	4 x 1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-20 dB to +20 dB
Max. input level	+22 dBu

#### 2-Track In

Type	RCA connector
Impedance	10 k $\Omega$
Max. input level	+22 dBu

#### Equalizer 3-Band Semi-Parametric

Low	80 Hz / $\pm 15$ dB
Mid	Variable 100 Hz - 8 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

#### Equalizer 4-Band Fixed

Low	80 Hz / $\pm 15$ dB
Low mid	500 Hz / $\pm 15$ dB
High mid	3 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

#### Channel Inserts

Type	1/4" TRS connector, unbalanced
Max. input level	+22 dBu

#### AUX Sends

Type	4 x 1/4" TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

#### AUX Returns

Type	4 x 1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Max. input level	+22 dBu

#### Main Outputs

Type	XLR and 1/4" connectors, balanced
Impedance	240 $\Omega$ balanced, 120 $\Omega$ unbalanced
Max. output level	+28 dBu

#### Control Room Output

Type	1/4" TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

#### Phones Output

Type	1/4" TRS connector, unbalanced
Impedance	25 $\Omega$
Max. output level	+21 dBu / 150 $\Omega$ (+25 dBm)

**2-Track Out**

Type	RCA connector
Impedance	1 k $\Omega$
Max. output level	+22 dBu

**DSP**

Type	KLARK TEKNIK
Converter	24-bit Sigma-Delta
	64/128-times oversampling
Sampling rate	40 kHz

**Wireless Input**

USB dongle	Accepts signals from 2 independent Behringer ULM mics
------------	---

**Main Mix System Data (Noise)**

Main mix @ $-\infty$ , channel fader @ $-\infty$	-102 dB / -105 dB A-weighted
Main mix @ 0 dB, channel fader @ $-\infty$	-85 dB / -88 dB A-weighted
Main mix @ 0 dB, channel fader @ 0 dB	-77 dB / -79 dB A-weighted

**Power Supply**

Mains voltage	100 – 240 V~, 50/60 Hz
Power consumption	50 W
Fuse (100 - 240 V~, 50/60 Hz)	T 1.6 A H 250 V
Mains connector	Standard IEC receptacle

**USB**

Connector	Type B
Audio	Stereo in/out
Converter	16-bit
Sample rate	48 kHz

**Physical/Weight**

Dimensions (W x D x H)	445 x 440 x 140 mm (17.5 x 17.3 x 5.5")
Weight	5.7 kg (12.6 lbs)

**QX2222USB****Microphone Inputs**

XENYX Mic preamps	8
Type	XLR connector, balanced, discrete input circuit

**Mic E.I.N. (20 Hz - 20 kHz)**

@ 0 $\Omega$ source resistance	-134 dB / -136 dB A-weighted
@ 50 $\Omega$ source resistance	-131 dB / -133 dB A-weighted
@ 150 $\Omega$ source resistance	-129 dB / -131 dB A-weighted
Frequency response	<10 Hz - 150 kHz (-1 dB) <10 Hz - 200 kHz (-3 dB)
Gain range	+10 dB to +60 dB
Max. input level	+12 dBu @ +10 dB gain
Impedance	2 k $\Omega$ balanced
Signal-to-noise ratio	106 dB / 108 dB A-weighted (0 dBu In @ +22 dB gain)
Distortion (THD+N)	0.005% / 0.004% A-weighted
Phantom power	Switchable, +48 V

**Line Input**

Type	¼" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-10 dB to +40 dB
Max. input level	30 dBu

**Frequency Response (Mic In → Main Out)**

<10 Hz - 160 kHz	$\pm 3$ dB
------------------	------------

**Stereo Inputs**

Type	4 x ¼" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-20 dB to +20 dB
Max. input level	+22 dBu

**2-Track In**

Type	RCA connector
Impedance	10 k $\Omega$
Max. input level	+22 dBu

**Equalizer 3-band semi-parametric**

Low	80 Hz / $\pm 15$ dB
Mid	Variable 100 Hz - 8 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

**Equalizer 4-Band Fixed**

Low	80 Hz / $\pm 15$ dB
Low mid	500 Hz / $\pm 15$ dB
High mid	3 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

**Channel Inserts**

Type	$\frac{1}{4}$ " TRS connector, unbalanced
Max. input level	+22 dBu

**AUX Sends**

Type	3 x $\frac{1}{4}$ " TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

**AUX Returns**

Type	3 x $\frac{1}{4}$ " TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Max. input level	+22 dBu

**Main Outputs**

Type	XLR and $\frac{1}{4}$ " connectors, balanced
Impedance	240 $\Omega$ balanced, 120 $\Omega$ unbalanced
Max. output level	+28 dBu

**Control Room Output**

Type	$\frac{1}{4}$ " TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

**Phones Output**

Type	$\frac{1}{4}$ " TRS connector, unbalanced
Impedance	25 $\Omega$
Max. output level	+21 dBu / 150 $\Omega$ (+25 dBm)

**2-Track Out**

Type	RCA connector
Impedance	1 k $\Omega$
Max. output level	+22 dBu

**DSP**

Type	KLARK TEKNIK
Converter	24-bit Sigma-Delta
	64/128-times oversampling
Sampling rate	40 kHz

**Wireless Input**

USB dongle	Accepts signals from 2 independent Behringer ULM mics
------------	---

**Main Mix System Data (Noise)**

Main mix @ $-\infty$ , channel fader @ $-\infty$	-100 dB / -103 dB A-weighted
Main mix @ 0 dB, channel fader @ $-\infty$	-85 dB / -88 dB A-weighted
Main mix @ 0 dB, channel fader @ 0 dB	-78 dB / -80 dB A-weighted

**Power Supply**

Mains voltage	100 – 240 V~, 50/60 Hz
Power consumption	50 W
Fuse (100 - 240 V~, 50/60 Hz)	T 1.6 A H 250 V
Mains connector	Standard IEC receptacle

**USB**

Connector	Type B
Audio	Stereo in/out
Converter	16-bit
Sample rate	48 kHz

**Physical/Weight**

Dimensions (W x D x H)	430 x 370 x 90 mm (16.9 x 14.6 x 3.5")
Weight	4.8 kg (10.6 lbs)

## QX1832USB

## Microphone Inputs

XENYX Mic preamps	6
Type	XLR connector, balanced, discrete input circuit

## Mic E.I.N. (20 Hz - 20 kHz)

@ 0 $\Omega$ source resistance	-134 dB / -136 dB A-weighted
@ 50 $\Omega$ source resistance	-131 dB / -133 dB A-weighted
@ 150 $\Omega$ source resistance	-129 dB / -131 dB A-weighted
Frequency response	<10 Hz - 150 kHz (-1 dB) <10 Hz - 200 kHz (-3 dB)
Gain range	+10 dB to +60 dB
Max. input level	+12 dBu @ +10 dB gain
Impedance	2 k $\Omega$ balanced
Signal-to-noise ratio	109 dB / 112 dB A-weighted (0 dBu In @ +22 dB gain)
Distortion (THD+N)	0.005% / 0.004% A-weighted
Phantom power	Switchable, +48 V

## Line Input

Type	1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-10 dB to +40 dB
Max. input level	30 dBu

## Frequency Response (Mic In → Main Out)

<10 Hz - 160 kHz	$\pm 3$ dB
------------------	------------

## Stereo Inputs

Type	4 x 1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-20 dB to +20 dB
Max. input level	+22 dBu

## 2-Track In

Type	RCA connector
Impedance	10 k $\Omega$
Max. input level	+22 dBu

## Equalizer 3-band semi-parametric

Low	80 Hz / $\pm 15$ dB
Mid	Variable 100 Hz - 8 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

## Equalizer 4-band Fixed

Low	80 Hz / $\pm 15$ dB
Low mid	500 Hz / $\pm 15$ dB
High mid	3 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

## Channel Inserts

Type	1/4" TRS connector, unbalanced
Max. input level	+22 dBu

## AUX Sends

Type	2 x 1/4" TRS connector, unbalanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

## AUX Returns

Type	2 x 1/4" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Max. input level	+22 dBu

## Main Outputs

Type	XLR and 1/4" connectors, balanced
Impedance	240 $\Omega$ balanced, 120 $\Omega$ unbalanced
Max. output level	+28 dBu

## Control Room Output

Type	1/4" TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

## Phones Output

Type	1/4" TRS connector, unbalanced
Impedance	25 $\Omega$
Max. output level	+21 dBu / 150 $\Omega$ (+25 dBm)

**2-Track Out**

Type	RCA connector
Impedance	1 k $\Omega$
Max. output level	+22 dBu

**DSP**

Type	KLARK TEKNIK
Converter	24-bit Sigma-Delta
	64/128-times oversampling
Sampling rate	40 kHz

**Wireless Input**

USB dongle	Accepts signals from 2 independent Behringer ULM mics
------------	---

**Main Mix System Data (Noise)**

Main mix @ - $\infty$ , channel fader @ - $\infty$	-100 dB / -103 dB A-weighted
Main mix @ 0 dB, channel fader @ - $\infty$	-88 dB / -91 dB A-weighted
Main mix @ 0 dB, channel fader @ 0 dB	-80 dB / -82 dB A-weighted

**Power Supply**

Mains voltage	100 – 240 V~, 50/60 Hz
Power consumption	50 W
Fuse (100 - 240 V~, 50/60 Hz)	T 1.6 A H 250 V
Mains connector	Standard IEC receptacle

**USB**

Connector	Type B
Audio	Stereo in/out
Converter	16-bit
Sample rate	48 kHz

**Physical/Weight**

Dimensions (W x D x H)	430 x 370 x 90 mm (16.9 x 14.6 x 3.5")
Weight	4.7 kg (10.4 lbs)

**QX1622USB****Microphone Inputs**

XENYX Mic preamps	4
Type	XLR connector, balanced, discrete input circuit

**Mic E.I.N. (20 Hz - 20 kHz)**

@ 0 $\Omega$ source resistance	-134 dB / -136 dB A-weighted
@ 50 $\Omega$ source resistance	-131 dB / -133 dB A-weighted
@ 150 $\Omega$ source resistance	-129 dB / -131 dB A-weighted
Frequency response	<10 Hz - 150 kHz (-1 dB) <10 Hz - 200 kHz (-3 dB)
Gain range	+10 dB to +60 dB
Max. input level	+12 dBu @ +10 dB gain
Impedance	2 k $\Omega$ balanced
Signal-to-noise ratio	107 dB / 110 dB A-weighted (0 dBu In @ +22 dB gain)
Distortion (THD+N)	0.005% / 0.004% A-weighted
Phantom power	Switchable, +48 V

**Line Input**

Type	¼" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-10 dB to +40 dB
Max. input level	30 dBu

**Frequency Response (Mic In → Main Out)**

<10 Hz - 160 kHz	$\pm 3$ dB
------------------	------------

**Stereo Inputs**

Type	4 x ¼" TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Gain range	-20 dB to +20 dB
Max. input level	+22 dBu

**2-Track In**

Type	RCA connector
Impedance	10 k $\Omega$
Max. input level	+22 dBu

**Equalizer 3-Band Semi-Parametric**

Low	80 Hz / $\pm 15$ dB
Mid	Variable 100 Hz - 8 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

**Equalizer 4-Band Fixed**

Low	80 Hz / $\pm 15$ dB
Low mid	500 Hz / $\pm 15$ dB
High mid	3 kHz / $\pm 15$ dB
High	12 kHz / $\pm 15$ dB

**Channel Inserts**

Type	$\frac{1}{4}$ " TRS connector, unbalanced
Max. input level	+22 dBu

**AUX Sends**

Type	2 x $\frac{1}{4}$ " TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

**AUX Returns**

Type	2 x $\frac{1}{4}$ " TRS connector, balanced
Impedance	20 k $\Omega$ balanced, 10 k $\Omega$ unbalanced
Max. input level	+22 dBu

**Main Outputs**

Type	XLR and $\frac{1}{4}$ " connectors, balanced
Impedance	240 $\Omega$ balanced, 120 $\Omega$ unbalanced
Max. output level	+28 dBu

**Control Room Output**

Type	$\frac{1}{4}$ " TRS connector, balanced
Impedance	120 $\Omega$
Max. output level	+22 dBu

**Phones Output**

Type	$\frac{1}{4}$ " TRS connector, unbalanced
Impedance	25 $\Omega$
Max. output level	+21 dBu / 150 $\Omega$ (+25 dBm)

**2-Track Out**

Type	RCA connector
Impedance	1 k $\Omega$
Max. output level	+22 dBu

**DSP**

Type	KLARK TEKNIK
Converter	24-bit Sigma-Delta 64/128-times oversampling
Sampling rate	40 kHz

**Wireless Input**

USB dongle	Accepts signals from 2 independent Behringer ULM mics
------------	---

**Main Mix System Data (Noise)**

Main mix @ $-\infty$ , channel fader @ $-\infty$	-100 dB / -102 dB A-weighted
Main mix @ 0 dB, channel fader @ $-\infty$	-88 dB / -91 dB A-weighted
Main mix @ 0 dB, channel fader @ 0 dB	-82 dB / -85 dB A-weighted

**Power Supply**

Mains voltage	100 – 240 V~, 50/60 Hz
Power consumption	50 W
Fuse (100 - 240 V~, 50/60 Hz)	T 1.6 A H 250 V
Mains connector	Standard IEC receptacle

**USB**

Connector	Type B
Audio	Stereo in/out
Converter	16-bit
Sample rate	48 kHz

**Physical/Weight**

Dimensions (W x D x H)	325 x 348 x 90 mm (12.8 x 13.7 x 3.5")
Weight	3.5 kg (7.7 lbs)

Asio is a trademark or registered trademark of Steinberg Media Technologies GmbH.



# FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION



Responsible Party Name: **MUSIC Group Services US Inc.**  
Address: **18912 North Creek Parkway,  
Suite 200 Bothell, WA 98011,  
USA**  
Phone/Fax No.: **Phone: +1 425 672 0816  
Fax: +1 425 673 7647**

## **XENYX QX2442USB/QX2222USB/QX1832USB/QX1622USB**

complies with the FCC rules as mentioned in the following paragraph:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Important information:**

Changes or modifications to the equipment not expressly approved by MUSIC Group can void the user's authority to use the equipment.



We Hear You