

For more information and to see other Camdapter products, visit our website @ www.camdapter.com

ProStrap Installation Instructions



STEP

1

If you are installing a ProStrap to either an adapter or directly onto your camera, proceed to step 2.

If your ProStrap has come pre-installed to an adapter, proceed to step 3.2 for installation and adjustment instructions.



Figure 1.

STEP

2

You will need a drinking straw (or similar item) and about an inch of Scotch tape.

If you recently purchased your Camdapter ProStrap, the straw will already have been installed for you. Otherwise, insert the straw through the hand strap; be sure to go under the webbing where the sliplock is located (see Figure 2-A).

NOTE - It is easier to insert the straw from the top end of the hand strap (nearest to the sliplock). When pushing the straw, do not pinch it, rather push it with the tip of your finger on the very end.

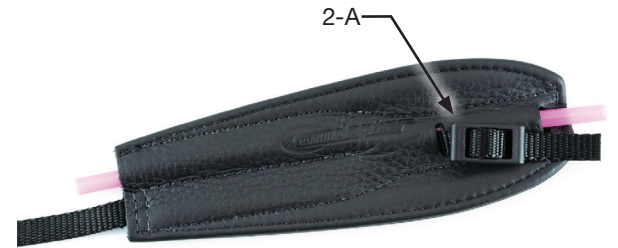


Figure 2.

STEP

3.1

Lace the webbing through the strap lug on the bottom of your camera (see Figure 3.1-A) (or your Camdapter camera adapter) and back to the end of the straw (see Figure 3.1-B) taking care not to twist the strap.

Pinch the webbing together and slip it into the end of the straw. Now, flatten the end and tape the webbing to the straw (see Figure 3.1C)

Lay the webbing flat and gently pull the straw with the attached webbing back through the hand strap until the webbing is all the way through the strap. Discard the straw and tape.



Figure 3.1

For more information and to see other Camdapter products, visit our website @ www.camdapter.com

STEP
3.2

If you purchased an adapter and a ProStrap together they will come pre-assembled, otherwise attach your adapter to the camera and refer to step 3.1.

Using the supplied allen wrench attach the adapter/ProStrap to your camera in the orientation shown in figure 3.2-A. Adjust the placement of the adapter to be more or less centered on the camera bottom. Verify that you can still access your

camera battery compartment, if not most Camdapter camera adapters are reversible to allow more clearance if needed.



Figure 3.2

STEP
4

Lace the webbing through your camera's top strap lug (see Figure 4-A) and back through the sliplock (see Figure 4-B).



Figure 4.

STEP
5

The strap can now be adjusted to fit your hand. This can be accomplished by adjusting bottom length (see Figure 5-A) and/or the webbing through the sliplock (see Figure 5-B).

Once you are comfortable with the fit of your Pro-Strap adjustment, be sure to lace the webbing back through the top of the sliplock as shown (see Figure 5-B), pull tight to lock it in place.

NOTE: Adjust the hand strap so it is loose enough to allow sufficient hand movement to reach all of the necessary camera controls.

If you are installing your hand strap with a Camdapter™ camera adapter on a camera with a battery grip, be sure to test the fit with and without the grip before trimming the web.



Figure 5.

STEP
6

Excess webbing can be trimmed off with sharp scissors or a knife. Try to leave about an inch of webbing beyond the sliplock. To prevent the fibers from unraveling, fuse them together by briefly heating them with a lighter or match flame



Figure 6.

Camdapter™ leather hand straps are finished with a light coating of mink oil. Occasionally you may notice some light hazing or dullness on the leather. A light polishing with a soft cloth will remove this haze and restore the shine of your hand strap. (Does not apply to suede hand straps.)