



an evolution in camera carrying design

Thank you for your purchase of the **Cotton Carrier Camera System**! We know you'll enjoy the comfort and security of the system, and the ability to move about freely without your camera swinging from a neck strap and causing irritating neck pain. Follow these quick and easy instructions to enjoy the superior advantages of your **Cotton Carrier** immediately!



1. Adjust the Camera Vest by adjusting the buckles on the front and the Velcro straps on the back, ensuring your Cotton Carrier sits as high up on your chest as shown. **MAKE SURE CHEST STRAP IS SNUG!**



3. Ensure you align the arrow on the Camera Hub in the direction of the lens.



5. Attach the Side Holster to the Camera Vest using the Velcro wraps for extra security. Alternatively, you can attach the Side Holster to your belt or waist strap of your camera back pack.



the key to a Snug Fit

adjust Velcro Back Straps for height

adjust front Buckle Straps for height

Camera Tethers for safety against accidental drops

adjust Chest Buckle Straps for a comfortable, but snug fit

COTTON CARRIER LTD. Warranty of Liability

The Cotton Carrier Camera System is covered by a Limited Liability Warranty for one year (365 days) from the date of purchase.

In active situations always **USE YOUR CAMERA LEASH** and **LENS STABILIZATION STRAP** for total camera security.

Only if required, we suggest the use of a NON-PERMANENT, PLASTIC SAFE thread locker minimally applied on the stainless steel bolt of the Camera Hub. Cotton Carrier Ltd. is not responsible for the damage resulting from inadequate tightening of the Camera Hub.

Cotton Carrier Ltd. is not responsible for damage caused by other manufacturer's tripod mounts as we have no control over their condition or how they are used.

In order to keep your warranty valid, you agree to maintain and service your Cotton Carrier per the information provided on this instruction sheet.



2. Attach the Camera Hub by **FIRMLY THREADING** it into the 1/4" tripod mount of your camera. **You must ensure this is REALLY TIGHT!** Recheck frequently!



4. Hold your camera above the Lexan™ receptacle of the Camera Vest and lower into the slot. Allow the camera to hang vertically, and you will find your camera securely "locked" into place.



6. For total camera security, use the Lens Stabilization Strap along with the Camera Tethers. Attach one end of the Camera Tether to your Camera Vest by clipping onto the attached D-Ring. Next, attach the stainless steel Split Ring to your camera's neck strap ring, and clip the other end of the Camera Tether onto it.

To see a detailed video of how to best put on and fit your Cotton Carrier, please visit our website and go to the Video page, and review the video on "How to fit and use your Cotton Carrier".

We're so confident you're going to love your new Cotton Carrier, we have enclosed several contact cards to hand out to other photographers we know will be asking you about the system.

We would love to hear your feedback, and see photos of you in action with your Cotton Carrier! Feel free to respond to us at feedback@cottoncarrier.com. Want to share your comments with the world? Go to our website, and click the **Forum** button on the top menu.

Thank you for joining the Evolution!

www.cottoncarrier.com



Using the Angled Camera Hub (Pro-Pac)

** this section is for purchasers of the Cotton Carrier using full bodied Pro Series and Battery Gripped Cameras only!*



The **Angled Camera Hub** is specifically designed for full bodied, professional series cameras AS WELL AS cameras using battery/portrait grips.

Screw the Camera Hub on **FIRMLY** to the base of your camera with the arrow pointed in the direction of your lens.



When wearing the camera on your Cotton Carrier, it is essential to have the lens contact your body to avoid stress on the Cotton Carrier and your camera.

While using your Cotton Carrier in active situations, such as mountain biking, skiing, hiking, etc., it is important to wear the Stabilization Strap to provide further camera stability. Also, **WEAR YOUR CAMERA LEASH** for total camera security.



Cotton Carry-Lite Instructions



- 1 Attach the Angled Camera Hub (6) if you have a battery-gripped or pro series camera, OR the Regular Camera Hub (5) to the bottom of your camera. The arrow on both the Angled Hub and the Regular Hub should point in the direction of the camera lens. **Ensure it is REALLY tight, and check the hub frequently for any loosening.**
- 2 Attach the Side Holster (2) to the Cotton Belt (1) by opening the Velcro and wrapping it around the patch area of the belt, and double locking it with the shorter Velcro strip.
- 3 Adjust the size of the Cotton Belt (1) and click it together around your waist with the 3 point buckle.
- 4 Adjust the length of the Shoulder Strap (3) to go over either of your shoulders as preferred.
- 5 Attach the included round Split Ring on your camera's neck strap slot, then attach the Camera Tether (4) to the steel D-Ring on the Shoulder Strap (3) and you are all set for comfortable, secure, camera carrying!

For information on using your Cotton Carrier with a Tripod, as well as the cleaning of your Cotton Carrier, visit our website at www.cottoncarrier.com, and go to the INSTRUCTIONS link and the FAQ Page.