

SP-S-BPS / SP-S-BPAB

# BATTERY PLATE

for SpectroLED Studio 1000 / 500

## USER MANUAL



**G** genaray™

## INTRODUCTION

The Genaray Battery Plates allow you to use either a Sony V-Lock or Anton/Bauer Gold battery to power a Genaray SpectroLED Studio Light. The battery plates are easy to install, include a D-tap power cord, and offer quick-release functionality. Mounting hardware is included.

- SP-S-BPS allows the use of a Sony V-Lock battery with a Genaray Studio Light
- SP-S-BPAB allows the use of an Anton/Bauer Gold battery with a Genaray Studio Light
- Easy installation
- Quick-release battery mounting
- D-tap power connector
- Mounting hardware included

## PRECAUTIONS

- Please read and follow these instructions, and keep this manual in a safe place.
- Keep this unit away from water and any flammable gases or liquids.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Genaray will not be responsible for any damage.
- Handle the unit with care.
- Clean the unit with a soft dry cloth.
- Keep this unit away from children.
- Use only parts provided by the manufacturer.
- Make sure the item is intact and that there are no missing parts.
- All photos are for illustrative purposes only.

## MOUNTING THE BATTERY PLATES



- All Genaray Studio lights can be operated using the Sony V-Lock or Anton/Bauer Gold battery. To use either battery, you will need to mount the correct battery plate to the back of the Studio light.
- Each battery plate uses our screws in order to secure the plate to the back of the light. The holes for the screws are configured in a different pattern for each battery plate; therefore, there are eight mounting holes on the back of the light, only four of which you will use for mounting your specific battery plate.
- If there are screws in any of the eight mounting holes on your light (inside the yellow box), remove them first. Be sure not to remove any of the surrounding structural screws.
- Make certain that the power switch on the light is in the Off position. Place the battery plate on the mounting holes and screw the mounting screws into the light. Each battery can only be mounted using the correct holes on the light; if all four screws cannot be screwed in, the plate is in the wrong position.


SP-S-1000B/D



SP-S-5000B/D



-  Sony V-Lock battery plate
-  Anton/Bauer Gold battery plate

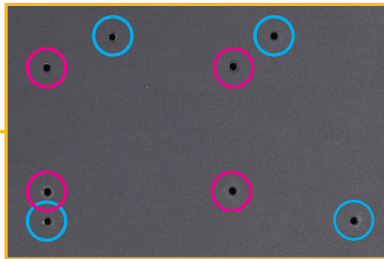

## MOUNTING THE BATTERY PLATES (CONT.)

- The Sony V-Lock battery plate will have the battery release lever oriented toward the bottom of the Studio light. The Anton/Bauer Gold battery plate will have the battery release button oriented toward the top of the light.
- After the battery plate is securely attached to the light, plug the D-tap connector into the battery plate—the two-pin connector has a rounded top, so it can only be plugged into the battery plate in the correct orientation. Then, plug the other end of the D-tap cable into the power socket on the light by aligning the four pins on the light with the four holes on the D-tap cable. Push the cable connector in until it clicks into place. To remove the connector, press the release button on the top and pull the connector straight out.
- Once the battery plate is attached to the light, mount the battery to the battery plate. Then, push the power switch to the On position to power the light. To remove the battery, be sure that the power switch is in the Off position, then press the battery release to eject the battery.

## PRODUCT SPECIFICATIONS

### SP-S-BPS (Sony V-Lock)

**Weight:** 4.8 oz. (136 g)

**Dimensions:** (H×W×L) 5.62 × 3.19 × 0.86"  
(143 × 81 × 22 mm)

### SP-S-BPAB (Anton/Bauer Gold)

**Weight:** 2 oz. (57 g)

**Dimensions:** (H×W×L) 4.72 × 3.0 × 0.55"  
(120 × 76 × 14 mm)

## BOX CONTENTS

- SP-S-BPS or SP-S-BPAB Battery Plate
- D-tap power cord
- Mounting Hardware
- One-Year Limited Warranty

## ONE-YEAR LIMITED WARRANTY

Genaray provides a limited warranty to the original purchaser that this product is free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. Genaray's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at Genaray's discretion, of any product that fails during normal consumer use. Inoperability of the product or part(s) shall be determined by Genaray. If the product has been discontinued, we reserve the right to replace it with a model of equivalent quality and function. To obtain warranty coverage, contact Genaray to obtain a return merchandise authorization ("RMA") number, and return the defective product to Genaray, along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk. This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, GENARAY MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state. Product and corporate names mentioned herein are trademarks of their respective holders.

© Copyright 2013 Genaray