



# Owners Manual

## PT720A



**1000 Watt AM/FM Tuner Hybrid Amplifier W/ 70V Output w/  
Built In Auto Mute Function And Music On Hold Output**

[www.pyleaudio.com](http://www.pyleaudio.com)



## To the User

Thank you for purchasing this fine PYLE PRO amplifier.

Please read this operating instruction carefully before using. It will acquaint you fully with all its features and help you enjoy your time. The product adopts the most advanced digital technique in the world. It is 4 channels with high power output, so to speak, the real acoustic centre of your family movie theatre. It is designed to be multi-functional w/ AM/FM Tuner, Mp3/Ipod input jack, headphone input jack. It is a product of the finest accompanying acoustic amplifier, when applied to TUNER, MP3, VCD, DVD etc. The PYLE PRO brings you the first ever Hybrid Amplifier with designed Sub out and Pre out to adjust to every situation.

## Features

- PRE-Amp with AM/FM Tuner
- CPU management of all functions , remote sensor
- Digital fluorescent output display all the functions
- Separate gain control of pre-amp and subwoofer
- All the blue lights and blue rings gain control through LED Dimmer
- AM/FM Quartz synthesized Tuner,auto station seek and store, 50 stations storage, with both manual and automatic tuning
- IPOD/MP3 Input with cable
- Digital karaoke system
- Over heat,over current protection
- Auto mute function: aux output and music on hold output with separate level control.

## Technical Specifications

<b>Main Channel Power Output</b> PMPO,8 Ohms, 1KHz test THD(1KHz)	1000WX2 <1%
<b>Normal Load Impedance</b>	8 Ohm
<b>Input Sensitivity Impedance</b> CD/DVD AUX Microphone	400mV/33k Ohm 6mV/600 Ohm
<b>Signal to Noise Ratio</b> Pure Amplifier KARAOKE	76dB 71dB
<b>Frequency Range</b> Frequency Response(40Hz-15KHz) Tone Characteristic(100Hz-10KHz)	$\pm 2$ dB $\pm 14$ dB
<b>Power Requirements</b>	AC~110V/60Hz AC~220V50Hz
<b>Dimension</b>	19"(W) x 12"(D) x 3.15"(H) inch
<b>Weight</b>	17.6 lbs

※ Specifications subject to change without prior notice

 
## **SAFETY INSTRUCTIONS**

1. Make sure that all connections are properly connected and the main volume is set to minimum level before turning on the unit.
2. When more than one pair of speakers are used, (specially the main speaker output) make sure that the speakers used are of the same wattage and impedance, otherwise the unit maybe damaged under high power or long term operation.
3. To avoid humming sounds and unwanted noise, make sure that all the wires are properly inserted.
4. For speaker cords, strip off the vinyl coating and twist the wire tip. Push down the pink jack or loosen the screw terminal, before inserting the wire tip, then fasten it and tighten the screw. Be careful not to let the wires stick out of the terminal otherwise this may cause a short circuit when wires of different terminal contact each other.
5. After the unit is turned on, adjust the main volume to the desired level same is true with the bass and treble volume, etc.

## **Precautions**

---

1. Power source-The unit should be connected to a power supply AC~110/60Hz, AC~220V/50Hz.
2. Ventilation-The unit should be situated so that its location or position does not interfere with its proper ventilation. Place the unit at least 10cm away from the walls.
3. Water and moisture-The unit should not be used near water-for example, near a swimming pool in a wet basement, etc.
4. Electric shock-if a metal object, such as hair pin or needle comes into contact inside this unit, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this unit.
5. Enclosure removal-Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.
6. Abnormal smell-if an abnormal smell or smoke is detected, immediately turn the power OFF and pull out the power cord. Contact your dealer or nearest service station.

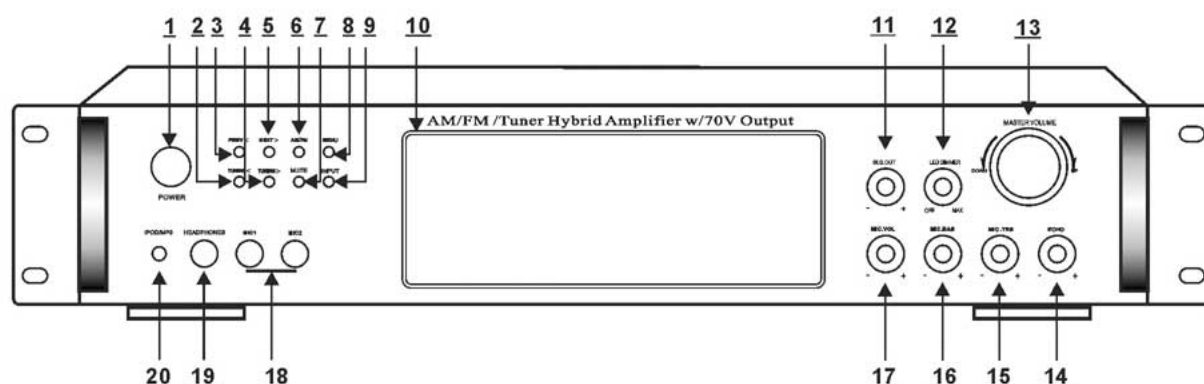

**(1) POWER SWITCH**

Press to switch the power unit ON or OFF.

**(2) TUNING-**

Radio tuning button. Decrements the radio frequency.

**(3) PREV<**

This knob is used to select the preview station which has been kept in system.

**(4) TUNING+**

Radio tuning button. Increments the radio frequency.

**(5) NEXT>**

This knob is used to select the next station which has been kept in system.

**(6) AM/FM SELECTOR**

**(7) MUTE SELECTOR**

On/Mute selector

**(8) MENU CONTROL**

This is used to increment and decrement level for the selected function of Master Volume , Bass , Treble, Balance, Auto station seek.

**(9) INPUT**

This is used to select the input sources: DVD/CD, TUNER, IPOD/MP3, AUX

**(10) FUNCTION DISPLAYED FLUORESCENT WINDOW**

**(11) SUB.OUT VOLUME CONTROL**

**(12) LED DIMMER**

Adjusts the blue lights and blue rings.

**(13) MASTER VOLUME CONTROL**

Adjusts the volume level. Turn the knob. clockwise to increase the volume.

**(14) ECHO CONTROL**

Turn the knob to adjust the MIC echo level.

**(15) MIC TREBLE**

Adjusts the treble of MIC.

**(16) MIC BASS**

Adjusts the bass of MIC.

**(17) MIC VOLUME**

Adjusts the volume level. Turn the knob clockwise to increase the MIC volume.

**(18) MIC INPUT JACKS 1&2**

 
KARAOKE MIC connect to these jacks.

**(19) HEADPHONE JACK**

Headphone connect to this jack.

**(20) IPOD/MP3 JACK**

IPOD/MP3 connect to this jack.

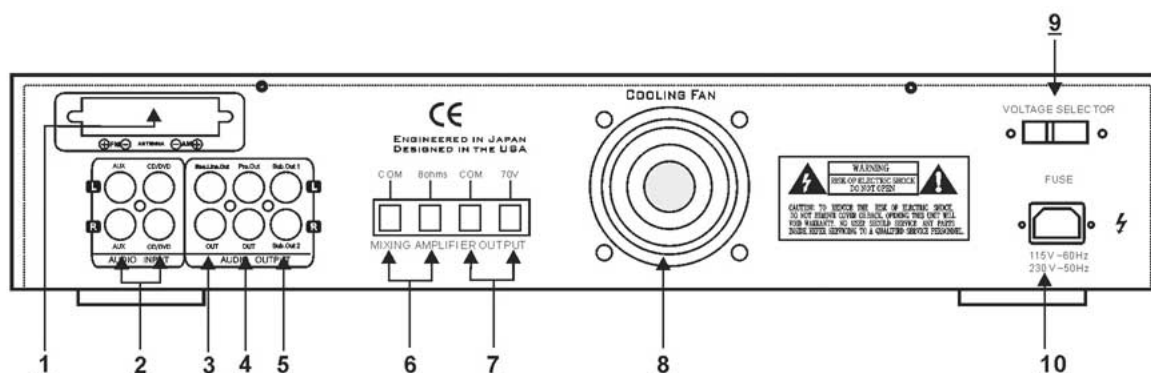

**(1) TUNER ANT**

Connect for AM and FM antennas.

**(2) AUDIO INPUT JACKS**

Connect the audio output jacks of DVD/CD, AUX to these jacks.

**(3) REC.LINE OUTPUT JACKS**

Connect the RECORD input jacks to these jacks.

**(4) PRE OUTPUT JACKS**

Connect the professional input jacks to these jacks.

**(5) SUB-WOOFER OUTPUT JACKS 1&2**

**(6) 8ohms SPEAKER OUTPUT TERMINALS**

Connect your speaker system to these terminals. (8ohms)

**(7) 70V SPEAKER OUTPUT TERMINALS**

Connect your the 70V speaker system(s) to these terminals.

 
**(8) COOLING FAN**

**(9) 110V/220V SWITCH**

According to power voltage ,push this button to the station of the 110V or 220V.

**(10) POWER CORD**

Connect to AC 110V/60Hz&220V/50Hz outlet.

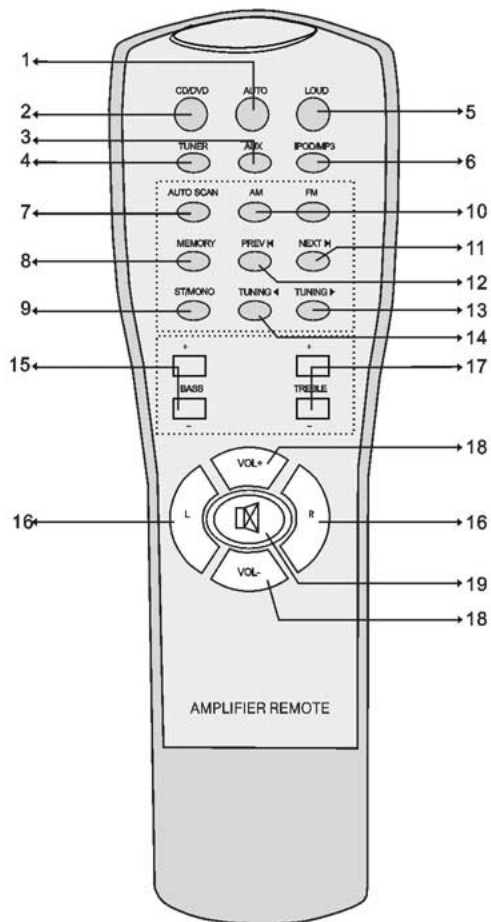

- 1、AUTO  
Automatically search the signal source when power on.
- 2、CD/DVD  
CD/DVD Selector.
- 3、AUX  
AUX Selector.
- 4、TUNER  
TUNER Selector.
- 5、LOUD  
Press the button to increase both bass treble.
- 6、IPOD/MP3  
IPOD/MP3 Selector.
- 7、AUTO SCAN  
AM/FM auto scan selector, scan and store stations automatically. Can store 50 stations.
- 8、MEMORY  
After a station has been found, you can store the station by pressing the MEMORY button and the screen will display SAVE.
- 9、ST/MONO  
Stereo and mono selector.
- 10、AM/FM  
AM/FM selector.
- 11/12、PREV< NEXT>  
Stations preview and next selector.
- 13/14、TUNING< TUNING>  
The two keys are used to adjust to the best signal of the stations.
- 15、BASS
- 16、L/R  
Left/Right Balance Control
- 17、TREBLE
- 18、VOL+ VOL-  
Master Volume Up And Down
- 19、MUTE  
Mute Selector

### Remote Control Operation

1. Remote control should be operated within 6 meters and the scope of 30° in front of receiver.
2. Make sure that there is no big obstacle between remote control and machine.
3. Remote sensor should be far away from the light, high amounts of light can affect its performance.

## System connections

