

Before using this stand, carefully read the sections entitled: “USING THE UNIT SAFELY” and “IMPORTANT NOTES”. These sections provide important information concerning the proper operation of the stand. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new stand, Owner’s manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The ⚠ symbol alerts the user to important instructions or warnings.The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
⊘	The ⊘ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
Ⓢ	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this stand, make sure to read the instructions below, and the Owner’s Manual. ⚠
- Do not open or perform any internal modifications on the stand. ⊘
- Do not attempt to repair the stand, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the “Information” page. ⊘
- Make sure you always have the stand placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. !
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the stand. ⚠
- Protect the stand from strong impact. (Do not drop it!) ⊘

⚠ CAUTION

- This stand for use only with specific Roland musical instruments. See apparatus instructions. Use with other models is capable of resulting in instability causing possible injury. ⚠
- Never climb on top of, nor place heavy objects on the stand. ⊘

⚠ CAUTION

- Take due care not to allow your fingers to become pinched when assembling the stand. !
- Do not adjust the stand height or width with the keyboard still resting on the stand. ⊘

IMPORTANT NOTES

Placement

- Depending on the material and temperature of the surface on which you place the stand, its rubber feet may discolor or mar the surface.

Maintenance

- For everyday cleaning wipe the stand with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the stand thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.



This product must be disposed of separately at your local waste recycling centre. Do not dispose of in household waste bin.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT
Al Fanny Trading Office
9, EBN Hagar A1 Askalany Street,
ARD El Golf, Heliopolis, Cairo 11341, EGYPT
TEL: 20-2-417-1828

REUNION
Maison FO - YAM Marcel
25 Rue Jules Hermann, Chaudron - BP79 97 491 Ste Clotilde Cedex, REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA
That Other Music Shop(PTY)Ltd.
11 Melle St., Braamfontein, Johannesburg, SOUTH AFRICA
TEL: (011) 403 4105
FAX: (011) 403 1234

Paul Bothner(PTY)Ltd.
Royal Cape Park, Unit 24 Londonderry Road, Ottery 7800 Cape Town, SOUTH AFRICA
TEL: (021) 799 4900

ASIA

CHINA
Roland Shanghai Electronics Co.,Ltd.
5F. No.1500 Pingliang Road Shanghai 200090, CHINA
TEL: (021) 5580-0800

Roland Shanghai Electronics Co.,Ltd.
(BEIJING OFFICE)
10F. No.18 3 Section Anhuaxili Chaoyang District Beijing 100011 CHINA
TEL: (010) 6426-5050

Roland Shanghai Electronics Co.,Ltd.
(GUANGZHOU OFFICE)
2/F., No.30 Si You Nan Er Jie Yi Xiang, Wu Yang Xin Cheng, Guangzhou 510600, CHINA
TEL: (020) 8736-0428

HONG KONG
Tom Lee Music Co., Ltd. Service Division
22-32 Pun Shan Street, Tsuen Wan, New Territories, HONG KONG
TEL: 2415 0911

Parsons Music Ltd.
8th Floor, Railway Plaza, 39 Chatham Road South, T.S.T, Kowloon, HONG KONG
TEL: 2333 1863

INDIA
Rivera Digitec (India) Pvt. Ltd.
409, Nirman Kendra Mahalaxmi Flats Compound Off. Dr. Edwin Moses Road, Mumbai-400011, INDIA
TEL: (022) 2493 9051

INDONESIA
PT Citra IntiRama
J1. Cideng Timur No. 15J-150 Jakarta Pusat
INDONESIA
TEL: (021) 6324170

KOREA
Cosmos Corporation
1461-9, Seocho-Dong, Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA
Roland Asia Pacific Sdn. Bhd.
45-1, Block C2, Jalan PJU 1/39, Dataran Prima, 47301 Petaling Jaya, Selangor, MALAYSIA
TEL: (03) 7805-3263

PHILIPPINES
G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue Makati, Metro Manila 1200, PHILIPPINES
TEL: (02) 899 9801

SINGAPORE
SWEE LEE MUSIC COMPANY PTE. LTD.
150 Sims Drive, SINGAPORE 387381
TEL: 6846-3676

TAIWAN
ROLAND TAIWAN ENTERPRISE CO., LTD.
Room 5, 9fl. No. 112 Chung Shan N.Road Sec.2, Taipei, TAIWAN, R.O.C.
TEL: (02) 2561 3339

THAILAND
Theera Music Co. , Ltd.
330 Soi Verg NakornKasem, New Road, Sumpantawongse, Bangkok 10100, THAILAND
TEL: (02) 224-8821

VIETNAM
SAIGON MUSIC DISTRIBUTOR (TAN DINH MUSIC)
138 Tran Quang Khai Street Dist. 1, Ho Chi Minh City VIETNAM
TEL: (08) 848-4068

AUSTRALIA/ NEW ZEALAND

AUSTRALIA/ NEW ZEALAND
Roland Corporation Australia Pty.,Ltd.
38 Campbell Avenue Dee Why West. NSW 2099 AUSTRALIA

For Australia
Tel: (02) 9982 8266
For New Zealand
Tel: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA
Instrumentos Musicales S.A.
Av.Santa Fe 2055 (1123) Buenos Aires ARGENTINA
TEL: (011) 4508-2700

BARBADOS
A&B Music Supplies LTD
12 Webster Industrial Park Wildey, St.Michael, Barbados
TEL: (246)430-1100

BRAZIL
Roland Brasil Ltda.
Rua San Jose, 780 Sala B Parque Industrial San Jose Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

CHILE
Comercial Fancy II S.A.
Rut.: 96.919.420-1 Nataniel Cox #739, 4th Floor Santiago - Centro, CHILE
TEL: (02) 688-9540

COLOMBIA
Centro Musical Ltda.
Cra 43 B No 25 A 41 Bododega 9 Medellin, Colombia
TEL: (574)3812529

COSTA RICA
JUAN Bansbach Instrumentos Musicales
Ave.1. Calle 11, Apartado 10237, San Jose, COSTA RICA
TEL: 258-0211

CURACAO
Zeelandia Music Center Inc.
Orionweg 30 Curacao, Netherland Antilles
TEL:(305)5926866

DOMINICAN REPUBLIC
Instrumentos Fernando Giraldez Calle Proyecto Central No.3 Ens.La Esperilla Santo Domingo, Dominican Republic
TEL:(809) 683 0305

ECUADOR
Mas Musika
Rumichaca 822 y Zaruma Guayaquil - Ecuador
TEL:(593-4)2302364

EL SALVADOR
OMNI MUSIC
75 Avenida Norte y Final Alameda Juan Pablo II, Edificio No.4010 San Salvador, EL SALVADOR
TEL: 262-0788

GUATEMALA
Casa Instrumental Calzada Roosevelt 34-01,zona 11 Ciudad de Guatemala Guatemala
TEL:(502) 599-2888

HONDURAS
Almacen Pajaro Azul S.A. de C.V.
BO.Paz Barahona 3 Ave.11 Calle S.O San Pedro Sula, Honduras
TEL: (504) 553-2029

MARTINIQUE
Musique & Son Z.I.Les Mangle
97232 Le Lamantin Martinique F.W.I.
TEL: 596 596 426860

Gigamusic SARL
10 Rte De La Folie 97200 Fort De France Martinique F.W.I.
TEL: 596 596 715222

MEXICO
Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar de los Padres 01780 Mexico D.F. MEXICO
TEL: (55) 5668-6699

NICARAGUA
Bansbach Instrumentos Musicales Nicaragua Altamira D'Este Calle Principal de la Farmacia 5ta.Avenida 1 Cuadra al Lago.#503 Managua, Nicaragua
TEL: (505)277-2557

PANAMA
SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook, Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY
Distribuidora De Instrumentos Musicales J.E. Oleary y ESQ. Manduvira Asuncion PARAGUAY
TEL: (595) 21 492147

PERU
Audionet Distribuciones Musicales SAC
Juan Fanning 530 Miraflores Lima - Peru
TEL: (511) 4461388

TRINIDAD
AMR Ltd
Ground Floor Maritime Plaza Barataria Trinidad W.I.
TEL: (868) 638 6385

URUGUAY
Todo Musica S.A.
Francisco Acuna de Figueroa 1771 C.P.: 11.800 Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA
Instrumentos Musicales Allegro,C.A.
Av.las industrias edf.Guitar import #7 zona Industrial de Turumo Caracas, Venezuela
TEL: (212) 244-1122

EUROPE

AUSTRIA
Roland Elektronische Musikinstrumente HmbH. Austrian Office
Eduard-Bodem-Gasse 8, A-6020 Innsbruck, AUSTRIA
TEL: (0512) 26 44 260

BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG
Roland Central Europe N.V.
Houtstraat 3, B-2260, Oevel (Westerlo) BELGIUM
TEL: (014) 575811

CZECH REP.
K-AUDIO
Kardasovska 626. CZ-198 00 Praha 9, CZECH REP.
TEL: (2) 666 10529

DENMARK
Roland Scandinavia A/S
Nordhavnsvvej 7, Postbox 880, DK-2100 Copenhagen DENMARK
TEL: 3916 6200

FINLAND
Roland Scandinavia As, Filial Finland
Elannontie 5 FIN-01510 Vantaa, FINLAND
TEL: (0)9 68 24 020

GERMANY
Roland Elektronische Musikinstrumente HmbH.
Oststrasse 96, 22844 Norderstedt, GERMANY
TEL: (040) 52 60090

GREECE
STOLLAS S.A.
Music Sound Light 155, New National Road Patras 26442, GREECE
TEL: 2610 435400

HUNGARY
Roland East Europe Ltd.
Warehouse Area 'DEPO' Pf.83 H-2046 Torokbalint, HUNGARY
TEL: (23) 511011

IRELAND
Roland Ireland
G2 Calmount Park, Calmount Avenue, Dublin 12 Republic of IRELAND
TEL: (01) 4294444

ITALY
Roland Italy S. p. A.
Viale delle Industrie 8, 20020 Arese, Milano, ITALY
TEL: (02) 937-78300

NORWAY
Roland Scandinavia Avd.
Kontor Norge Lilleakerveien 2 Postboks 95 Lilleaker N-0216 Oslo NORWAY
TEL: 2273 0074

POLAND
MX MUSIC SP.Z.O.O.
Ul. Gibraltarska 4. PL-03664 Warszawa POLAND
TEL: (022) 679 44 19

PORTUGAL
Roland Iberia, S.L.
Portugal Office Cais das Pedras, 8/9-1 Dto 4050-465, Porto, PORTUGAL
TEL: (22) 608 00 60

ROMANIA
FBS LINES
Piata Libertatii 1, 535500 Gheorgheni, ROMANIA
TEL: (266) 364 609

RUSSIA
MuTek
Dorozhnaya ul.3,korp.6 117 545 Moscow, RUSSIA
TEL: (095) 981-4967

SPAIN
Roland Iberia, S.L.
Paseo Garcia Faria, 33-35 08005 Barcelona SPAIN
TEL: 93 493 91 00

SWEDEN
Roland Scandinavia A/S
SWEDISH SALES OFFICE
Danvik Center 28, 2 tr. S-131 30 Nacka SWEDEN
TEL: (0)8 702 00 20

SWITZERLAND
Roland (Switzerland) AG
Landstrasse 5, Postfach, CH-4452 Itingen, SWITZERLAND
TEL: (061) 927-8383

UKRAINE
TIC-TAC
Mira Str. 19/108 P.O. Box 180 295400 Munkachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM
Roland (U.K.) Ltd.
Atlantic Close, Swansea Enterprise Park, SWANSEA SA7 9FJ, UNITED KINGDOM
TEL: (01792) 702701

MIDDLE EAST

BAHRAIN
Moon Stores
No.16, Bab Al Bahrain Avenue, P.O.Box 247, Manama 304, State of BAHRAIN
TEL: 17 211 005

CYPRUS
Radex Sound Equipment Ltd.
17, Diagorou Street, Nicosia, CYPRUS
TEL: (022) 66-9426

IRAN
MOCO INC.
No.41 Nike St., Dr.Shariyati Ave., Roberoye Cerahe Mirdamad Tehran, IRAN
TEL: (021) 285-4169

 
ISRAEL
Halilit P. Greenspoon & Sons Ltd.
8 Retzif Ha'aliya Hashnya St. Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

As of December 10, 2005 (ROLAND)

Roland

KEYBOARD STAND KS-18Z Owner's Manual

Functions

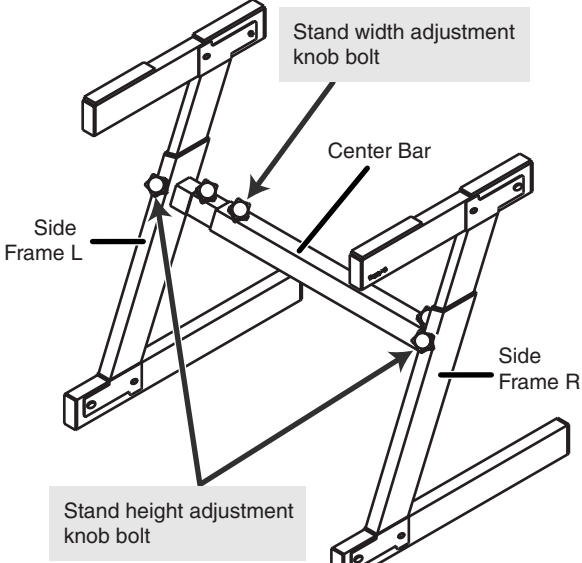


* Set up and use the stand with the stand height adjustment knob bolts facing towards the front.


Setup

1. Assemble the left and right side frames. Rotate the arms and legs of the side frames so they are in a level, horizontal position.

 * Take care not to allow your fingers or hands to become pinched by the arms or legs when rotating them.

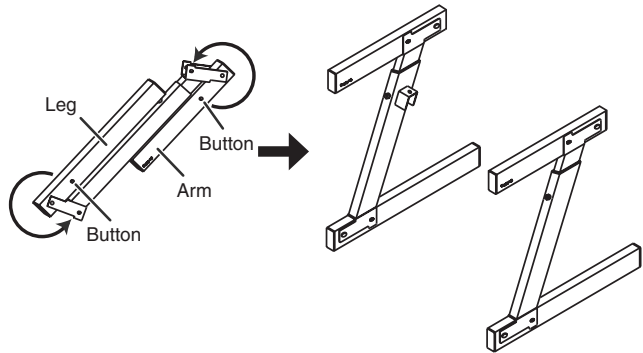


 2. With the side frames in position, attach them to the center bar with the knob bolts.

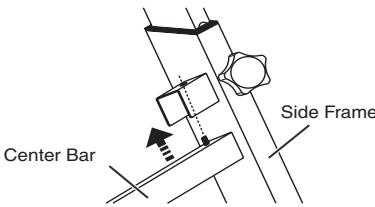

* The left and right sides of the center bar differ in width. Attach the wider end of the center bar to the side frame with the larger attachment sleeve and the thinner part of the center bar to the side frame with the narrower attachment sleeve.

 
3. Adjust the frame width. Loosen the stand width adjustment knob bolt, then change the center bar length.

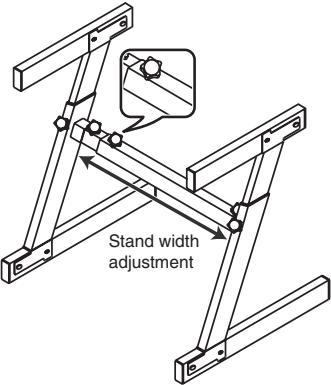

* Adjust the stand to suit the width of the keyboard you are using.

* After adjusting the stand's width, securely tighten the knob bolt.

 4. Adjust the stand height.

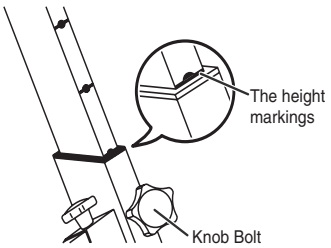


* Be sure to align to the height markings accurately as shown in the figure, then secure the stand with the included knob bolts. When tightening, be sure to confirm that the knob bolt is properly engaged in the screw hole.

* To prevent the risk of injury, always make sure to have all bolts tightened properly. Otherwise, the stand could tip over and cause the keyboard supported by it to fall down.

5. Attach the cushions.

 Remove the paper backing from the reverse sides of the included cushions, then attach the cushions where indicated in the figure.

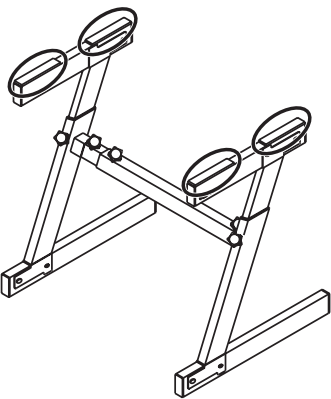

6. Confirm that all knob bolts (in five places) are securely tightened.

Copyright © 2006 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

In the interest of product improvement, the specifications, appearance and/or contents of this unit are subject to change without prior notice.