

Roland



DUO-CAPTURE EX

USB Audio Interface

Owner's Manual

For the following languages, a PDF version of the Owner's Manual can be found on the CD-ROM.

Deutsch, Français, Italiano, Español, Português, Nederlands



Preparing Your DUO-CAPTURE EX



Install the USB Driver

p. 12



Configure the Input/Output Device

p. 17



Connect a Guitar or Microphone

p. 18, p. 19

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" (p. 37) and "IMPORTANT NOTES" (p. 41). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2012 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Contents

Introduction.....	4
Main Features.....	4
Confirming Package Contents.....	4
Panel Descriptions.....	6
Front Panel.....	6
Rear Panel.....	8
Using Batteries.....	11
Inserting the Batteries (Bottom Panel).....	11

USB Driver Installation.....	12
Install the USB Driver (Windows)	12
Install the USB Driver (Mac OS X)	14
Confirm that Sound Can Be Heard	15

Connections and Settings.....	17
Input and Output Device Settings	17
Playing Back.....	18
Recording.....	19
Adjusting the Input Level.....	19

Appendix	20
Troubleshooting.....	20
USB Driver Installation	20
Using the DUO-CAPTURE EX.....	21
Mac OS X MIDI Settings	26
Changing Computer Settings to Avoid Problems.....	28
Setting the System Volume.....	28
Voice Communication Software Settings.....	30
Monitoring Function Settings ..	30
Advanced USB Driver Settings.....	31
Main Specifications	33

USING THE UNIT SAFELY	37
------------------------------------	-----------

IMPORTANT NOTES	41
------------------------------	-----------

Index	44
--------------------	-----------

Introduction

Main Features

Two microphone preamps for recording high-quality audio

Features two VS PREAMPS—the same preamps used in our acclaimed OCTA-CAPTURE.

Allows you to capture all the inherent characteristics of your instruments and microphones in high-quality audio, while enjoying the convenience of a compact design.

Supports connection of a wide variety of audio sources, including guitars.



Confirming Package Contents

After you open the package, please check that all items are present. (If anything is missing, please contact the retailer from whom you purchased the unit.)

■ DUO-CAPTURE EX



■ Owner's Manual

This is the document you're reading. Keep it on hand for reference when needed.

■ DUO-CAPTURE EX Driver CD-ROM

Contains USB drivers, demo songs, and a PDF version of the Owner's Manual.

■ Cakewalk SONAR LE DVD-ROM Windows

Contains SONAR LE.

For details about using the software, user registration, and obtaining a registration code, refer to the installation guide on the DVD-ROM or to the Help function of the software.

■ USB cable

Use this cable to connect the DUO-CAPTURE EX to the USB port of your computer.

- * Please use only the included USB cable. If you require a replacement due to loss or damage, please contact the nearest Roland Service center or an authorized Roland distributor (p. 45).

■ Alkaline battery (AA, LR6) ×3

- * The life of the supplied batteries may be limited, since their primary purpose was to enable testing.

■ License agreement

This agreement permits you to use software for which the copyright is owned by Roland Corporation.

You must read this before opening the CD-ROM.

■ Read Me First

This leaflet provides information about the following:


- The [COMPUTER/TAB] switch (p. 10) and powering the unit
- Connecting tablet devices

Items you'll need to prepare

- External amplifier, speakers, headphones, etc., for listening to the sound that is output from the DUO-CAPTURE EX
- Microphone, guitar, etc., for inputting audio to the DUO-CAPTURE EX

Panel Descriptions


Front Panel

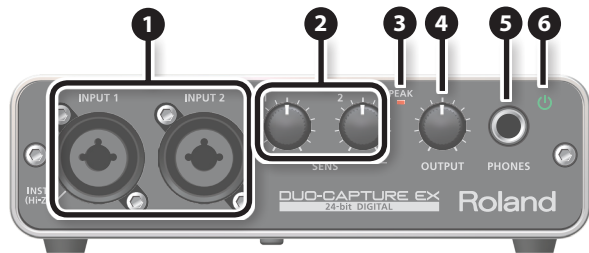

1 INPUT 1, 2 jacks (combo jacks)

These are analog audio input jacks with microphone preamps. They accommodate both XLR connectors and 1/4-inch phone type jacks, and support both balanced and unbalanced connections.


INPUT 1, 2 jacks	Input sensitivity
XLR connector	-60-- -6 dBu
Phone type plug	-46--+2 dBu

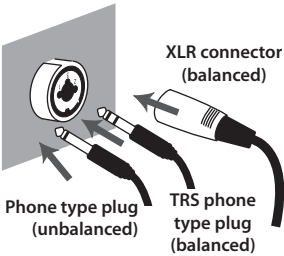

MEMO

- To prevent malfunction and equipment failure, always turn down the volume and turn off all devices (except the computer) before making any connections.
- DUO-CAPTURE EX is equipped with balanced (XLR/TRS) type jacks. Wiring diagrams for these jacks are shown here. Make connections after first checking the wiring diagrams of other equipment you intend to connect.
- Set the [INST] switch (p. 9) and [PHANTOM] switch (p. 9) as appropriate for the audio device that is connected.
- Use a microphone with an XLR connector. The sound level will be very low if you use a microphone with a phone type plug.
- When connecting a guitar or bass, use the INPUT 1 jack. The sound level will be very low if you connect directly to the INPUT 2 jack.

 - 1: GND
2: HOT
3: COLD



2 [SENS 1] knob, [SENS 2] knob

Adjust the volume of the audio signal that is input via the INPUT 1 jack and the INPUT 2 jack.

3 PEAK indicator

Lights up when the input signal level is too high. Use the [SENS 1] knob and the [SENS 2] knob to adjust the input level so that the PEAK indicator does not light.

4 [OUTPUT] knob

Adjusts the volume that is output from the PHONES jack, OUTPUT L jack, and OUTPUT R jack.

5 PHONES jack

Used to connect headphones. This jack will output the same sound as the OUTPUT L and OUTPUT R jacks. Even if headphones are connected, sound will be output from the OUTPUT L and OUTPUT R jacks.

6 Power indicator (🔌)

Lights up while the DUO-CAPTURE EX's power is on (p. 9).


Power indicator color	Supplied power
Green	Bus power or optional AC adaptor
Red	Batteries

MEMO

- When operating this unit using batteries, the power indicator will blink when the batteries only have enough power left for five or fewer minutes of operation. Replace the batteries as soon as possible.
- When using the optional AC adaptor, the DUO-CAPTURE EX will automatically be switched off after 10 consecutive hours of no communication with the computer. The power indicator will blink 5 minutes before the unit switches off automatically. After the unit switches off, turn the power on if you want to use the DUO-CAPTURE EX again.

Introduction

Rear Panel

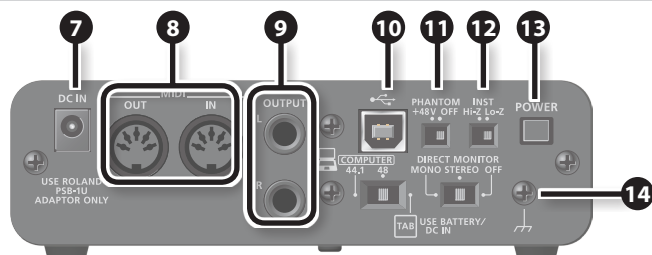


7 DC IN jack

Accepts connection of the AC adaptor (sold separately).

MEMO

- Even if batteries are installed, the unit will turn off if you connect or disconnect the power cord from the AC outlet while the unit is turned on, or if you connect or disconnect the AC adaptor from the unit. You must turn off the power before you connect or disconnect the power cord or AC adaptor.

 - Place the AC adaptor so the side with the indicator (see illustration) faces upwards and the side with textual information faces downwards. The indicator will light when you plug the AC adaptor into an AC outlet.



8 MIDI OUT, IN connectors

 
Connect the MIDI OUT connector to an external MIDI sound module, etc.
Connect the MIDI IN connector to a MIDI keyboard or MIDI controller.

9 OUTPUT L, R jacks (TRS (balanced) phone type)

Output the analog audio signal.

MEMO

The balanced TRS phone type OUTPUT L and OUTPUT R jacks are wired as shown in the illustration. Make connections only after first checking the wiring diagrams of the other equipment you intend to connect.



10 USB port (•⇄•)

Connects to the computer.

NOTE

- 8 Do not connect the DUO-CAPTURE EX to the computer until the driver has been installed (p. 12).

11 [PHANTOM] switch

Determines whether the DUO-CAPTURE EX supplies phantom power to the XLR connectors of the INPUT 1 and INPUT 2 jacks.

Switch position	Connected equipment
+48V	Condenser microphone that requires phantom power * Phantom power supplied by this unit: DC 48 V; maximum 6 mA (for INPUT 1 and INPUT 2 combined).
OFF	Other equipment

NOTE

You must leave the [PHANTOM] switch set to "OFF" unless condenser microphones requiring phantom power are connected to the XLR connectors. Supplying phantom power to a dynamic microphone or to an audio playback device may damage the equipment. For details on the requirements of your microphone, refer to its owner's manual.

12 [INST] switch

Determines the impedance of the INPUT 1 jack. You can select high impedance (Hi-Z) or low impedance (Lo-Z) as appropriate for the connected equipment.


Switch position	Equipment connected to the INPUT 1 jack
Hi-Z	Guitar or bass
Lo-Z	Other equipment (such as synthesizers)

13 [POWER] switch

Turns the DUO-CAPTURE EX's power on and off.

Make sure to use the following procedure when turning the unit on. If this procedure is performed incorrectly, faulty operation or other malfunctions may occur.

 - When the [COMPUTER/TAB] switch (p. 10) is set to "COMPUTER" ("48" or "44.1"), install the USB driver (p. 12) and use the USB cable to connect the unit to the computer (p. 18, p. 19).
- When the [COMPUTER/TAB] switch (p. 10) is set to "TAB," insert batteries (p. 11) or connect an optional AC adaptor (p. 18, p. 19).



1. Turn the volume completely down on the DUO-CAPTURE EX and the speakers.
2. Set the [POWER] switch to the "on" position.
3. Adjust the volume on the DUO-CAPTURE EX and the speakers.


This unit is equipped with a protection circuit. A brief interval (a few seconds) after turning the unit on is required before it will operate normally.

Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

14 Ground terminal

Refer to "Grounding" (p. 42).

Introduction

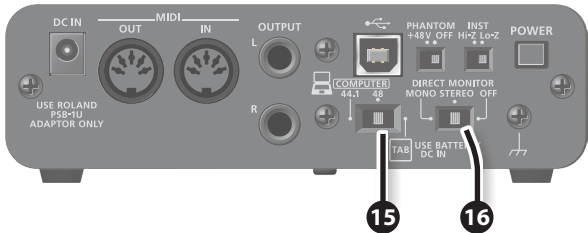

15 [COMPUTER/TAB] switch

Determines the operating mode and sampling frequency of the DUO-CAPTURE EX.

MEMO

For details, refer to the “Read Me First” leaflet.

Switch position	Explanation
COMPUTER 48/44.1	Select when connecting to a computer (Windows or Mac OS X). The included USB driver allows you to record, play, and edit high-quality audio with stable timing. Set the switch to the sampling rate you want to use.
TAB	Select when connecting to a tablet device. There is no need to install the included USB driver. In this mode, the DUO-CAPTURE EX operates on power from the batteries or the optional AC adaptor. The sampling frequency is fixed at 44.1 kHz.

MEMO

Before changing the position of the [COMPUTER/TAB] switch, exit all software that’s running and turn the DUO-CAPTURE EX off.

16 [DIRECT MONITOR] switch

Determines whether the audio signals input via the INPUT 1 and INPUT 2 jacks are output directly. For information about how the audio signal is handled, refer to the block diagram at the end of this document.

Switch position	Explanation
MONO	Monitor in monaural.
STEREO	Monitor in stereo.
OFF	Select when monitoring using the DAW software. Only audio input via the DUO-CAPTURE EX’s USB port can be monitored. When using with GarageBand, set to “OFF.”

MEMO

- When a guitar is connected to the INPUT 1 jack and nothing is connected to the INPUT 2 jack, set to “MONO.”
- Even when set to “MONO,” a stereo audio signal is output from the DUO-CAPTURE EX’s USB port.


Using Batteries

When using the DUO-CAPTURE EX with the [COMPUTER/TAB] switch (p. 10) set to "TAB," three alkaline batteries or commercially available rechargeable Ni-MH batteries (AA, LR6) are required.

Inserting the Batteries (Bottom Panel)


- 1. Remove the battery case cover on the bottom panel of the DUO-CAPTURE EX.**

While pressing the tab, lift the cover.

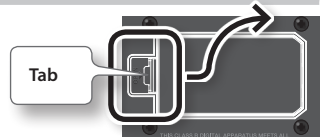

- 2. Insert the batteries into the battery case.**

Make sure the "+" and "-" ends of the batteries are inserted in the correct direction.

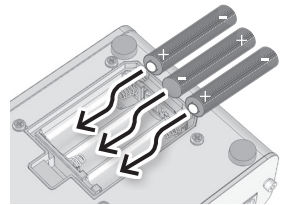

- 3. Close the battery case cover.**

When removing the batteries, first turn the DUO-CAPTURE EX off, and then remove the battery case cover and remove the batteries.

Note the following when using batteries

- Incorrect handling of batteries, rechargeable batteries, or a battery charger can cause leakage, overheating, fire, or explosion. Before use, you must read and strictly observe all of the precautions that accompany the batteries, rechargeable batteries, or battery charger.
- If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions.
 - Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity.
 - Avoid using new batteries together with used ones. In addition, avoid mixing different types of batteries.
 - Remove the batteries whenever the unit is to remain unused for an extended period of time.
 - Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.
 - Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live.
- When operating this unit using batteries, please use alkaline batteries or rechargeable Ni-MH batteries.
- This unit will not operate using batteries or bus power unless the AC adaptor is disconnected.
- Even if batteries are installed, the unit will turn off if you connect or disconnect the power cord from the AC outlet while the unit is turned on, or if you connect or disconnect the AC adaptor from the unit. You must turn off the power before you connect or disconnect the power cord or AC adaptor.
- The power will turn off shortly after the Power indicator has started blinking. At this point, you need to change the batteries.
- The DUO-CAPTURE EX cannot be used to charge rechargeable Ni-MH batteries. Use a commercially available battery charger.

USB Driver Installation

A USB driver is software installed on your computer that handles data sent between your computer's software and the DUO-CAPTURE EX.

In order to use the DUO-CAPTURE EX with a computer, the USB driver must be installed.

NOTE

Do not connect the DUO-CAPTURE EX to the computer until you are directed to do so.

MEMO

Refer to the Roland website for the latest USB drivers and information about compatibility with the latest operating system versions.

<http://www.roland.com/support/>

Install the USB Driver (Windows)

1. Set the DUO-CAPTURE EX's [COMPUTER/TAB] switch to "COMPUTER" ("44.1" or "48").

2. Start up the computer without the DUO-CAPTURE EX connected.

Exit all applications that are running.

3. Insert the included "DUO-CAPTURE EX Driver CD-ROM" into the CD-ROM drive.

4. Double-click the [Setup] icon in the [WinDriver] folder on the CD-ROM.

The installer starts.

5. Follow the instructions on the screen and install the software.

5-1. When a confirmation screen regarding user account control appears, click the [Yes] button or [Continue] button.


5-2. When "The DUO-CAPTURE EX Driver will be installed on your computer." appears, click the [Next] button.

5-3. Click the [Next] button again.

MEMO

- If a dialog box regarding Windows security appears, click the [Install] button.
- If the "Software Install" dialog box appears, click the [Continue] button.

6. When “Ready to install the driver.” appears, connect the DUO-CAPTURE EX to the computer using the USB cable and set the [POWER] switch to the “on” position.

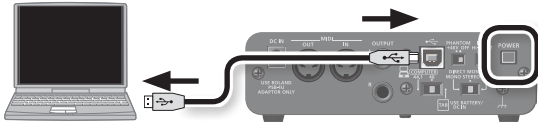

MEMO

- Do not connect any cables to the DUO-CAPTURE EX other than the USB cable.
- If a message appears, follow the instructions on the screen.

Windows XP

If using Windows XP, follow the instructions on the screen and continue the installation.

- 6-1. If a dialog box that asks whether you want to connect to Windows Update appears, select the [No, not this time] button and click the [Next] button.
- 6-2. Select the [Install the software automatically (Recommended)] button and click the [Next] button.
- 6-3. If the “Hardware Installation” dialog box appears, click the [Continue Anyway] button.
- 6-4. When “Completing the Found New Hardware Wizard” appears, click the [Finish] button.



7. When “Installation has been completed.” appears, click the [Close] button to close the “DUO-CAPTURE EX Driver Setup” dialog box.


The installer exits.

MEMO

If the “Change System Settings” dialog box appears, click the [Yes] button. Windows restarts.

Install the USB Driver (Mac OS X)

1. Set the DUO-CAPTURE EX's [COMPUTER/TAB] switch to "COMPUTER" ("44.1" or "48").
2. Start up the computer without the DUO-CAPTURE EX connected.
Exit all applications that are running.
3. Insert the included "DUO-CAPTURE EX Driver CD-ROM" into the CD-ROM drive.
4. Double-click the [DuoCaptureEX_USBDriver] icon in the [MacDriver] folder on the CD-ROM.
The installer starts.
If a dialog box requesting a password appears during installation, enter a computer administrator's user name and password and click the [Install Software] button or [OK] button.
5. Follow the instructions on the screen and install the software.
 - 5-1. When "Welcome to the DUO-CAPTURE EX Driver installer" appears, click the [Continue] button.
 - 5-2. If the screen for selecting the installation destination appears, select the startup disk and click the [Continue] button.
 - 5-3. When the installation type appears, click the [Install] button or [Upgrade] button.
 - 5-4. Click the [Continue Installation] button in the next screen.
 - 5-5. When installation has finished, click the [Restart] button.
6. After the computer starts up, connect the DUO-CAPTURE EX to the computer using the USB cable and set the [POWER] switch to the "on" position.

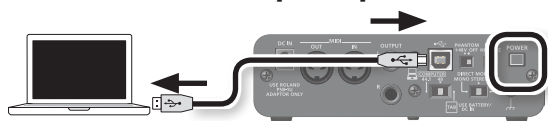


MEMO

Refer to "Mac OS X MIDI Settings" (p. 26) if you intend to use MIDI.

Confirm that Sound Can Be Heard

Configure the computer so that audio played from a program that uses the computer's audio features, such as Windows Media Player or iTunes, can be heard.

1. Connect the headphones or amplified speakers as shown in the figure.

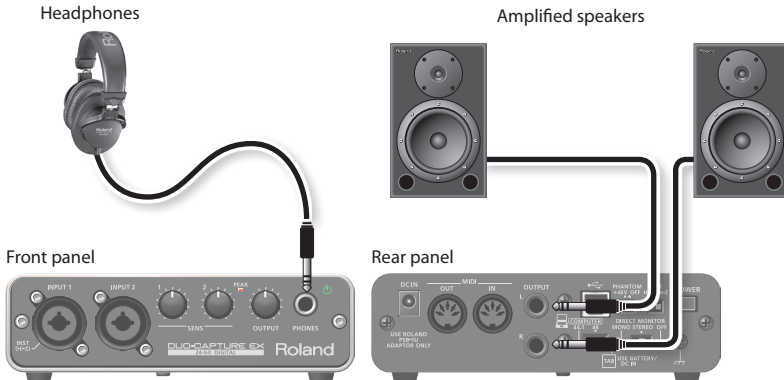

* To prevent malfunction and equipment failure, always turn down the volume and turn off all devices (except the computer) before making any connections.

2. Use the following procedure to select the DUO-CAPTURE EX as the system audio output device.

Windows 7/Windows Vista

- 2-1. Open the "Control Panel," click the [Hardware and Sound] icon , and then click the [Sound] icon. If you have selected Icon view or Classic view, double-click the [Sound] icon.
- 2-2. Click the [Playback] tab, select the DUO-CAPTURE EX's [OUT], and then click the [Set Default] button.
- 2-3. Click the [OK] button.

USB Driver Installation

Windows XP

- 2-1. Open the "Control Panel," click the [Sounds, Speech, and Audio Devices] icon, and then double-click the [Sounds and Audio Devices] icon. If you have selected Classic view, double-click the [Sounds and Audio Devices] icon.
- 2-2. Click the [Audio] tab and select [OUT (DUO-CAPTURE EX)] in the [Sound playback] area. When connecting the external MIDI sound module, select [DUO-CAPTURE EX] in the [MIDI music playback] area.
- 2-3. Click the [OK] button.

Mac OS X

- 2-1. Open "System Preferences" and click the [Sound] icon.
- 2-2. Click the [Output] tab and select [DUO-CAPTURE EX 44.1 kHz] or [DUO-CAPTURE EX 48 kHz].
- 2-3. When you have finished making these settings, quit "System Preferences."
3. **Open the folder named [Sample] on the included CD-ROM, and copy the file "TTears (.mp3)" to the desktop.**
4. **Double-click the file "TTears (.mp3)" that you copied to the desktop.**
Windows Media Player or iTunes starts.
Click the playback button to play the sample file.

MEMO

- The software that starts and is used to play the sample file may vary depending on your computing environment. If different software starts, play the sample file as described in the owner's manual for the software you are using.
- If you cannot select "DUO-CAPTURE EX" in step 2-2, refer to "Using the DUO-CAPTURE EX" (p. 21).
- If the DUO-CAPTURE EX is selected as the output device, the computer's audio alerts will be played using the DUO-CAPTURE EX; they will not be heard from the computer's speakers.

Connections and Settings

This section explains how to connect and configure the DUO-CAPTURE EX.

Refer also to the block diagram at the end of this document.

Precautions Concerning the Use of DAW Software

- **When installing DAW software (Cakewalk SONAR LE), make sure you register the software.**
For details, refer to the “Install Guide” included with Cakewalk SONAR LE.
- Connect the DUO-CAPTURE EX to the computer before starting the DAW software.
- Do not disconnect the DUO-CAPTURE EX from the computer while the DAW software is running. After exiting the DAW software, disconnect the DUO-CAPTURE EX.
- Select the DUO-CAPTURE EX for the DAW software’s audio device setting.

Input and Output Device Settings

Configure the settings necessary to use the DAW software to play audio and MIDI, and to record audio.

Select the DUO-CAPTURE EX as the audio and MIDI input device, and as the output device. For details about settings, refer to the documentation for your software.

Audio Input Device/Audio Output Device

Device name	MME, WDM/KS	ASIO	Core Audio	44.1 kHz, 48 kHz
DUO-CAPTURE EX *	IN (DUO-CAPTURE EX)/OUT (DUO-CAPTURE EX)	IN/OUT	1, 2	✓

* When using Mac OS X, the sampling frequency is displayed after the device name.


MIDI Input Device/MIDI Output Device

Device name
DUO-CAPTURE EX

Playing Back


Connect the DUO-CAPTURE EX to the computer using the USB cable. By connecting headphones or amplified speakers as shown in the illustration, you can monitor the playback from your DAW software or the sound from an instrument or audio device connected to the DUO-CAPTURE EX.

- * To prevent malfunction and equipment failure, always turn down the volume and turn all devices (except the computer) off before making any connections.

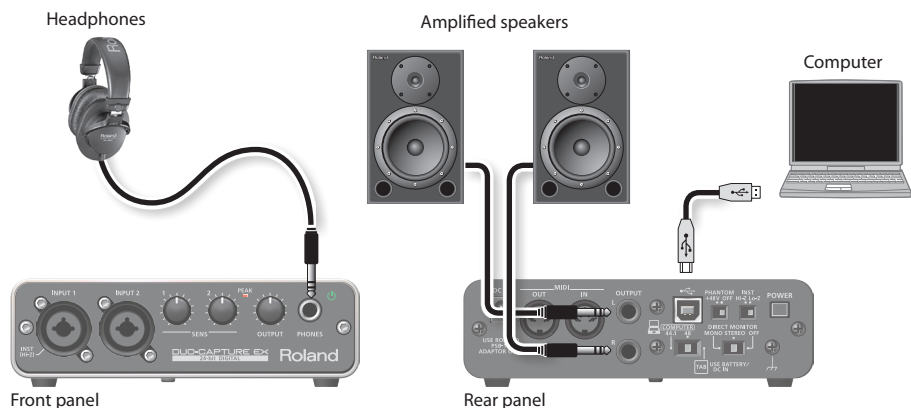

Recording

You can use your DAW software to record audio from the INPUT 1 jack and INPUT 2 jack. When a device is connected to the INPUT 1 jack or to the INPUT 2 jack, set the [PHANTOM] switch (p. 9) and the [INST] switch (p. 9) accordingly.

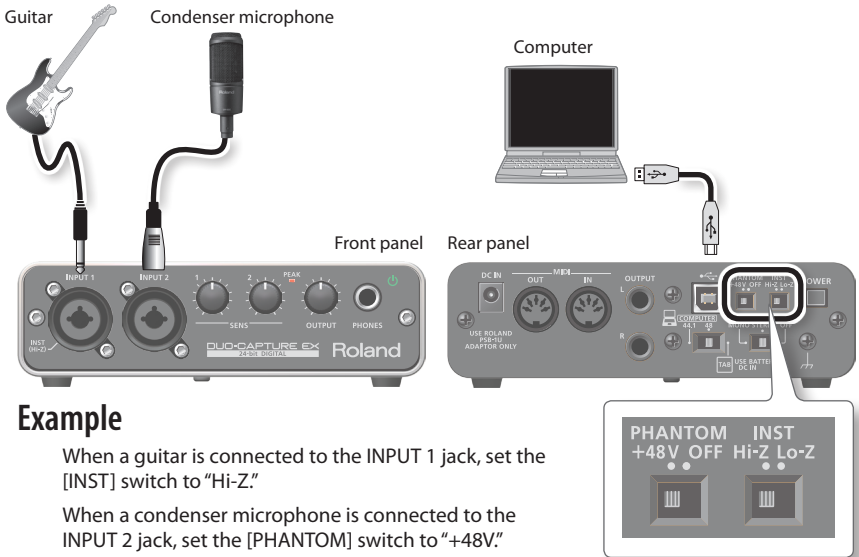

Example


When a guitar is connected to the INPUT 1 jack, set the [INST] switch to "Hi-Z."

When a condenser microphone is connected to the INPUT 2 jack, set the [PHANTOM] switch to "+48V."

- * To prevent malfunction and equipment failure, always turn down the volume and turn off all devices (except the computer) before making any connections.
- * Acoustical feedback (howling) could be produced depending on the location of microphones relative to speakers. This can be remedied by:
 - Changing the orientation of the microphone(s).
 - Relocating microphone(s) at a greater distance from speakers.
 - Lowering volume levels.

Adjusting the Input Level

Use the [SENS 1] knob and the [SENS 2] knob to adjust the input level so that the PEAK indicator does not light.

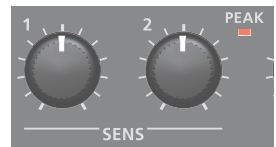

Appendix

Troubleshooting

If you experience problems, read this chapter first. It contains tips for solving most problems. Additional information is available in the "Win (Mac) Driver/Readme.htm" file on the DUO-CAPTURE EX Driver CD-ROM.

If this chapter doesn't help you solve a problem, please refer to the support section of our website. If the problem is not resolved, refer to the contact information (p. 45) and contact the nearest Roland Service center or an authorized Roland distributor.

Roland support website: <http://www.roland.com/support/>

USB Driver Installation

Problem	Items to Check	Action
The installer does not start	Are you attempting to install from a networked DVD-ROM drive?	You cannot install from a networked DVD-ROM drive.
The USB driver does not install	Are you logged on with a user account that does not have administrator privileges?	Log on to the computer with a user account that has administrator privileges. For details, consult the administrator for your computer system.
	Windows XP Is the "Driver Signing Options" setting set to [Block]?	Change the "Driver Signing Options" setting. Refer to the "Win (Mac) Driver/Readme.htm" file on the DUO-CAPTURE EX Driver CD-ROM.
	Are other programs or resident programs (such as antivirus programs) running?	Be sure to exit all other programs before installation.
Windows A warning or error appears during installation	In the "Device Manager," do you see "Other device," "Unknown device," or a device for which "?", "!", or "x" is displayed?	Reinstall the USB driver (p. 12).
The installer does not exit	Is your computer running on battery power?	Connect the power cord to the computer.
	Is the DUO-CAPTURE EX connected to a bus-powered USB hub?	Use a USB hub that connects to a power supply.
	Is the [COMPUTER/TAB] switch set to "TAB"?	Set the [COMPUTER/TAB] switch to "COMPUTER" ("44.1" or "48").

Problem	Items to Check	Action
Windows XP The “Found New Hardware Wizard” appears again after the USB driver is installed	Did you connect the DUO-CAPTURE EX to a different USB port of the computer than the one you used when installing the driver?	If you change the USB port to which the DUO-CAPTURE EX is connected, the “Found New Hardware Wizard” may appear again even if the USB driver has already been installed on the computer. Follow step 6-1 of the USB driver installation procedure (p. 13) and install the USB driver.
Windows 7/ Windows Vista A numeral such as “2-” appears at beginning of the device name	Did you connect the DUO-CAPTURE EX to a different USB port of the computer than the one you used when installing the driver?	If you connect the DUO-CAPTURE EX to a different USB port of the computer than the one you used when installing the USB driver, a numeral may appear with the device name. To have the device name appear without the numeral, connect the DUO-CAPTURE EX to the same USB port used during installation, or reinstall the USB driver (p. 12).

Using the DUO-CAPTURE EX

Problem	Items to Check	Action
I cannot select or use the DUO-CAPTURE EX device	Is the DUO-CAPTURE EX’s power indicator off?	Make sure that the DUO-CAPTURE EX is connected to the computer correctly. If that does not resolve the issue, reinstall the USB driver (p. 12).
	Is the [COMPUTER/TAB] switch set to “TAB”?	Set the [COMPUTER/TAB] switch to “COMPUTER” (“44.1” or “48”).
	Are there batteries installed in the DUO-CAPTURE EX? Is power being supplied from the AC adaptor?	If the [COMPUTER/TAB] switch is set to [TAB], insert batteries or use an optional AC adaptor (p. 8, p. 9, p. 11).
	Is the DUO-CAPTURE EX’s device name displayed?	Exit all programs that are using the DUO-CAPTURE EX, turn it off, and then turn it on again.
	Is another program using the DUO-CAPTURE EX?	If that does not resolve the issue, reinstall the USB driver (p. 12).
	Did the computer enter standby (suspend) mode, hibernate mode, or sleep mode while the DUO-CAPTURE EX was connected?	Exit all programs that are using the DUO-CAPTURE EX, turn it off, and then turn it on again.
	Did you disconnect and reconnect the USB cable while using the DUO-CAPTURE EX?	If that does not resolve the issue, restart the computer.
	Was the DUO-CAPTURE EX connected to the computer while the computer was starting up?	Connect the DUO-CAPTURE EX after the computer has started up. With some computers, the DUO-CAPTURE EX cannot be used if it is connected to the computer while the computer is starting up.

Appendix

Problem	Items to Check	Action
I cannot select or use the DUO-CAPTURE EX device	Windows 7/Windows Vista Are you using the Media Player included with Windows?	Use different software. MIDI devices cannot be selected in Media Player.
	Mac OS X Have you configured "Audio MIDI Setup"?	Configure Audio MIDI Setup (p. 26).
No sound is heard from the computer's speakers	This is not a malfunction.	When using the DUO-CAPTURE EX, no sound is heard from the computer's speakers. Connect headphones or an audio playback system (external monitors) to the DUO-CAPTURE EX.
The sound played by the computer is inaudible or too quiet	Can you hear sound by connecting headphones?	If you can hear sound through headphones connected to the PHONES jack, check that you have correctly connected your audio playback system (external monitors), and adjust the volume of our equipment. If the sound in your headphones is inaudible or too soft, check the other troubleshooting items.
	Is the [OUTPUT] knob of the DUO-CAPTURE EX turned down?	Use the DUO-CAPTURE EX's [OUTPUT] knob to adjust the volume.
	Is the computer's volume setting turned down?	Adjust the computer's volume setting (p.28).
	Windows 7 Are you using voice communication software?	Disable automatic volume adjustment (p. 30).
My guitar is too quiet	Are you using the correct jack?	Connect your guitar to the INPUT 1 jack (p. 6).
	Is the [INST] switch set to "Lo-Z"?	Set the [INST] switch to "Hi-Z" (p. 9).
	Is the input level too low?	Use the [SENS 1] knob to adjust the input level (p. 7).
	Could you be using a connection cable that contains a resistor?	Use a connection cable that does not contain a resistor.
My microphone is too quiet	Are you using the correct jack?	Connect your microphone with an XLR connector to the XLR connector (INPUT 1, INPUT 2 jack) (p. 6). The sound level will be very low if you use a microphone with a phone plug.

Problem	Items to Check	Action
My microphone is too quiet	Does the sensitivity of the microphone match the input level of the DUO-CAPTURE EX?	The DUO-CAPTURE EX's microphone input level is -60 dBu for the XLR connector, and -46 dBu for the TRS phone type jack. If the sensitivity of the microphone is low, the sound will be quiet.
When a signal is input via either the INPUT 1 or INPUT 2 jack only, only one channel is recorded	Is the DAW software configured to record in stereo? If so, the signal input via the INPUT 1 jack is recorded on the left channel, and the signal input via the INPUT 2 jack is recorded on the right channel.	Change the DAW software's settings so that it records in monaural.
A device connected to one of the input jacks is distorting	Is the PEAK indicator lit?	Turn the [SENS 1] or [SENS 2] knob toward the left to reduce the input level (p. 7).
Sound is interrupted during playback or recording	Are multiple programs running?	Exit programs that are not in use.
	Did you adjust the software's audio buffer size?	If the software allows you to adjust the audio buffer size, change the buffer size. Refer to the documentation for your software.
	Did you adjust the USB driver's audio buffer size?	Increase the USB driver's audio buffer size (p. 31).
	Mac OS X Have you adjusted the "Recording Margin" setting?	If audio drops out or if noise is heard even if you have adjusted the audio buffer size, increase the "Recording Margin" setting (p. 32).
	Windows Is the system software up to date?	Run Windows Update or Microsoft Update and make sure the system software is up to date.
	Mac OS X Have you updated the software?	Run Software Update and make sure the system software is up to date.
	Are the USB drivers for the computer's internal chipset and graphics card up to date?	Update to the latest USB drivers.
	Are the drivers for the computer's LAN hardware (wired and wireless) up to date?	Install the latest LAN hardware drivers. If the problem is not resolved, disable the LAN.

Appendix

Problem	Items to Check	Action
Sound is interrupted during playback or recording	Windows Is the power management setting in Windows set to economy mode?	Refer to the "Win (Mac) Driver/Readme.htm" file on the DUO-CAPTURE EX Driver CD-ROM.
	Windows Have you set the system's "Performance" setting?	
	Is the DUO-CAPTURE EX connected to a USB hub?	Connect the DUO-CAPTURE EX directly to one of the computer's USB ports.
	Are you using the included USB cable?	You must use the included USB cable. Some commercially available USB cables do not meet the requirements of the USB standard, and this may prevent the DUO-CAPTURE EX from operating correctly.
	Windows 7 Is the monitoring function of Windows turned on?	Turn off the monitoring function (p. 30).
	Did you try to play back or record immediately after the computer started up or after waking up from sleep mode?	Wait and try playing back or recording later.
Noise or distortion occurs elsewhere than in the playback from my computer	Is a guitar connected?	Move as far away from the computer as possible. If the noise decreases when you lower your guitar's volume, it may be that your guitar's pickups are being affected by noise from your computer or display.
	Could you have left an unused microphone or guitar connected?	Disconnect the unused microphone or guitar, and turn the [SENS 1] and [SENS 2] knobs fully to the left in order to lower the input level.
	Could the MIDI sound module and the DUO-CAPTURE EX be connected to your computer, and the output of the MIDI sound module be connected to the INPUT 1 or INPUT 2 jack of the DUO-CAPTURE EX?	Connect the MIDI sound module and the DUO-CAPTURE EX to a USB hub that connects to a power supply.
	Have you connected the ground terminal?	You may be able to solve the problem by grounding a metal component of your computer or the ground pin of our computer's AC adaptor. Also check whether there might be a device nearby that is emitting a strong electromagnetic field, such as a television or microwave oven.

Problem	Items to Check	Action
Recordings are too loud or too quiet	Is the input level appropriate?	Use the [SENS 1] or [SENS 2] knob to adjust the input level of the DUO-CAPTURE EX. If your software has an input level adjustment, check the input level setting.
	Does the sensitivity of the microphone match the input level of the DUO-CAPTURE EX?	The DUO-CAPTURE EX's microphone input level is -60 dBu for the XLR connector, and -46 dBu for the TRS phone type jack. If the sensitivity of the microphone is low, the sound will be soft.
I cannot play back or record	Are the software's input device and output device configured?	Select the DUO-CAPTURE EX as the input and output device (p. 17).
	Is the DUO-CAPTURE EX's power indicator off?	Make sure that the DUO-CAPTURE EX is connected to the computer correctly. If that does not resolve the issue, reinstall the USB driver (p. 12).
I cannot play back or record	Is the computer's volume setting turned down?	Adjust the computer's volume setting (p.28).
	Windows 7 Are you using voice communication software?	Disable automatic volume adjustment (p. 30).
	Is the size of the USB driver's audio buffer too small?	Increase the size of the buffer (p. 31).
I cannot play back or record 24-bit audio data	Does your software support 24-bit audio data?	Check whether your software supports playback and recording of 24-bit audio data.
	Is the software set correctly?	Make sure that your software is set to play and record 24-bit audio data.

Mac OS X MIDI Settings

Here's how to configure the MIDI settings for Mac OS X.

1. In the Mac OS X Finder, open the [Applications] folder and then the [Utilities] folder, and then double-click [Audio MIDI Setup].
2. Use the following procedure to display the "MIDI Studio" window or the "Audio MIDI Setup" window.

Mac OS X 10.6 or later

- 2-1. Click [Show MIDI Window] in the [Window] menu.

Mac OS X 10.5 or earlier

- 2-1. Click the [MIDI Devices] tab.

3. Confirm that [DUO-CAPTURE EX] appears in the "MIDI Studio" window or the "Audio MIDI Setup" dialog box.

If [DUO-CAPTURE EX] does not appear or if it is grayed out, it means that the DUO-CAPTURE EX is not being detected properly.

In this case, click the [Rescan MIDI] icon. Also, try turning the DUO-CAPTURE EX off and then on again.

4. Click the [Add Device] icon once.


One [new external device] icon will appear.

5. Click the added [new external device] icon and then click the [Show Info] icon.

6. Enter "DUO-CAPTURE EX" in the [Device Name] field and then click the [Apply] button.

7. Using your mouse, drag and connect the [▼] [▲] buttons (which represent the input/output ports of each device) of the existing [DUO-CAPTURE EX] and the newly added [DUO-CAPTURE EX] so that they are connected as shown in the figure.



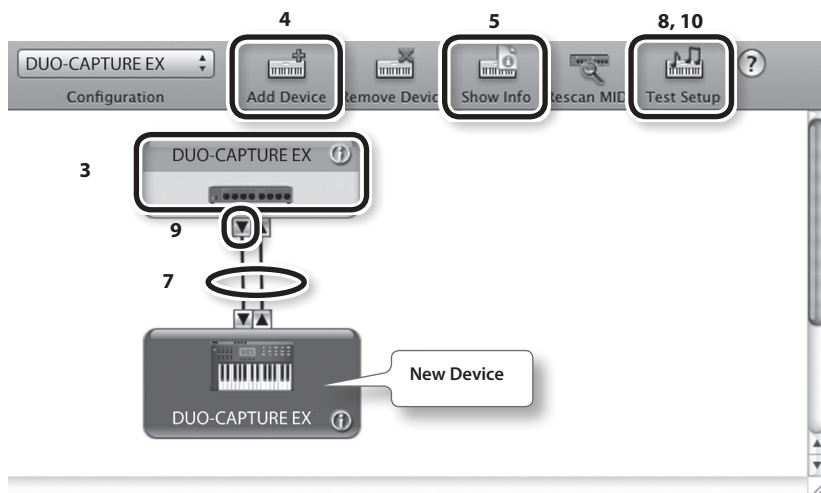

8. Click the [Test Setup] icon.

The [Test Setup] icon turns on (blue).

MEMO

If you have a sound module connected to the DUO-CAPTURE EX's MIDI OUT connector, a fairly loud sound will be heard when you perform the next step. Reduce the volume of your sound module before continuing.

9. Click the DUO-CAPTURE EX's [▼] button.

A confirmation sound is played from the sound module.

10. Click the [Test Setup] icon.

The [Test Setup] icon turns off (gray).

11. Close the "MIDI Studio" window or the "Audio MIDI Setup" window.

Changing Computer Settings to Avoid Problems

This section explains how to solve problems discussed in “USB Driver Installation” (p. 20) and “Using the DUO-CAPTURE EX” (p. 21).

For details about configuring your operating system’s settings or deleting the USB driver, refer to the “Win (Mac) Driver/Readme.htm” file on the DUO-CAPTURE EX Driver CD-ROM.

Setting the System Volume

If the playback volume is too loud or too low, try adjusting the system volume.

Windows 7

1. Open the “Control Panel” and set the display mode to “Category.”
2. Click the [Hardware and Sound] tab, and then click the [Adjust system volume] icon.
3. After the volume mixer appears, select the DUO-CAPTURE EX’s [OUT (DUO-CAPTURE EX)] from the “Device” menu and adjust the volume.

Windows Vista

1. Open the “Control Panel” and click the [Hardware and Sound] icon.
If you have selected Classic view, click [Control Panel Home] to exit Classic view.
2. Click the [Adjust system volume] icon in “Sound.”
3. After the volume mixer appears, select [OUT (DUO-CAPTURE EX)] from the “Device” menu and adjust the volume.
If [Mute] is set to “On,” click [Mute] to set it to “Off.”

Windows XP

1. Open the “Control Panel,” click the [Sounds, Speech, and Audio Devices] icon, and then click the [Sounds and Audio Devices] icon.
If you have selected Classic view, double-click the [Sounds and Audio Devices] icon.
2. Click the [Audio] tab.
3. In the “Sound playback” area, make sure that [OUT (DUO-CAPTURE EX)] is selected as the “Default device,” and click the [Volume] button.
4. When the volume control appears, adjust the “Wave” volume.
If the mute check box is selected, clear the check box.

Mac OS X

1. Open “System Preferences” and click the [Sound] icon.
2. Click the [Output] tab.
3. In the “Select a device for sound output” area, make sure that [DUO-CAPTURE EX 44.1kHz] or [DUO-CAPTURE EX 48kHz] is selected and use the “Output volume” slider to adjust the volume.
If the mute check box is selected, clear the check box.

Voice Communication Software Settings

Windows 7

If you are using voice communication software, the volume of the audio device may be adjusted automatically to suit the characteristics of the conversation.

Use the following procedure to disable automatic volume adjustment.

1. Open the “Control Panel,” click the [Hardware and Sound] icon, and then click the [Sound] icon.

If you have selected Icon view, click the [Sound].

2. In the [Communications] tab, set “When Windows detects communications activity” to [Do nothing].
3. Click the [OK] button to close the “Sound” window.

Monitoring Function Settings

Windows 7

If the monitoring function of Windows is enabled, the input sound may be doubled (each sound is repeated) or feedback may be heard.

Use the following procedure to disable the monitoring function of Windows.

1. Open the “Control Panel,” click the [Hardware and Sound] icon, and then click the [Sound] icon.
If you have selected Icon view, click the [Sound] icon.
2. In the “Recording” area, click the DUO-CAPTURE EX’s [IN (DUO-CAPTURE EX)], and then click the [Properties] button.
3. Open the “Listen” tab and clear the [Listen to this device] check box.
4. Click the [OK] button to close the “Properties” window.
5. Click the [OK] button to close the “Sound” window.

Advanced USB Driver Settings

You can set the input and output audio buffer size settings.

Windows

When using Windows 7, USB driver settings cannot be changed while the monitoring function of Windows is enabled. Turn off the monitoring function (p. 30).

1. Exit all programs that are using the DUO-CAPTURE EX.
2. Open the “Control Panel” and set the display mode as follows.
 - **Windows 7** : Icon view
 - **Windows Vista/Windows XP** : Classic view
3. Double-click the DUO-CAPTURE EX icon.

The “DUO-CAPTURE EX Driver Settings” dialog box appears.

Setting	Explanation
Audio Buffer Size	<p>You can adjust the input and output audio buffer size.</p> <p>Decrease the buffer size to decrease latency. Increase the buffer size if audio drops out.</p> <p>* After adjusting the buffer size, make sure to restart all programs that are using the DUO-CAPTURE EX. If using software that has an “audio device test” function, run the test function.</p>
[Show “README”]	Displays the online manual for the USB driver.

Appendix

Mac OS X

1. Open “System Preferences” and click the [DUO-CAPTURE EX] icon.

The “Driver Settings” panel appears.

Setting	Explanation
Audio Buffer Size	<p>You can adjust the USB driver’s input and output audio buffer size.</p> <p>Decrease the buffer size to decrease latency. Increase the buffer size if audio drops out.</p> <p>* After adjusting the buffer size, make sure to restart all programs that are using the DUO-CAPTURE EX. If using software that has an “audio device test” function, run the test function.</p>
Recording Margin	<p>If audio drops out or if noise is heard even if you have adjusted the buffer size setting in the software and adjusted the “Audio Buffer Size” as explained above, increase the recording margin setting.</p>
Recording Timing	<p>Adjust this setting if the timing of the recorded audio data is off.</p> <p>* If the audio software is running, the new setting will not be applied immediately when the [Apply] button is clicked. Quit all audio software; the new setting will be applied the next time you start the software.</p>

Main Specifications

Roland DUO-CAPTURE EX UA-22: USB Audio Interface

Number of Audio Recording/ Playback Channels	Recording: 2 channels Playback: 2 channels	
Signal Processing	PC interface: 24 bits	
	AD/DA Conversion: 24 bits	
Sampling Frequency	AD/DA Conversion: 48 kHz, 44.1 kHz	
Nominal Input Level	INPUT 1, 2 (XLR type): -60– -12 dBu	
	INPUT 1, 2 (1/4-inch TRS phone type): -46–+2 dBu	
Nominal Output Level	OUTPUT L, R	-6 dBu (balanced)
Headroom	14 dB	
Input Impedance	INPUT 1, 2 (XLR type): 4 k Ω (balanced)	
	INPUT 1, 2 (1/4-inch TRS phone type): 34 k Ω (balanced)	
Output Impedance	OUTPUT L, R	2 k Ω (balanced)
	PHONES	47 Ω
Frequency Response	48.0 kHz	20 Hz–22 kHz (+0/-2 dB)
	44.1 kHz	20 Hz–20 kHz (+0/-2 dB)
Residual Noise Level	INPUT 1, 2 → OUTPUT L, R: -94 dBu typ. ([SENS 1], [SENS 2] knobs: min., 600 Ω terminated, IHF-A)	
Connectors	INPUT 1, 2 jacks	XLR type, balanced Phantom power: DC 48 V (unloaded max.), 6 mA (max. load) * Combined value for INPUT 1, 2 jacks
		1/4-inch TRS phone type, balanced * INPUT 1 jack supports high impedance
	PHONES jack (stereo 1/4-inch phone type)	
	OUTPUT L, R jacks (1/4-inch TRS (balanced) phone type)	
	MIDI OUT, IN connectors	
	USB port (Type B)	
	DC IN jack	

Appendix

Power Supply	[COMPUTER/TAB] switch = COMPUTER (44.1, 48)	USB bus power
		Alkaline battery or rechargeable Ni-MH battery (AA, LR6) ×3
	[COMPUTER/TAB] switch = TAB	AC adaptor (Sold separately)
		Alkaline battery or rechargeable Ni-MH battery (AA, LR6) ×3
Current Draw	240 mA	
Expected Battery Life Under Continuous Use [COMPUTER/TAB] switch = TAB (These figures will vary depending on the specifications of the batteries and the actual conditions of use.)	Alkaline batteries	Approximately 1.5 hours (Phantom power = ON)
		Approximately 4 hours (Phantom power = OFF)
	Rechargeable Ni-MH batteries	Approximately 3 hours (Phantom power = ON)
		Approximately 6 hours (Phantom power = OFF)
Dimensions	153 (W) x 119 (D) x 47 (H) mm	
	6-1/16 (W) x 4-11/16 (D) x 1-7/8 (H) inches	
Weight (excluding batteries)	460 g	
	1 lb 1 oz	
Accessories	Owner's Manual Read Me First License Agreement DUO-CAPTURE EX Driver CD-ROM Cakewalk SONAR LE DVD-ROM (Windows) USB cable Alkaline battery (AA, LR6) ×3	
Options (Sold separately)	AC adaptor (PSB-1U) * When purchasing an AC adaptor, be sure to specify the adaptor (from the list that follows) that is designed for the region in which it will be used, and the voltage supplied there. (PSB-120/PSB-230EU/PSB-230UK/PSB-240A)	

* 0 dBu = 0.775 Vrms

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

MEMO

.....

MEMO

.....

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

Do not disassemble or modify by yourself

Do not open (or modify in any way) the unit or its AC adaptor.



Do not repair or replace parts by yourself

Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.



Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Humid; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.



WARNING

Do not place in an unstable location

Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.



Use only the specified AC adaptor and the correct voltage

Use only the specified AC adaptor (PSB-1U), and make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.



Use only the included power cord

Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.



Do not bend the power cord or place heavy objects on it

Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!



USING THE UNIT SAFELY

WARNING

Avoid extended use at high volume

This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.



Don't allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Never allow foreign objects (e.g., flammable objects, coins, or wires) or liquids (e.g., water or juice) to enter this product. Do not place containers containing liquid on this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



Turn off the unit if an abnormality or malfunction occurs

Immediately turn the unit off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:



- The AC adaptor, the power-supply cord, or the plug has been damaged; or
- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

Adults must provide supervision in places where children are present

When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.



WARNING

Do not drop or subject to strong impact

Protect the unit from strong impact. (Do not drop it!)



Do not share an outlet with an unreasonable number of other devices

Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.



Do not use overseas

Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.



Handle batteries carefully

Batteries must never be recharged, heated, taken apart, or thrown into fire or water.



Never expose batteries to excessive heat such as sunshine, fire or the like.



Incorrect handling of batteries, rechargeable batteries, or a battery charger can cause leakage, overheating, fire, or explosion. Before use, you must read and strictly observe all of the precautions that accompany the batteries, rechargeable batteries, or battery charger.



Do not use a CD-ROM or DVD-ROM in an audio CD player

DO NOT play a CD-ROM or DVD-ROM disc on a conventional audio CD player. The resulting sound may be of a level that could cause permanent hearing loss. Damage to speakers or other system components may result.



CAUTION

Place in a well ventilated location

The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.



Grasp the plug when connecting or disconnecting the AC adaptor

Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit.



Periodically clean the AC adaptor's plug

At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.



Manage cables for safety

Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.



Avoid climbing on top of the unit, or placing heavy objects on it

Never climb on top of, nor place heavy objects on the unit.



Do not connect or disconnect the AC adaptor with wet hands

Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit.



Disconnect everything before moving the unit

Before moving the unit, disconnect the AC adaptor and all cords coming from external devices.



CAUTION

Unplug the AC adaptor from the outlet before cleaning

Before cleaning the unit, disconnect the AC adaptor (p. 8) and all cords coming from external devices.



If there is a possibility of lightning strike, disconnect the AC adaptor from the outlet

Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet.



Handle batteries carefully

If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions (p. 11).



- Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity.
- Avoid using new batteries together with used ones. In addition, avoid mixing different types of batteries.
- Remove the batteries whenever the unit is to remain unused for an extended period of time.
- Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.
- Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live.



USING THE UNIT SAFELY



CAUTION

Handle the ground terminal carefully

If you remove the screw from the ground terminal, be sure to replace it; don't leave it lying around where it could accidentally be swallowed by small children. When refastening the screw, make that it is firmly fastened, so it won't come loose.



Precautions concerning use of phantom power supply

Unless condenser microphones requiring phantom power are connected to the XLR connectors, you must leave the phantom power turned off. Supplying phantom power to a dynamic microphone or to an audio playback device may cause malfunctions. For details on the requirements of your microphone, refer to its owner's manual.



(The DUO-CAPTURE EX's phantom power supply is DC 48 V, 6 mA for INPUT 1 and INPUT 2 combined.)

Handle leaking batteries carefully

- If fluid has leaked from a battery, make sure not to touch it with your bare hands.
- If any of the leaking fluid gets into your eyes, the loss of vision may result. Do not rub your eyes; use clean water to flush them thoroughly. Then, promptly see a doctor.
- Burning of the skin or dermatitis may result if fluid has gotten onto your skin or clothing. Use clean water to flush affected areas thoroughly; then, promptly see a doctor.
- Using a soft cloth, carefully wipe any remaining fluid from the inside of the battery compartment. Then, install new batteries.



IMPORTANT NOTES

Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine, microwave oven, or air conditioner). Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- To prevent malfunction and equipment failure, always make sure to turn off the power on all your equipment before you make any connections.
- When using the optional AC adaptor, the DUO-CAPTURE EX will automatically be switched off after 10 consecutive hours of no communication with the computer. After the power is automatically switched off, turn the power off and then on if you want to use the DUO-CAPTURE EX again.

Power Supply: Use of Batteries

- When installing or replacing batteries, always turn this unit off and disconnect any other devices you may have connected. This way, you can prevent malfunction and damage.
- The life of the supplied batteries may be limited, since its primary purpose was to enable testing.
- When operating this unit using batteries, please use alkaline batteries or rechargeable Ni-MH batteries.
- This unit will not operate using batteries or bus power unless the AC adaptor is disconnected.
- Even if batteries are installed, the unit will turn off if you connect or disconnect the power cord from the AC outlet while the unit is turned on, or if you connect or disconnect the AC adaptor from the unit. You must turn off the power before you connect or disconnect the power cord or AC adaptor.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface. You can place a piece of felt or cloth under the rubber feet to prevent this from happening. If you do so, please make sure that the unit will not slip or move accidentally.
- Do not put anything that contains water on this unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

IMPORTANT NOTES

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing others nearby, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.

Handling CDs / DVDs

- Avoid touching or scratching the shiny underside (encoded surface) of the disc. Damaged or dirty CD/DVD discs may not be read properly. Keep your discs clean using a commercially available CD/DVD cleaner.

Grounding

- Depending on the circumstances of a particular setup, you may experience a discomforting sensation, or perceive that the surface feels gritty to the touch when you touch this device, microphones connected to it, or the metal portions of other objects, such as guitars. This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect the ground terminal (see figure) with an external ground. When the unit is grounded, a slight hum may occur, depending on the particulars of your installation. If you are unsure of the connection method, contact the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.



Unsuitable places for connection

- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

Copyrights, licenses, and trademarks

- Do not use this product for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this product.
- Before you open the included CD-ROM, you must read the "license agreement." Opening the CD-ROM will be taken to mean your acceptance of the license agreement.
- MMP (Moore Microprocessor Portfolio) refers to a patent portfolio concerned with microprocessor architecture, which was developed by Technology Properties Limited (TPL). Roland has licensed this technology from the TPL Group.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- Microsoft product screen shots reprinted with permission from Microsoft Corporation.
- Roland is an either registered trademark or trademark of Roland Corporation in the United States and/or other countries.
- Cakewalk and SONAR are either registered trademarks or trademarks of Cakewalk, Inc. or Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Index

A

- ASIO 17
- Audio MIDI Setup (Mac OS X) 26

B

- Battery case 11
- Buffer size 31

C

- COMPUTER/TAB switch 10
- Condenser microphone 9, 19
- Core Audio 17

D

- DAW 17
- DC IN 8
- [DIRECT MONITOR] switch 10, 48
- Driver
 - Advanced settings 31
 - Install 12
- Dynamic microphone 9

G

- Grounding 42

I

- INPUT 1, INPUT 2 jacks 6, 19
- Input device 17
- Input level 19
- Install
 - Driver 12
- [INST] switch 9

M

- MIDI IN, MIDI OUT connectors 8
- MME 17

O

- Output device 17
- [OUTPUT] knob 7
- OUTPUT L, OUTPUT R jacks 8

P

- PEAK indicators 7, 19
- Phantom power 9
- [PHANTOM] switch 9
- PHONES jack 7
- Power indicator 7
- [POWER] switch 9

R

- Record settings 19

S

- Sampling frequency 10, 33
- [SENS 1], [SENS 2] knobs 7

T

- TRS (balanced) phone type 8
- TRS phone type 8

U

- USB driver 12
 - Install 12
- USB port 8

W

- WDM 17

X

- XLR connector 9

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT

Al Fanny Trading Office
9, EBN Hagar Al Askalaney Street,
ARD E1 Golf, Heliopolis,
Cairo 11341, EGYPT
TEL: (022)-417-1828

REUNION

MARCEL FO-YAM Sarl
25 Rue Jules Herrand,
Chaudron - BP79 97 491
Ste Clotilde Cedex,
REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA

Paul Bothmer(PTY) Ltd.
Royal Cape Park, Unit 24
Londonderry Road, Ottery 7800
Cape Town, SOUTH AFRICA
TEL: (021) 799 4900

ASIA

CHINA

Roland Shanghai Electronics Co.,Ltd.
3F, No.1500 Pingliang Road
Shanghai 20099, CHINA
TEL: (021) 5580-0800

Roland Shanghai Electronics Co.,Ltd. (BEIJING OFFICE)

3F, Solute Future Building
63 West Dawang Road, Chaoyang
District, Beijing, CHINA
TEL: (010) 5960-2565

HONG KONG

Tom Lee Music
11/F Silvercord Tower 1
30 Canton Rd
Tsimshatsui, Kowloon,
HONG KONG
TEL: 852-2737-7688

Parsons Music Ltd.

8th Floor, Railway Plaza, 39
Chatham Road South, T.S.T.,
Kowloon, HONG KONG
TEL: 852-2333-1863

INDIA

Rivera Digitech (India) Pvt. Ltd.
411, Nirmam Kendra Mahalaxmi
Flats Compound Off. Dr. Edwin
Moses Road, Mumbai-400011,
INDIA
TEL: (022) 2493 9051

INDONESIA

PT. Citra Intrima
Ruko Garden Shopping Arcade
Unit 8 C/R, Podomoro City
Jl.Letjend. S.Parmam Kav28
Jakarta Barat 11470, INDONESIA
TEL: (021) 5698-5519/5520

KAZAKHSTAN

Alataut Dybystan
141 Abylai-Khan ave, 1st floor,
050000 Almaty, KAZAKHSTAN
TEL: (727) 2725477
FAX: (727) 2720730

KOREA

Cosmos Corporation
1461-9, Sechoo-Dong
Sechoo Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA/ SINGAPORE

Roland Asia Pacific Sdn. Bhd.
45-1, Block C2, Jalan PU 1/9,
Dataran Prima, 47301 Petaling
Jaya, Selangor, MALAYSIA
TEL: (03) 7805-3263

PHILIPPINES

G.A. Yupango & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

TAIWAN

ROLAND TAIWAN ENTERPRISE CO., LTD.
9F-5, No. 112 Chung Shan
North Road Sec. 2 Taipei 104,
TAIWAN R.O.C.
TEL: (02) 2561 3339

THAILAND

Theatra Music Co., Ltd.
100-108 Soi Verng Nakornkarn,
New Road,Sumpantawong,
Bangkok 10100, THAILAND
TEL: 242-8821

VIET NAM

VIET THUONG CORPORATION
386 CACH MANG THANG TAM ST.
DIST.3, HO CHI MINH CITY,
VIET NAM
TEL: (08) 9316540

OCEANIA

AUSTRALIA/ NEW ZEALAND

Roland Corporation Australia Pty., Ltd.
38 Campbell Avenue
Dee Why West. NSW 2099,
AUSTRALIA
For Australia
TEL: (02) 9982 8266
For New Zealand
TEL: (09) 3098 715

Roland Corporation New Zealand

TEL: (02) 9982 8266
For New Zealand
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA

Instrumentos Musicales S.A.
Av.Santa Fe 2055
(1123) Buenos Aires, ARGENTINA
TEL: (011) 4508-2700

BARBADOS

A&B Music Supplies LTD
12 Webster Industrial Park
Wildely, St.Michael, BARBADOS
TEL: (246) 430-1100

BRAZIL

Roland Brasil Ltda.
Rua San Jose, 211
Parque Industrial San Jose
Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

CHILE

Comercial Fanco II S.A.
RUT: 96.919.420-1
Natalien Cos #739, 4th Floor
Santiago - Centro, CHILE
TEL: (02) 384-2180

COLOMBIA

Cra 43 B No 25 A 41 Bododega 9
Medellin, COLOMBIA
TEL: (574) 3812529

COSTA RICA

JUAN Bansbach Instrumentos Musicales
Ave.1, Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: 258-0211

CURACAO

Zeelandia Music Center Inc.
Orionweg 30
Curacao, Netherland Antilles
TEL: (809) 5926866

DOMINICAN REPUBLIC

Instrumentos Fernando Giraldex
Calle Roberto Pastoriza #325
Sanchez Naco
Santo Domingo,
DOMINICAN REPUBLIC
TEL: (809) 683 0305

ECUADOR

Mas Musica
Rumichaca 822 y Zaruma
Guayaquil - ECUADOR
TEL: (593-4) 2302364

EL SALVADOR

ONINI MUSIC
75 Avenida Norte y Final Alameda
Juan Pablo II,
Edificio No.4010 San Salvador,
EL SALVADOR
TEL: 262-0788

GUATEMALA

Casa Instrumental
Calzada Roosevelt 34-01,zona 11
Ciudad de Guatemala,
GUATEMALA
TEL: (502) 599-2888

HONDURAS

Almacén Pajaro Azul S.A. de C.V.
BQ.Paz Barahona
3 Ave.1 Calle S.O.
San Pedro Sula, HONDURAS
TEL: (504) 553-2029

MARTINIQUE

Musique & Son
Z.I Les Manglie
97232 Le Lamentin,
MARTINIQUE FW.I.
TEL: 596 596 42860

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar
de los Padres 01780 Mexico D.F.,
MEXICO
TEL: (55) 5668-6699

NICARAGUA

Bansbach Instrumentos Musicales Nicaragua
Altamira D'Este Calle Principal
de la Farmacia Sta.Avenida
1 Cuadra al Lago #503
Managua, NICARAGUA
TEL: (505) 277-2557

PANAMA

SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY

Distribuidora De Instrumentos Musicales
J.E. Oteyar y ESQ. Manduvira
Asuncion, PARAGUAY
TEL: (595) 21 492147

PERU

Audionet Distribuciones Musicales SAC
Av. 2 de Mayo 562
Miraflores
Lima, PERU
TEL: (511) 447-0691

TRINIDAD

AMR Ltd
Ground Floor
Maritime Plaza
Barataria TRINIDAD W.I.
TEL: (868) 638 6385

URUGUAY

Todo Musica S.A.
Francisco Acuna de Figueroa
1771
C.P. 11.800
Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA

Instrumentos Musicales Allegro, C.A.
Aulas Industrias edf.Guitar import
#7 zona Industrial de Turumo
Caracas, VENEZUELA
TEL: (212) 244-1122

EUROPE

BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG

Rolandstraat Europe N.V.
Houtstraat 3, B-2260, Oevel
(Westerlo) BELGIUM
TEL: (014) 575811

BOSNIA AND HERZEGOVINA

Mix-AP Music
78000 Banja Luka, Veselina
Maslese 3,
BOSNIA AND HERZEGOVINA
TEL: 65 403 168

CROATIA

ART-CENTAR
Degenova 3,
HR - 10000 Zagreb, CROATIA
TEL: (1) 466 8493

CZECH REP.

CZECH REPUBLIC DISTRIBUTOR S.r.o
Pod Bani 8
190 00 Praha 8, CZECH REP.
TEL: 266 312 557

DENMARK/ESTONIA/ LATVIA/LITHUANIA

Roland Scandinavia A/S
Skagerakvej 7 Postbox 880
DK-2100 Copenhagen,
DENMARK
TEL: 39166222

FINLAND

Roland Scandinavia As, Finland Finland
Vanha Nummijarventie 62
01670 Vantaa, FINLAND
TEL: (0) 968 24 020

GERMANY/AUSTRIA

ROLAND Germany GmbH.
Adam-Opel-Strasse 4, 64569
Nauehm, GERMANY
TEL: 6152 95546-0

GREECE/CYPRUS

STOLLAS S.A.
Music Sound Light
155, New National Road
Piraeus 26442, GREECE
TEL: 2610 435400

HUNGARY/ROMANIA

Roland Este Europe Ltd.
2045, Törökbalint, FSD Park 3. ep.,
Budapest, HUNGARY
TEL: (23) 511 011

IRELAND

Roland Ireland
E2 Calmount Park, Calmount
Avenue, Dublin 12,
Republic of IRELAND
TEL: (01) 4294444

ITALY

Roland Italy S. p. a.
Viale delle Industrie 8,
20020 Arese, Milano, ITALY
TEL: 02 937-78300

MACEDONIA

MK MUJZIK
Aleksio Demniewski-Bauman 9-3,
1400 Velos, MACEDONIA
TEL: 70 264 458

MONTENEGRO

MAX-AP
Przno, Kamenovo bb., 86000
Budva, MONTENEGRO
TEL: 68 650 112

NORWAY

Roland Scandinavia Avd.
Kontor Norge
Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo,
NORWAY
TEL: 2723 0074

POLAND

ROLAND POLSKA SP. Z O.O.
ul. Kty Grodziskie 168
03-289 Warszawa, POLAND
TEL: (022) 678 9512

PORTUGAL

Roland Systems Group EMEA, S.L.
Branch Office Porto
Edificio Tower Plaza
Rotunda Eng. Edgar Cardoso 23,
4-8
4400-676 Vila Nova de Gaia,
PORTUGAL
TEL: (+351) 22 608 00 60

RUSSIA

Roland Music LLC
Dorozhnaya ul.3,korp.6
117 545 Moscow, RUSSIA
TEL: (495) 981-4967

SERBIA

Music AP
Surtejska br.5 X5 - 24413 PALIC,
SERBIA
TEL: (495) 981-4967

SLOVAKIA

DANASCOS s.r.o.
Pavazská 18,
SK - 940 01 Mové Zámky,
SLOVAKIA
TEL: (035) 6424 330

SPAIN

Roland Systems Group EMEA, S.L.
Pasaje Garsia Faria, 33-35
08005 Barcelona, SPAIN
TEL: 93 493 91 00

SWEDEN

Roland Scandinavia A/S SWEDISH SALES OFFICE
Märbackagatan 31, 4 tr.
SE-123 43 Farsta, SWEDEN
TEL: (0) 8 683 04 30

SWITZERLAND

Roland (Switzerland) AG
Landstrasse 5, Postfach,
CH-4452 Itingen, SWITZERLAND
TEL: (061) 975-9987

UKRAINE

EURHYTHMICS Ltd.
PO.Box: 37-a,
Nedecy Str. 30
UA - 89600 Mukachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

ROLAND (U.K.) Ltd.
Atlantic Close, SWANSEA SE7 9FJ,
UNITED KINGDOM
TEL: (01792) 702701

MIDDLE EAST

BAHRAIN

Moon Stores
No.12318/1249 Rumaytha
Building Road 3931,
Manama 339, BAHRAIN
TEL: 17 813 942

IRAN

MOCO INC.
Jadeh Makhsous Karaj (K-9),
Nakhe Zarin Ave.
Jalal Street, Reza Alley No.4
Tehran 1389716791, IRAN
TEL: (021)-44545370-5

ISRAEL

Halilit P. Greenspoon & Sons Ltd.
8 Retzif Ha'alaya Hashnita St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN

MUSIC HOUSE CO. LTD.
P. FREDDY FOR MUSIC
P. O. Box 922846
Amman 11192, JORDAN
TEL: (06) 5692696

KUWAIT

EASA HUSAIN AL-YOUSIFI & SONS CO.
Al-Yousifi Service Center
PO Box 126 (Safa) 13002,
KUWAIT
TEL: 00 965 802929

LEBANON

Chahine S.A.L.
George Zeidan St., Chahine Bldg.,
Achrafieh, PO.Box: 16-5857
Beirut, LEBANON
TEL: (01) 20-1441

OMAN

TALENT2 CENTRE L.L.C.
Malatan House No.1
Al Noor Street, Ruwi
SULTANATE OF OMAN
TEL: 2478 3443

QATAR

AL-EMADI TRADING & CONTRACTING CO.
P.O. Box 62, Doha, QATAR
TEL: 4423-554

SAUDI ARABIA

Adawiah Universal Electronics APL
Behind Pizza Inn
Prince Turkey Street
Adawiah Building,
PO BOX 2154,
Al Khobar 31952,
SAUDI ARABIA
TEL: (033) 8643601

SYRIA

Technical Light & Sound Center
PO Box 13520 Bldg No.49
Khaled Abn Alwailid St.
Damasus, SYRIA
TEL: (071) 223-5384

TURKEY

ZUHAI DIS TICARET A.S.
Galip Dede Cad. No.33
Beyoglu, Istanbul, TURKEY
TEL: (0212) 249 85 10

U.A.E.

Adawiah Universal Electronics APL
Omar bin alkhattab street, fish
round about, nayef area, deira,
Dubai, U.A.E.
TEL: (04) 2340442

NORTH AMERICA

CANADA

Roland Canada Ltd.
(Head Office)
5480 Parkwood Way Richmond B.
C., V6V 2M4, CANADA
TEL: (604) 270 6626

Roland Canada Ltd. (Toronto Office)

170 Adelaide Boulevard
Mississauga On L5T 2N6,
CANADA
TEL: (905) 362 9707

U. S. A.

Roland Corporation U.S.
5100 S. Eastern Avenue
Los Angeles, CA 90040-2938,
U. S. A.
TEL: (323) 890 3700

For EU Countries



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit den Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamlles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkinäkö alimaise, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tämä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladékok közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbíráán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprigrist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olemprigristiga.
- LT** Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti išmetami kartu su buitiniems atliekomis.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produktus ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

For China

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于 2007 年 3 月 1 日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有害有害物质或元素的名称及含量

部件名称	有害有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有害有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
 ×：表示该有害有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。
 因根据现有的技术水平，还没有什么物质能够代替它。

For the U.K.

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.



For EU Countries

This product complies with the requirements of EMC Directive 2004/108/EC.

For the USA

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment requires shielded interface cables in order to meet FCC class B limit.

Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Canada

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

For the USA

DECLARATION OF CONFORMITY Compliance Information Statement

Model Name : UA-22
Type of Equipment : USB Audio Interface
Responsible Party : Roland Corporation U.S.
Address : 5100 S. Eastern Avenue, Los Angeles, CA 90040-2938
Telephone : (323) 890-3700

DUO-CAPTURE EX AUDIO BLOCK

