

HOT SHOE ADAPTERS

PRODUCT GUIDE



MAINTENANCE AND SAFETY WARNINGS

- When in use with Canon camera: A non Canon flash or strobe may not fire during live view shooting. See your camera manual for more details.
- Not to be used with older flash units having a trigger voltage of more than 6v. High voltage flash units may cause damage to your camera's electronic circuit.
- There are no user-serviceable parts inside the device. Do not attempt to disassemble or perform any unauthorized modification.
- Do not allow the adapter and/or converter to come into contact with either oil or saltwater.
- Keep all contacts clean.

VELLO PC ADAPTER SERIES

Thank you for choosing our Vello Hot Shoe Adapter. Our hot shoe adapters and converters extend the functionality of your camera by adding support for a wide variety of off-camera flashes and studio lighting.

This guide will provide descriptions and instructions for the Vello Adapters listed below. Please refer to the specific instructions for the model you selected:


HSA-PCU	HSA-PSS
HSA-PCS	HSA-PSU
HSA-PSC	HSA-CSC
HSA-PSN	HSA-CCS

PC ADAPTER




Models PCU and PCS add a PC sync terminal to your camera, allowing you to connect a flash sync cord fitted with a standard PC type connector via the camera's built in hot shoe.


HSA-PCU

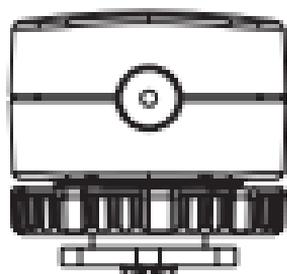

HSA-PCS

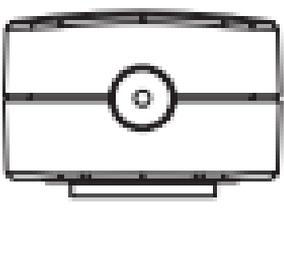

PC + TOP SHOE CONVERTER

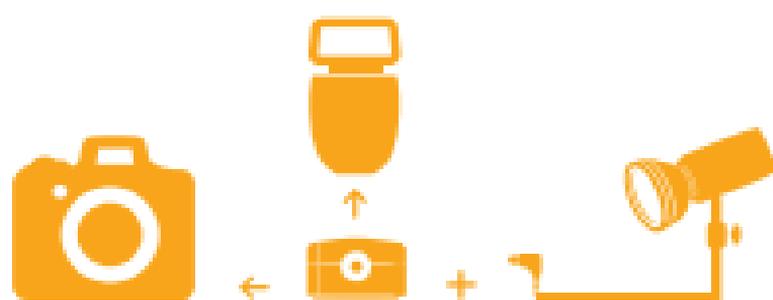

Models PSC, PSS, and PSN allow you to have a flash mounted on the camera while simultaneously connecting the camera to a studio light via a PC sync cord. The adapter's top hot shoe offers full TTL metering for the specified camera.

HSA-PSC




HSA-PSS



HSA-PSN



PC + TOP SHOE CONVERTER

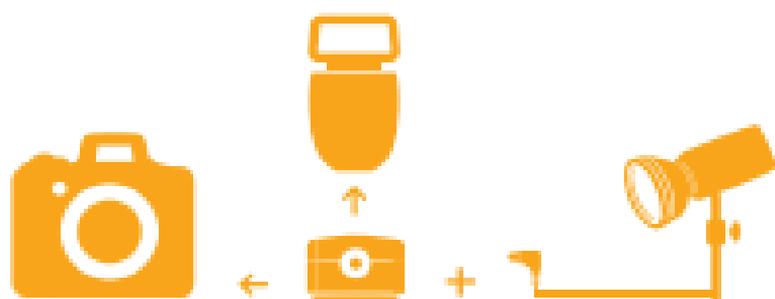


The PSU model is a universal adapter with a PC sync terminal and a top hot shoe that allows you to have a flash mounted on the camera while simultaneously connecting the camera to a studio light via a PC sync cord. This adapter does not offer TTL metering.

HSA-PSU



HOT SHOE CONVERTER + PC

UNIVERSAL TO SONY & SONY TO UNIVERSAL

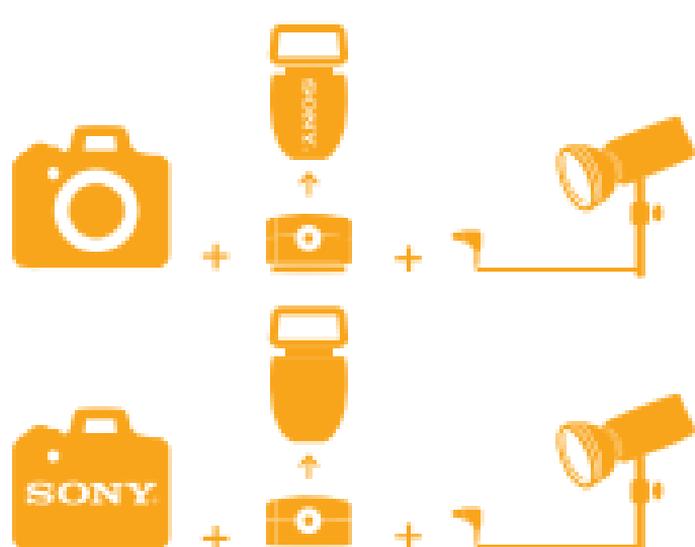

Model CSC allows you to use universal flashguns on Sony and Konica Minolta cameras. Model CCS allows you to use Sony and Konica Minolta flashes on non-Sony or Konica Minolta cameras. The converter also incorporates a PC sync terminal, enabling you to simultaneously connect your camera to a studio light via a PC sync cord. These models do not offer TTL support.

HSA-CSC

HSA-CCS



MOUNTING THE ADAPTER

[Models CCS, PCU, PSC, PSN, PSU]

1. With your camera and lights OFF, loosen the adapter's hot shoe locking ring.



2. Insert the adapter's hot shoe into the camera's hot shoe mount.
3. Tighten the hot shoe locking ring.



MOUNTING THE ADAPTER

[Models CSC, PCS, PSS]

With your camera and lights OFF, slide the adapter's hot shoe into the camera's hot shoe mount. The shoe adapter will lock into place automatically.



CONNECTING TO A FLASH UNIT

[Models CSC, PSC, PSN, PSU]

1. Unlock your flash unit's locking mechanism.
2. Insert the flash's hot shoe foot into the adapter's hot shoe mount

3. Engage your flash unit's locking mechanism to stabilize the unit and lock the flash to the adapter.

To obtain more detailed information, refer to your flash's manual for instructions.

CONNECTING AND REMOVING A FLASH UNIT

[Models CCS, PSS]

While the flash unit is turned off, push the mounting foot firmly onto the adapter's hot shoe mount, until it stops. The flash unit will lock into place automatically. To remove the flash unit, press the mounting foot release button located on your flash.

To obtain more detailed information, refer to your flash's manual for instructions.

CONNECTING A STUDIO STROBE VIA THE PC SYNC CORD

[All Models]

1. Plug the PC side of your cable into the adapter's PC sync terminal



2. Plug the other side of the cable into your studio light.



Warning: Not to be used with older flash units having a trigger voltage of more than 6v.

One-Year Limited Warranty

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group. © 2014 Gradus Group LLC. All Rights Reserved.

© Copyright 2014 Gradus Group
GG2