

AEE

MagiCam
Magical application

S71



Record · Share

Contents

Precautions	1
Preface.....	2
Warranty	3
Overview.....	4
Main Functions and Features.....	5
List of Accessories	8
Component Guideline	10
Front View	10
Rear View	11
Description of Indicators	12
LCD Segment Display	13
Preparations Before Use.....	14
Charging	14
Installing the Battery	15
Install TFT Display	16
Insert and Remove The Memory Card	17
Startup	18
Language	19
Date and Time	19
Select Light Metering Mode.....	20

Start Video Recording Via G-SENSOR Mode	21
Video Recording	22
Basic Operations of Video Recording	22
Parameter Setting For Video Recording	23
• Execution Mode	24
• Video-only Mode	24
• Time Lapse Mode	24
• Auto Video Mode	25
• Resolution Setting	25
• View Angle	26
• Bitrate	27
• Video Content Loop	27
• 180° Photo Rollover	27
• Display Time	27
Audio Recording	28
Photo Shooting	30
Operating Procedure for Photo Shooting	30
Parameter Settings for Photo Shooting	31
• Capture Mode	31
• Single Shot Mode	32
• Fast Shot Mode	32
• Timed Shooting Mode	32
• Photo Resolution	33

• Display Time	33
Other Basic Setting	34
• Warning Tone.....	34
• Status Indicator.....	35
• On Screen Display.....	35
• Auto To Standby	35
• TV Output Format	36
• Format.....	36
• Recover Factory Setting	36
Playback	37
Operating Procedure for Playback	37
Delete Files.....	39
File Protection and Unlocking.....	40
Upload Audio/Video/Photo Files to PC	40
View Video/Photo On HDTV.....	41
Wi-Fi	42
• Download a Wi-Fi APP	42
• Wi-Fi Starting and Connection.....	43
Operating Instructions for Wi-Fi Control Interface	46
Download Files to Mobile Device	51
Trim Videos.....	53
Change Wi-Fi Connection Name and Password	54

Wi-Fi Based Remote	56
Guide for Components	56
Startup	58
Pairing	58
Specifications	60
Precautions	60
Accessory Application	62
Water-proof Housing and Moisture-proof Foam	62
Mount Plug Bracket Components	65
Use Convex Sticker and Flat Sticker	66
Specifications	67
Power Supply	69
Precautions for The Waterproof Housing	70
Tips	71
FCC Notices	73

Precautions

When using the S71 video camera, adhere to the following precautions:

1. Do not drop, knock or shake the video camera.
2. Do not put the video camera close to an object that generates strong magnetic field, such as a magnet or a motor. Do not put the video camera close to an object that emits powerful radio waves, for example, an antenna. Strong magnetic field may cause faults on the video camera or damage the image / voice data.
3. Do not expose the video camera to high temperature or direct sunshine.
4. Do not put the memory card close to an object that generates strong magnetic field, such as a television set, a speaker, or a magnet. Do not put the memory card in a place where static electricity is easily generated.
5. Disconnect the power supply to stop recharging the battery immediately when over heat, smoke, or peculiar smell occurs during recharging.
6. Keep the video camera out of reach of children during recharging, because the power cable may cause asphyxia or electrical shock on children.
7. Store the video camera in a cool, dry, and dust-free place.

Preface

Thank you for purchasing AEE S71 series compact high-definition (HD) digital video camera, which has the following characteristics:

- Ultra small size and compact structure
- User-friendly interfaces
- Easy operations
- Hand-free shooting to facilitate shooting of real scenarios at any time and place
- Superior recording performance thanks to dynamic HD shooting technologies, providing you with exciting video shooting experience

This manual describes how to install and use the S71 video camera. It also provides information about use, operations, installation precautions, and technical specifications of the S71 video camera. Before using the S71 video camera, read and understand this manual carefully and keep it properly for future use. Designed to meet the professional requirements, AEE S71 video camera will serve you in a long term.

Warranty

This product has been certified by certification bodies for compliance with related safety regulations and specifications issued by the federal communications commission (FCC) and council of Europe (CE).

Overview

The S71 video camera is a compact high-end HD digital camera intended for professional applications. It provides the following functions:

- Performs industry-leading HD digital shooting.
- Stores voice data.
- Displays images in real time.
- Performs video recording.
- Takes pictures.
- Displays time.
- Performs 10X digital zooming.
- Wi-Fi function and App application.
- Connects to an external special-purpose microphone.
- Performs USB 2.0 high-speed data transmission.
- Recharges the battery in USB mode.
- Accessories are available to facilitate shooting at any time and place. Multiple patents of invention and technology are integrated in the S71 video camera.

Dispose of properly. Recycle it for a greener earth!



Main Functions and Features

- Provides 147° wide-angle f/2.7 lens.
- Provides a special-purpose HD lens, which supports 4K, 2.7K, 1080P, 960P, and 720P HD video recording.
- Takes 16M pixels pictures in 4608×3456 resolution.
- Wi-Fi function and more App application .
- Performs 10X digital zooming.
- A new generation of image sensor Exmor R CMOS, photosensitivity doubled. Perfectly show the image details even in low-light environment.
- Performs shooting in multiple modes, such as Single shot, Fast shot, Timed shooting.
- Provides unique fast-shot feature, up to 10 photos per second.
- Provides an independent voice recording function for long-time voice recording.
- Provides the 180° photo rollover function.
- Connects to an external TFT screen to view the video recording and playback.
- Support Audio-in function and external dedicated microphone.
- Provides HDMI and AV output interfaces for easy connecting to HD monitor or TV set to view record files.

- Provides better video effects in multiple video output modes (NTSC system):
 - 4K Cinema(4096×2160) 12 frames / second
 - 4K(3840×2160) 15 frames / second
 - 2.7K Cinema(2704×1440) 24 frames / second
 - 2.7K(2704×1524) 30 frames / second
 - 1080P(1920×1080) 60 frames / second
 - 1080P(1920×1080) 48 frames / second
 - 1080P(1920×1080) 30 frames / second
 - 1080P(1920×1080) 24 frames / second
 - 960P(1280×960) 60 frames / second
 - 960P(1280×960) 48 frames / second
 - 720P(1280×720) 120 frames / second
 - 720P(1280×720) 60 frames / second
- Provides compact and fashionable design.
- Records video programs in MP4 format to facilitate playback on a PC and uploading to video-sharing websites.
- Provide high color fidelity to present more clear and natural video pictures.
- Supports playback, deleting files and other operations on the local video camera.
- Supports fast forwarding, fast rewinding, and playback.

- Built-in microphone adopts dual-Mic design to achieve stereo and high-quality recording effect.
- All-round highlight status indicator.
- Built-in G-Sensor can function as automobile black box.
- Supports connecting to an external microphone (special-purpose microphone only).
- Provides a 1/4-inch general-purpose interface to facilitate extension of accessories.
- Accessories adopt strengthened structure with improved reliability and stability.
- Rechargeable built-in high capacity lithium-ion battery extends the video recording time.
- Provides shockproof features to withstand mild drop or knock.
- Provides an IP68 waterproof housing, withstanding a diving depth of 100 meters, and two-types of rear-cover design.
- Provides automatic standby for power saving, and supports automatic saving of audio and video data.

List of Accessories

S71 main unit



TFT display



Remote Control *



Water-proof housing



Waterproof housing rear case



Lithium-ion battery



Back clip *



Power supply terminal *



Plug bracket unit



Flat sticker



Convex sticker



Vertical-horizontal joint



Extended adjusting bolt unit *



Moisture-proof foam



USB data cable



Waterproof plug *



User manual



Hand strap *



Cloth bag *



 
CD-ROM *



! The accessories you've received may be slightly different from above. The package is subject to change without further notice. You can order the optional accessories marked with " * ".

Component Guideline


Front View

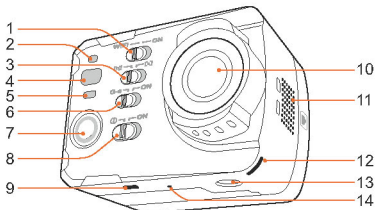

1. Wi-Fi key
2. Wi-Fi status indicator
3. Light meter mode key
4. Recording status indicator
5. Charging status indicator
6. G-Sensor key
7. Video/audio recording button

8. Power on/off key
9. Battery lock
10. Lens
11. Cooling hole
12. Recording Status Indicator
13. tripod mount
14. Microphone

 Rear View

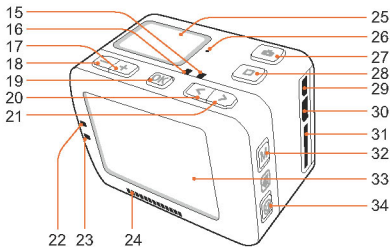


- 15. Charging status indicator
- 16. Recording status indicator
- 17. Up button
- 18. Down button
- 19. OK button
- 20. Left arrow button
- 21. Right arrow button
- 22. Recording status indicator
- 23. Charging status indicator
- 24. Speaker

- 25. LCD segment display
- 26. Microphone
- 27. Shutter button
- 28. Stop button
- 29. Mini HDMI interface
- 30. USB interface
- 31. TF card slot
- 32. Menu button
- 33. TFT display
- 34. Playback button

Description of Indicators

Position Status	Red indicator	Green indicator	Blue indicator
	Front cover(1) top cover(1) TFT display(1)	Front cover(1) top cover(1) TFT display each(1) bottom side(2)	Front cover(1)
Startup	Stay on	/	/
Video recording	/	Flash slowly	/
Audio recording	/	Flash slowly	/
Photo shooting	/	Flash once	/
Card full	/	Stay on	/
Charging (switched off)	Flash slowly	/	/
Fully charged (switched off)	Stay on	/	/
Low-battery indicator	Flash fast for 5s and then auto power off	/	/
Data transmission	/	/	flash slowly
Wi-Fi on		/	flash slowly

 LCD Segment Display

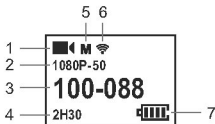


	Icon	Functions
1		Recording mode
		Shooting mode
2	1080P-50	Recording resolution
	16M 12M 8M	Shooting resolution
3	100-088	Number of recorded files
	00:00:01	Recording timer
4	2H30	Remaining recordable time
	1888	Remaining shots
5	W M N S	View angle
6		Wi-Fi
7		Battery level

Preparations Before Use

Charging

Start up the unit to check the battery power. If the battery level is low, charge it.

 
Use the supplied power adapter or USB port of a PC to charge S71:

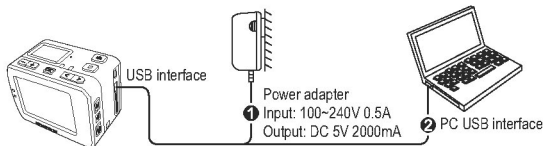


When S71 is charged in power-off state, the red indicator will flash slowly. After the battery is fully charged, the red indicator will stay on.

Installing the Battery

 1. Before Installing the battery, ensure that the battery "lock key" at the bottom of S71 is unlocked.
2. Push the battery into the battery slot completely as below:

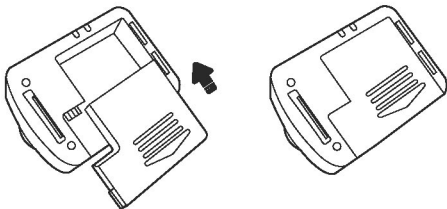

 
3. Battery lock:

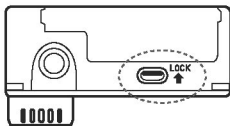

Install TFT Display

S71 supports external dedicated 2" TFT display, which can perform Setup, Playback and Delete, etc. on the camera to preview or playback the video.

 Install the display as shown below:

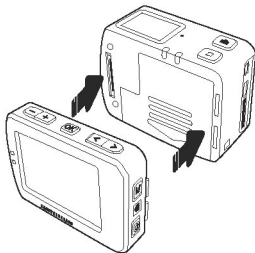

Insert and Remove The Memory Card

S71 supports external TF card up to 64G. Though all SD cards above Class 6 can be used on S71, high-speed card is recommended to perform high-definition shooting. When shooting during dynamic motion, brand SDHC cards are recommended for use in order to ensure smooth shooting.

 
* Insert the memory card

1 Ensure that S71 is switched off.

2 Insert SD card into the memory card slot in the arrow direction flatly to the end. A "click" can be heard to indicate the card has been well inserted.

• Remove the memory card

Press the center of exposed part of SD card and SD card will pop up slightly. Then pull it out flatly.

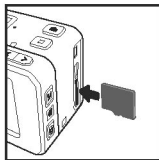

! Before connecting the host to Wi-Fi or the remote control, please first insert the SD card.

Startup

Turn the power key to "ON" to turn on S71:



When host in power-on state, you can long press the Shutter button and Stop button simultaneously for 3s to turn off Host. After closing the host, You can long press the Shutter button and Stop button simultaneously for 3s to turn it on.

- 2 red indicators will be lit up;
- S71 enters recording standby mode. Now TFT display is shown as below:



Language

1. Press "M" button to enter the camera setting menu;
2. Press "-" / "+" button to select ;
3. Press "<" / ">" button to select  option and press "OK" button to confirm;
4. Press "<" / ">" button to move the cursor to the language type to be modified. Then press "OK" to confirm;
5. Press "M" button to exit the menu and return to recording standby mode.

Date and Time

1. Press "M" button to enter the camera setting menu;
2. Press "-" / "+" button to select ;
3. Press "<" / ">" button to select  option and press "OK" button to confirm;
4. Press "<" / ">" button to move the cursor to the Style to be modified. Then press "OK" to confirm;
5. Press "<" / ">" button to move the cursor to the time or date to be modified. Then press "-" or "+" button to modify the time and date and press "OK" to confirm;

 
6. Press "M" button to exit the menu and return to recording standby mode.

Use "<" / ">" button to select the item to the left / right, and use "+" / "-" button to select the item above/below of the selected item. After selection, press "OK" button to confirm operation.

❗ Please ensure that the date and time are correctly set. This unit will add time to the photo/video based on this setting.

Select Light Metering Mode

To achieve the best exposure effect, use central spot light metering mode when the central spot is bright while the surrounding environment is dark.



"[•]": turn on central spot metering

"[□]": turn off central spot metering

Start Video Recording Via G-SENSOR Mode



Turn G-Sensor key to "ON" so that S71 will actively sense the change of gravity. The system will automatically start video recording in case of shock or tilting, etc. Especially when this mode is applied in fixed installation, for example, mounted on the vehicle or helmet, it can start video recording timely without the need to start the recording in advance. It can free you from manual operation while conserving battery power.

 
When the camera does not sense any gravity change for 3 minutes, it will exit video recording.

! During the startup process of the camera, please do not start G-sensor function simultaneously to avoid the crash.

Video Recording

Basic Operations of Video Recording

1. Turn on S71 to enter recording standby mode;
 2. Aim the lens to the subject and preview it in TFT display;
 3. Press "Video recording" button once to start video recording;
- The system will tick once to indicate the effective of video recording, TFT display is shown as below for video recording:

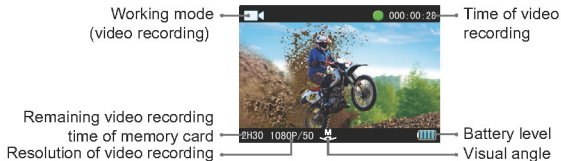

4. During video recording, press the "Stop" button once to stop video recording.
- the system generates a tick tone twice ,indicating that the video recording operation stops recording, and the time counter stops.
 - The display will return to recording standby mode.

Parameter Setting For Video Recording

Perform the following steps to set the parameters for video recording:

1. Press "M" button to enter the setting menu;
2. Press "+" / "-" button to select "";
3. Press "<" / ">" button to move cursor to the sub-menu you want to configure, Press "OK" button to enter the sub-menu:

Icon	Functions	Icon	Functions
	Execution mode		Resolution
	View angle		Bitrate
	Video content loop		180° photo rollover
	Display time		

4. Press "<" / ">" button to select the parameters you want;
5. Press "OK" button to confirm;
6. Press "M" button again to exit the setting menu.

- **Execution Mode**

Select the execution mode you want, Press "OK" button to confirm, Press "M" button again to exit the setting menu.



: Video recording mode



: Video-only mode



: Voice recording mode



: Time Lapse mode



: Auto video mode

- **Video-only Mode**

In this mode, you can record a video without voice.

- **Time Lapse Mode**

Time Lapse function can record one picture as a frame of the video according to the time interval you set. It doesn't need the post editing, and can easily make the continuous evolution and movement.



: Record a picture as a frame of the video every 0.5s.



: Record a picture as a frame of the video every 1s.



: Record a picture as a frame of the video every 2s.



: Record a picture as a frame of the video every 5s.



: Record a picture as a frame of the video every 10s.



: Record a picture as a frame of the video every 30s.

! The function is unavailable in 4K Cinema, 4K, 2.7K Cinema, 2.7K and 720P modes.

• Auto Video Mode

If this function is enabled, the system will auto start recording videos according to the countdown time you set.

 : Start video recording 5 seconds after "video recording" button is pressed.

 : Start video recording 10 seconds after "video recording" button is pressed.

 : Start video recording 20 seconds after "video recording" button is pressed.

• Resolution Setting

The optional resolutions for video recording are listed as below:

Resolutions	PAL System	NTSC System
4K Cinema (17:9)	4096x2160 12fps	
4K(16:9) 3840x2160	12.5fps	15fps
2.7K Cinema (17:9)	2704x1440 24fps	
2.7K(16:9) 2704x1524	25fps	30fps

1080P(16:9) 1920x1080	24fps, 25fps, 48fps, 50fps	24fps, 30fps, 48fps, 60fps
960P(16:9) 1280x960	48fps, 50fps	48fps, 60fps
720P(16:9) 1280x720	50fps, 100fps	60fps, 120fps

• **View Angle**

Optional view angle: Broad, Medium, Narrow, Small.



Broad



Medium



Narrow



Small



- ❗ The function is unavailable in 4K Cinema, 4K, 2.7K Cinema and 2.7K modes.

- **Bitrate**

This unit provides two bit rate options: high "" and normal "". (If high bit rate is selected, you will get clearer picture with increased file size).

- **Video Content Loop**

You can activate or deactivate loop recording function. If ON, video file will be automatically stored in segment of 10 minutes; If OFF, video file will be stored in segment of 15 minutes.

- **180° Photo Rollover**

When this function is activated, upright video file can be obtained when using S71 to shoot video upside down.

- ❗ The function is unavailable in 4K Cinema, 4K, 2.7K Cinema, 2.7K, 1080P 48f/50f/60f and 720P 100f/120f modes.

- **Display Time**

You can choose to display or not display the video recording time at the bottom right corner of the photo.

- ❗ The function is unavailable in 4K Cinema, 4K, 2.7K Cinema, 2.7K, 1080P 48f/50f/60f and 720P 100f/120f modes.

Audio Recording

Operating procedures for audio recording:

1. Enter audio recording mode and press "Video Recording" button to start audio recording.
- The system will tick once to indicate the effective of aideo recording.



2. During audio recording, press the "Stop" button once to stop audio recording.
- The system generates a tick tone twice ,indicating that the video recording operation stops.
- The display will return to recording standby mode.

Exit audio recording mode:

1. Press "M" button to enter the camera setting menu;
2. Press "<" / ">" button to select "" and press "OK" button to confirm;
3. Press "<" / ">" button to select "" mode and press "OK" button to confirm, S71 will return to recording standby mode.

Photo Shooting

Operating Procedure for Photo Shooting

1. Turn on S71 to enter recording standby mode;
 2. Cast the lens to the subject and preview it on the display;
 3. Press the "Shutter" button once to switch the working mode to "photo shooting";
 4. Press the "Shutter" button again to shoot one photo.
- The system generates will click to indicate completion and the system will return to photo shooting standby mode;
 - TFT display under photo shooting mode is shown as below:



Parameter Settings for Photo Shooting

Perform the following steps to set the parameters for photo shooting:

1. Press "M" button to enter the setting menu;
2. Press "+" / "-" button to select "";
3. Press "<" / ">" button to move blue cursor to the sub-menu you want to configure, Press "OK" button to enter the sub-menu:

Icon	Functions	Icon	Functions
	Capture mode		Photo resolution
	Display time		

4. Press "<" / ">" button to select the parameters you want;
5. Press "OK" button to confirm;
6. Press "M" button again to exit the setting menu.

• Capture Mode

Select the capture mode you want, Press "OK" button to confirm, Press "M" button again to exit the setting menu.



: Single shot mode



: Fast shot mode



: Timed shooting mode

- **Single Shot Mode**

Take one photo when the photo shooting button is pressed.

- **Fast Shot Mode**

S71 takes several photos within one second.

A rectangular button with a dark grey background and rounded corners, containing the text "3/1s" in white.

: 3 photos in one second;

A rectangular button with a dark grey background and rounded corners, containing the text "6/1s" in white.

: 6 photos in one second;

A rectangular button with a dark grey background and rounded corners, containing the text "10/1s" in white.

: 10 photos in one second;

- **Timed Shooting Mode**

When the "Shutter" button is pressed once under recording standby mode, S71 will start countdown and take a photo at the set time.

A rectangular button with a light grey background and rounded corners, containing the text "3s" in yellow.

: Take one photo 3 seconds after the "Shutter" button is pressed.

A rectangular button with a dark grey background and rounded corners, containing the text "5 s" in white.

: Take one photo 5 seconds after the "Shutter" button is pressed.

A rectangular button with a dark grey background and rounded corners, containing the text "10 s" in white.

: Take one photo 10 seconds after the "Shutter" button is pressed.

- **Photo Resolution**

Three optional resolutions include:

 : 16.0M (4608×3456 4:3)

 : 12.0M (4000×3000 4:3)

 : 8.0M (3200×2400 4:3)

- **Display Time**

You can choose to display or not display the photo shooting time at the bottom right corner of the photo.

Other Basic Setting

1. Press "M" button to enter the camera setting menu;
2. Press "-" / "+" button to select "⚙️";
3. Press "<" / ">" button to move blue cursor to the sub-menu you want to configure, Press "OK" button to confirm;

Icon	Functions	Icon	Functions
	Warning tone		Status indicator
	On screen display		Auto to standby
	TV output format		Language
	Date/time		Format
	Recover factory setting		Ver

• Warning Tone

Adjust the loudness or mute of buzzer.

 : Off

 : Medium

 : Standard

- **Status Indicator**

Activate or deactivate the status indicators.

 : Off (All OFF)

 : Two (Only 2 indicators of S71 ON)

 : On (All ON)

- **On Screen Display**

Display or hide the recording icons or information on the display screen.

- **Auto To Standby**

S71 is set to automatically enter standby mode if no operation is (photo shooting, video recording or button operation) carried out in certain time. If any operation is carried out in the timing process, the timer will be reset. Under standby mode, press video recording button/shutter button/stop button to awaken S71.

 : Off

 : 2 minutes

 : 5 minutes

 : 10 minutes

- **TV Output Format**

This setting is designed to ensure that the frame rate of video recording matches with the playback format of on TV.

Please select NTSC in North America.

Please select PAL in non-North America areas.

- **Format**

This option allows all the files in the memory is cleared.

- **Recover Factory Setting**

This option allows all the settings of the system to be restored to original factory settings.

Playback

Operating Procedure for Playback

1. Press the "playback" button to enter playback interface;
2. Press "Video recording" button to select the file type and press "OK" button to confirm;
 -  : View video files
 -  : View photo files
 -  : View all files
3. Press "<" / ">" / "+" / "-" button to move the cursor to the thumbnail of the file you want to play back;
4. Press "OK" button to enter the playback interface and press "OK" button to play it.
- When playing video files, the functions of various buttons are listed as below:

Button	Functions	Button	Functions
-	Decrease volume;	+	Increase volume;
<	Fast rewind	>	Fast forward
	Reset to play it from the beginning. Press it again to return to the file preview interface;	OK	Play/pause.

- When reviewing photos, the functions of various buttons are listed as below:

Button	Functions	Button	Functions
-	Zoom out; In zoom-in mode, when you press "OK", you can press "-" to move the photo downward;	+	Zoom in; In zoom-in mode, when you press "OK", you can press "+" to move the photo upward;
<	In zoom-in mode, when you press "OK", you can press "<" to move the photo rightward; When a photo is displayed in its actual size, press "<" to view the previous photo;	>	In zoom-in mode, when you press "OK", you can press ">" to move the photo leftward; When a photo is displayed in its actual size, press ">" to view the next photo;
	In zoom-in mode, press it to restore the photo to its actual size; Press it to preview photos in thumbnails.	OK	When a photo is displayed in its actual size, press "OK" to rotate it; In zoom-in mode, when you press "OK", the "↕" icon will appear in the upper left corner, you can to move the photo;

- When playing audio files, the functions of various buttons are listed as below:

Button	Functions	Button	Functions
-	Decrease volume;	+	Increase volume;
	Press it again to return to the playback interface;	OK	Play/pause.

Delete Files

- Under file playback or thumbnail preview mode, move the cursor to the file icon you want to delete;
- Press "M" button to enter file operation mode and move the cursor to "Delete file";
- Press "OK" button to confirm;
- Move the cursor to "delete single"/"delete all" and press "OK" button to delete the file(s).



: Delete single



: Delete all

File Protection and Unlocking

1. Under file playback or thumbnail preview mode, move the cursor to the file icon you want to protection;
2. Press "M" button to enter file operation mode and move the cursor to "file protection";
3. Press "OK" button to confirm;
4. Select protection type and press "OK" to confirm:



: Protect single



: Protect all



: Unlock single



: Unlock all

! The protected files cannot be deleted. However, such files can be deleted by formatting.

Upload Audio/Video/Photo Files to PC

1. Use USB data cable to connect the camera to a PC;
2. Switch on S71;
3. Click the "My Computer" icon on the desktop and find the "Removable Disc". If the camera is not detected, close "My Computer" window and reopen it after a while. The "removable disc" will be displayed;

 
4. Double click the "removable disc" icon;
5. Enter the "removable disc" and copy/move the file to the PC's hard disk.

View Video/Photo On HDTV

The recorded files can also be played on TV or display with HDMI interface.

Ensure that your camera is properly configured to NTSC (North America) or PAL (Non-North America) video format; otherwise, the video and images on S71 cannot be properly displayed on TV.

Use HDMI cable to connect S71 to the TV set:

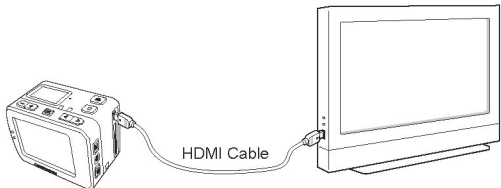

! This function is not available when opening Wi-Fi.

Wi-Fi

With integrated Wi-Fi module, S71 can be connected with Wi-Fi remote control, smartphone or tablet PC to achieve remote control function. First please install appropriate APP software provided by AEE to your device.

- **Download a Wi-Fi APP**

 
By now, the Wi-Fi APP is already upload to iphone APP store and google play store, customers can freely download it.

1. Android user: Entering the google play store, search “AEE APP” (quotation marks is needed), download and install it, following the user manual to connect the Wi-Fi and operate.
2. Iphone user: Entering the iphone APP store, search AEE , download and install it, following the user manual to connect the Wi-Fi and operate.

APP icon: 

• Wi-Fi Starting and Connection

1. Push Wi-Fi key to "ON" to switch on Wi-Fi function:



The blue indicator starts to flash and Wi-Fi signal icon "  " can be seen on the upper left corner of TFT display.

- !** Do not perform any key operation when waiting the Wi-Fi function to be enabled or disabled.

2. Turn on your camera, wait until the blue Wi-Fi indicator flashes slowly. Search for Wi-Fi hot spot on a mobile receiving device, select "AEE Magicam" network and connect it (default password: AEE12345). Then the camera and the mobile device are connected.
3. Click the App icon "  " on the mobile device to display the icon () shown in Fig. 1. Enter the interface shown in Fig. 2 to remotely view your camera's screen and set up parameters.

! In case of Wi-Fi connection failure, the icon "  " will appear. Select "Yes" to try to connect again. If you select "No", click the icon "  " to enter the WLAN settings interface or click the icon "  " to enter the main interface to view local files only(Only Android version), no other operation is supported.

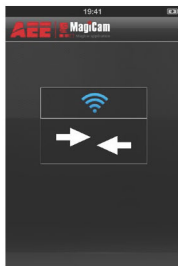 


Fig. 1 Wi-Fi Connection Interface



Fig. 2 Wi-Fi Control Interface

- | | |
|--|--|
| 1. Total number of files | 8. Playback mode |
| 2. Wi-Fi status | 9. Maximize preview |
| 3. Battery status | 10. Current state icon / Start / Stop button |
| 4. Remaining recording time or number of shots | 11. Parameter settings |
| 5. Recording Duration | 12. Zoom out |
| 6. Video recording mode | 13. Zoom in |
| 7. Single shot mode | 14. Fast shot mode |

You can remotely control your camera by clicking the icons at the main interface.

2H30: Display the remaining recording time in video recording mode;
Display the remaining number of shots in photo shooting mode.

- ❗ The mobile device must be used within a distance of max. 100 meters from the S71 in an obstacle-free and horizontal angle.
- ❗ The real-time preview is unavailable for video recording 1080P 48f/50f/60f, 960P, 720P 100f/120f modes.

Operating Instructions for Wi-Fi Control Interface

1. Video Recording

Click the Video recording mode icon "📹". The current state icon will display as "📹", click it to start / stop video recording.

Click the icon "⌕" to maximize the preview (See Fig. 3).

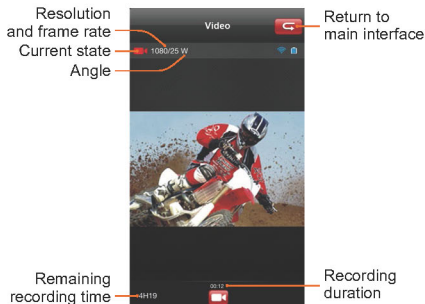 


Fig. 3 Video Recording Mode

You can set up your desired recording resolution in the parameter setting interface.

2. Single shot

Click the Single shot mode icon "  ", it will turn blue "  ". The current state icon will display as "  ", click it to take one picture.

Click the icon "  " to maximize the preview (See Fig. 4).

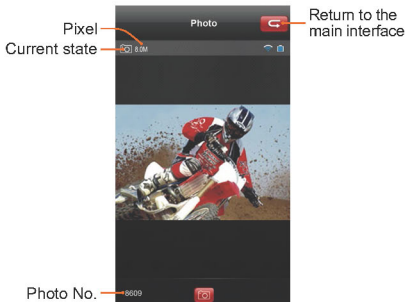 


Fig. 4 Single Shot Mode

You can set up the pixel in the parameter setting interface.

3. Fast Shot

Click the Fast shot mode icon "📷", it will turn blue "📷". The current state icon will display as "📷", click it to take pictures within one second.

Click the icon "📷" to maximize the preview (See Fig. 5).

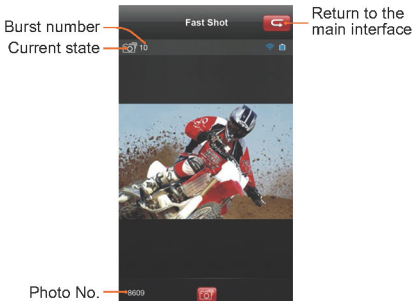 


Fig. 5 Fast Shot Mode

You can set how fast the camera takes pictures in the camera setting interface.

4. Playback

Click the icon "  " to enter the interface shown in Fig. 6 to remotely play videos and photos. abc

1.Camera storage

2.Mobile device storage



Fig. 6 Playback Interface

Slide the icon "  ". If you select "Camera Storage", you can replay the files stored on the camera. If you select "Mobile Device Storage", you can replay the files downloaded from the camera to the mobile device.

Click the icon "  " to enter the App settings interface.

Click the icon "  " to return to the WiFi control interface.

Click the icon "  " to enter File selecting.

Click the icon "  " to download media files from the camera to your mobile device.

Click on the thumbnail to view it in large preview. You could slide left and right to select the desired file.


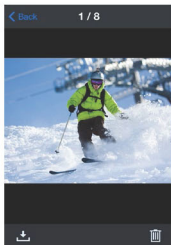 


Photo Preview

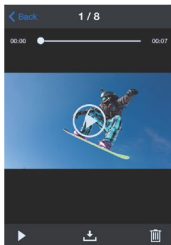 

Video Preview

Click the icon "  " to return to the thumbnail preview interface.


Click the icon "  " to download the current file to your mobile device.

Click the icon "  " to delete the current file.

Click the icon "  " to display video.

Download Files to Mobile Device

 Return to the thumbnail preview interface and click the icon "  " to enter the Download interface. Click the desired files to download them to your mobile device.

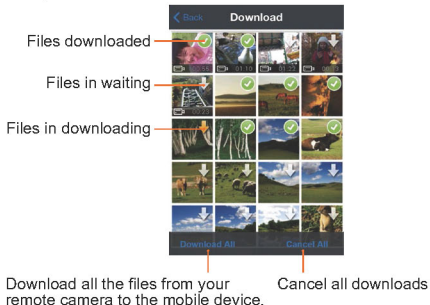

In the thumbnail preview mode, slide the icon "    " to view local files. Click the icon "  " to enter the interface shown in the figure below, and then click the desired files to share them to social networking websites.

Click on the thumbnail to view it in large preview. You could slide left and right to select the desired file.


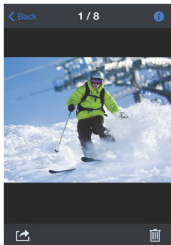 


Photo Preview

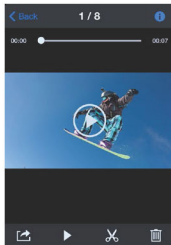 

Video Preview

Click the icon "  " to view the current file information.

 
Click the icon "  " to enter the video trimming interface.

("  " iOS version)

Click the icon "  " to share the current file to a social networking website.

Trim Videos

When viewing the downloaded files on the mobile device, you can click the icon "✂" at the bottom of the screen to enter the video trimming interface shown in the figure below:

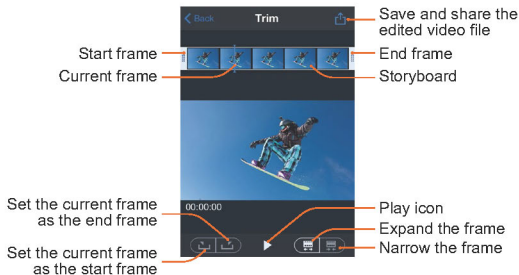

This function allows you to take a clip out of the video to generate another video by changing the starting frame and ending frame. The following two methods can be used to change the starting frame and ending frame:

One method: change the starting frame and ending frame by directly dragging the time frame panel (click the Play key for previewing until the best location is reached).

Another method: click " " to set the current frame as the starting frame, drag the time frame panel to change the current frame, and then click " " again to set the current frame as the ending frame.

Change Wi-Fi Connection Name and Password

1. Change the Wi-Fi connection name:

Connect your camera (with TF card installed) to the computer and turn on your camera. On the computer, double click "My Computer" to find and enter the removable disk, and then open the " " WiFi.conf file in the folder "MISC". Find "AP_SSID=AEE Magicam". Change the content following the equal sign "=" to your desired name and save it.

2. Change the Wi-Fi connection password:

Connect your camera (with TF card installed) to the computer and turn on your camera. On the computer, double click the icon "My Computer" to find and enter the removable disk, and then open the "  " WiFi.conf file in the folder "MISC". Find "AP_PASSWD=AEE12345". Change the content following the equal sign "=" to your desired password (containing at least 8 digits and above) and save it. (It supports 8-digit password only.)

- ❗ If the TF card is formatted, you need to reconnect to your camera in order to find the folder "MISC" and change the name and password.
- ❗ In case of synchronous operation of the camera and the Wi-Fi based remote control, hosts will give priority to the operation command from the camera.
- ❗ Above images for reference only, subject to our available App.

Wi-Fi Based Remote

Guide for Components



Buttons	Functions
	Long press it for about 5s to turn on/off the Wi-Fi based remote control.
	Under the photographing mode, press it once to switch the current mode to the video recording mode.
	Under the video recording mode, press it once to start video recording.
	After entering the mode selection state, press it to select the option upwards.

	Under the video recording mode, press it once to switch the current mode to the photographing mode.
	Under photographing mode, press it once to take a photo.
	Long press it for about 2s to enter the mode selection state.
	Select your desired mode, and press it to enter.
	During video recording, press it to stop video recording.
	After entering the mode selection state, press it to select the option downwards.
	Press it once to switch the viewing angle of the camera to wide angle.
	Press it once to switch the viewing angle of the camera to medium angle.
	Press it once to switch the viewing angle of the camera to narrow angle.
	Press it once to switch the viewing angle of the camera to small angle.

- ❗ Viewing angle switching buttons in the remote control can only be used in the 1080p mode.
- ❗ When DRC10 accidentally crashes in use, can not be normal shutdown, you can press "Wide view" and "Small view" key to forced shutdown.

Startup

 
Long hold the “Power / Record” button for about 5s to start up the Wi-Fi based remote control.

After startup, the screen will display the battery icon “”; if the battery icon is empty, it indicates that the battery level is low and charging is needed; please connect the USB power supply to the USB port of the remote control for charging.

Pairing

Please carry out pairing before enabling the functions of the remote control. Steps for pairing between the Wi-Fi based remote control and the camera are stated as follows:


1. Turn on the camera and enable the Wi-Fi function;
2. First, press and hold the “Stop” Button of the Wi-Fi remote control; then, long press the “Power / Record” record for about 5s to start up the remote control, and the red power indicator will stay on and the screen will display the battery icon “”;
3. Long press the “Power/Record” button and the “Stop” button, and do not release these two buttons until the following icon of “WAIT CAMERA PBC” appears.



4. Press the "Stop" button of the camera once, and the screen of the Wi-Fi remote control will display the icon below:



 5. Press the "Stop" button of the Wi-Fi remote control for connecting, and the screen of the Wi-Fi remote control will display the icon below:



6. When the remote control enters the recording standby state and the following interface, code pairing is completed successfully:



Specifications

Description	Specification
Charging time via USB	2.0 hours (max.)
Service time of fully charged battery	5.0 hours (max.)
Battery capacity	500mAh
Power consumption	0.30W - 0.35W
IP rating	IP66
Remote control distance	About 120 meter
Specification of USB	USB 2.0
Overall dimension	77×46×19mm
Weight	59g
Working temperature	-10°C ~ 50°C
Storage temperature	-20°C ~ 60°C

Precautions

1. This remote control is a sophisticated product; dropping or physical impact on this product is not allowed.

2. The remote control should not get close to objects with high-intensity magnetic field such as magnet and electric motor, or to objects that send out strong radio waves such as antenna. Strong magnetic field may result in failure of the remote control.
3. Please do not put the remote control in a place with high temperature or direct sunshine.
4. Please put the remote control in a cool, dry and dustless place.
5. This product is not designed with the function of auto standby; if it is idle for a long time after startup, please turn off the power of the remote control.
6. The remote control is able to connect to one host only each time. It can't connect to multiple hosts simultaneously.
7. If the remote control disconnects abnormally and can't be used normally, please simply reboot it to put it back to use.
8. Please don't operate the remote control while it's being charged, in case it will cause malfunction.
9. If you activate video recording function in the host with remote control, simply press Stop button on the remote control to stop recording. Please don't press the Stop button on the host to stop recording, in case it will cause malfunction.

 
Accessory Application

S71 is suitable for handhold use or hand-free use at most places by using appropriate accessories. S71 fitted with water-proof housing can be used to record videos underwater.


Water-proof Housing and Moisture-proof Foam

S71 water-proof housing up to IP68 can protect the camera 100 meters underwater. In order to avoid and reduce the dewing on the glass of the water-proof house, we suggest inputting the moistureproof cotton inside the water-proof case in big temperature range environment.

Follow these steps to load S71 into water-proof housing:

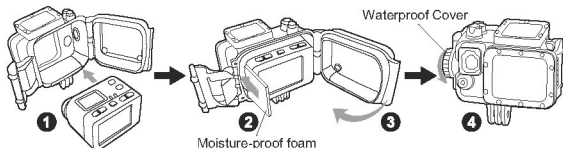

 
Follow these steps to assemble the waterproof housing rear case:



You can choose different waterproof cover in accordance with your own demands:


Standard Waterproof Cover	Waterproof Cover with Hole	Waterproof Cover with Microphone
		
High waterproof protection standard. Used for diving, swimming, surfing, etc.	Rainproof function with excellent audio recording effect.	Rainproof function with external microphone and excellent audio recording effect (Please remember to unplug the cover of memory card on the side of the host before using this waterproof cover).

 The plug bracket can fix S71 water-proof housing firmly onto the sticky seat, as below:

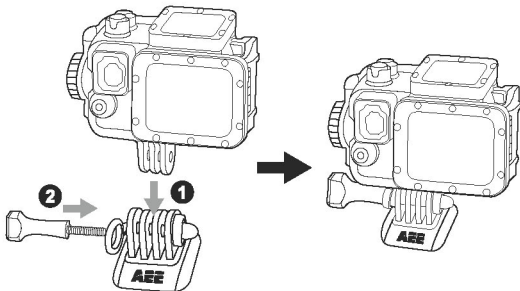

Mount Plug Bracket Components

 
The plug bracket can fix S71 firmly onto the sticky seat.

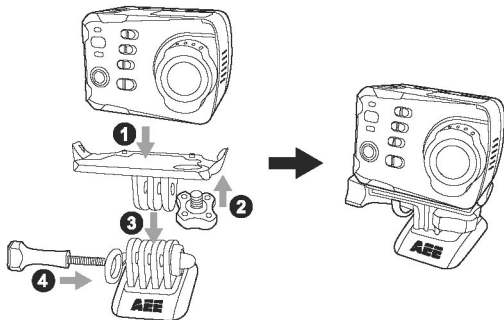


Use Convex Sticker and Flat Sticker

S71 comes with sticker fitting and flat sticker for installation on different surfaces.

 You can easily attach the camera onto helmet, vehicles or the surface of other devices.

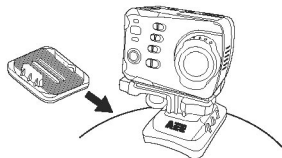

M08 convex sticker

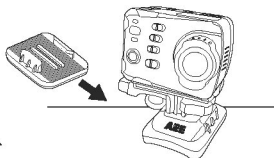 

M15 flat sticker

Precautions for the use of 3M double-sided foam tape:

1. Before fixing 3M double-sided foam tape, please select an appropriate curved or flat surface where the tape can fit with the surface.
2. Before using 3M foam tape, please clean the surface to be adhered to.
3. Before applying 3M foam tape, it is suggested to heat its surface properly (electric blower may be used), especially when the temperature is below -20°C .

Specifications

Description	Specifications
Visual angle	147°
Aperture	f/2.7
Digital zoom ratio	10X
Pixel	16 million
Video recording format	MP4
Audio recording format	WAV
Photo format	JPG (JPEG)
Wi-Fi transmission distance	About 100 meter (Max.)
Storage medium	128MB Flash Memory (not for photo shooting or video recording); up to 64GB external Micro SD card
Standard battery capacity	1500mAh
Power consumption	700mA
Recharging duration	USB Cable: About 3.5 hours
	Power Adapter: About 2.5 hours
Maximum video recording time	About 110 minute (Max.)

Maximum audio recording time	About 240 minute (Max.)
TFT Display	2.0" true color TFT display (16:9)
LED Dot-matrix screen	90×64mm FSTN (lattice screen)
Operating platform requirements	Operating system: Windows XP SP2 / Vista or above / Mac OS;
Storage temperature	-20°C ~ 60°C
Operating temperature	-10°C ~ 50°C
Dimension	L59 × W43 × H47mm (including TFT screen)
	L59 × W43 × H35mm (excluding TFT screen)
Unit weight	116g (including TFT screen and battery)
	56 (excluding TFT screen and battery)

! As our products undergo continuous development, the specifications are subject to change without prior notice.

Power Supply

The S71 video camera uses a power unit certified by the following authorities.



UL mark
U.S. Power
Certification



C-TICK mark
Australia Power
Certification



CE mark
E.U. Power
Certification



GS mark
Germany Power
Certification



CCC mark
China Power
Certification



PSE mark
Japan Power
Certification



BS mark
U.K. Power
Certification

❗ The surface temperature of a power unit in use may increase, and this situation is normal.

Precautions for The Waterproof Housing

The waterproof housing is a precision component. When using the waterproof housing, adhere to the following precautions:

1. Do not randomly remove or change the O-ring, key, and lens cover. Otherwise, the waterproof performance deteriorates.
2. Do not put the waterproof housing in a place where corrosive gases are easily generated due to strong acid or alkali. Do not make the waterproof housing in contact with chemical or corrosive objects, such as strong acid or alkali.
3. Do not put the waterproof housing in a place where temperature is high (50°C) or low (-10°C) for a long time to avoid deformation.
4. Do not expose the S71 video camera to sunshine for a long time to avoid deterioration of the waterproof performance.
5. Before use, ensure that the O-ring is intact, the seal is litter-free, the housing is fully sealed, and the buckle is tight.
6. After using the housing in sea water, wash it using fresh water, clean it, and dry it in a cool place.

Tips

1. When the unit is in used for long period, it is natural that its surface temperature will rise.
2. If you will not use the unit for long period, it is suggested that you charge it once every 6th month to maintain the performance of battery.
3. Use of digital zooming function during shooting will have slight impact on the image quality.
4. The visual angles under different modes will be slightly different.
5. To smoothly play a high-definition video file, it is suggested to use a PC or other professional device.
6. If you enable cyclic recording function for long period or frequently shoot/delete photos, the memory card may have data fragments so that you may not be able to store or shoot photos. Please back up the data to external storage medium and perform formatting operation to the memory card.
7. When the camera works in a high-temperature environment, the lattice screen may become black, which is a normal phenomenon and will not affect its function.

8. When the camera is used for a long time, the temperature of the metal parts near the lens may rise, which is a normal phenomenon; please do not touch the heated metal parts.
9. Hot plugging is not supported; in case of white screen, please restart the camera to return to normal.

FCC Notices

1. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
2. This device complies with Part 15 of the FCC Rules. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause.

 
harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





Please read this user manual carefully and thoroughly before any attempt to install and operate this product and retain it for your future reference.

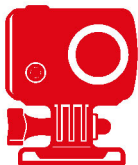

Recording Equipment



The leader of recording equipments