

## S206A Belt Blaster Personal Waistband Amplifier

### INCLUDED:

Belt Blaster Personal Waistband Amplifier; 44" Adjustable Belt, 12" Belt Extender, Carrying Case, Headset and Lapel Microphones

### OPERATING INSTRUCTIONS

1. Open the battery cabinet cover of the amplifier and insert 6 AA batteries (1.5V), Close the cabinet cover.
2. Put the amplifier on your waist, adjust the attached belt to fit, then clip the buckle.
3. Insert the \*screw-on jack of the microphone into the socket on the amplifier and turn the plug the collar clockwise onto the socket to secure the connection, then position your microphone adequately.  
 \*The screw-on jack prohibits the cable from inadvertently pulling out when moving around.
4. Rotate the ON/OFF switch clockwise, turn the volume up until the whistle can just be avoided. Now you are ready to use the Belt Blaster.



## S207A Belt Blaster PRO Personal Waistband Amplifier

### INCLUDED:

1. Belt Blaster Pro Personal Waistband Amplifier
2. 44" Adjustable Belt
3. 12" Belt Extender (not shown)
4. Headset Mic
5. Lapel mic
6. AC Adapter/Recharger
7. Carrying Case
8. Acoustic Neoprene Case
9. 6 NiMH rechargeable batteries



### INSERTING/CHANGING THE BATTERIES

#### About Nickel Metal-Hydride Batteries

The NiMH batteries of your new Belt Blaster Pro will have a life expectancy of approximately 2 years. Actual life will vary significantly depending on your usage and charging habits. There may be a time when you need to use back-up power to get through a presentation. The Belt Blaster Pro was intentionally designed to accommodate standard AA battery cells for just such occasions.

In the event you need to change the batteries of your Belt Blaster Pro, either for temporary use with disposable AA batteries or to install a new set of NiMH cells, follow these steps:

#### Remove existing batteries:

1. Locate the battery compartment on the right rear side of the amplifier.
2. Press (do not pry) the cover locking tab to the right and lift to remove battery cover.
3. Gently lift the red battery ribbon to loosen and remove all of the batteries.

#### Installing batteries:

1. Lace the red battery ribbon across the bottom of the batteries.
2. Install the 2 cells on the bottom row with negative contact (-) toward spring.
3. Install the 4 cells on the top row with battery positive contact (-) toward springs.
4. Insert anchor tabs of battery cover into case.
5. Lower cover down into case and press locking tab to left to latch cover.



NOTE: Only original Belt Blaster Pro NiMH batteries are to be charged in the unit. Attempting to charge disposable or not approved batteries may cause leakage and damage to the unit and void the product warranty.

## BATTERY REPLACEMENT

All 6 batteries MUST be replaced at the same time. Mixing old and new batteries can lead to battery failure.

## CHARGING BATTERIES FOR FIRST USE

Your new Belt Blaster Pro is shipped with 6 Nickel Metal Hydride rechargeable batteries installed. They must receive a deep charge (24 hours) before being used regularly. You may test the unit short term when you first get it. But charge the batteries fully to maximize performance.

1. Insert battery charger mini plug (AC adapter) into the charging port located on the bottom of the amplifier.
2. Plug the adapter into a working power outlet.
3. Charge the Belt Blaster Pro for 24 hours for the first charge. After this only an 8-14 hour charge is necessary.

## OPERATING INSTRUCTIONS

The unit is usually worn on the front of the waist much like a “waist pack” that would hold your wallet. The woven nylon waist band is adjustable to 44 inches. Larger waist dimensions can be accommodated by using the 12 inch extension. Remember to wear the Belt Blaster Pro so the speaker grill faces out or down to avoid feedback.

1. With the amplifier turned OFF, insert the 3.5mm microphone jack into the screw on jack on top of the amplifier.
2. Put the amplifier on your waist, adjust the attached belt to fit, then clip the buckle. Please take note of the path of the nylon belt through the clips. In the event that the belt is disassembled, it is imperative that the belt be correctly reinstalled.
3. Turn the amplifier ON by turning the volume to the 11 o'clock position while speaking at a consistent volume level
4. When you perceive your voice is loud enough, reduce the volume slightly. This is done because you are standing behind the speaker and your voice is considerably louder than you perceive.

## NOTE:

1. The transformer may be used to recharge batteries, and to power the amplifier simultaneously.
2. **Caution! The transformer should NEVER be used to power any amplifier with regular non-rechargeable batteries inside it. The non-rechargeable batteries should be taken out before the transformer is connected. Otherwise serious damage may be caused to the batteries.**

