

steady cool fluorescent

IUF-55

INSTRUCTIONS



Introduction

Congratulations on your purchase of the Angler IUF-55.

The Angler Steady Cool Fluorescent is a flicker-free fixture. It's a lightweight and inexpensive way to produce a soft, diffuse, and glowing light in the studio or on location.

Fluorescent bulbs are cool to the touch, so they're ideal for photographing subjects that are very close to the light source and affected by heat, like food or people. The IUF-55 features an air-induction cooling system that keeps everything at a comfortable temperature.

The Steady Cool has a flexible gooseneck stand adapter that makes it possible to mount the fixture to most light stands and easily position the light. The built-in barn doors provide control over your lighting. Though a built-in fuse is easily accessed the efficient electrical draw of the IUF-55 minimizes the chance of a blown fuse or overheated circuitry.

The Steady Cool includes daylight-balanced bulbs that produce light with a color temperature similar to daylight. Light output is maximized by the hammered silver, reflective surface on the barn doors.

Highlights

- ▶ Cool-running daylight balanced fluorescent lights
- ▶ Flicker-free lighting
- ▶ Lightweight fixture
- ▶ Built-in barn doors with hammered silver reflective surface
- ▶ Air-induction cooling
- ▶ Built-in fuse circuit protection
- ▶ Padded carrying case

Contents



● Two 55W 4-pin twin-tube daylight fluorescent bulbs

● Built-in barn doors with hammered silver reflective surface




- Also included:**
- ▶ AC power cord
 - ▶ 5 × 20 mm spare fuse
 - ▶ Soft padded carrying case
 - ▶ User manual

User Instructions

Mounting bulbs in the fixture

1. Disconnect the fixture from power source.
2. Remove the plastic retaining clip. (1)
3. Position the bulb with printed side of base end facing up.
4. Make sure the pins on bulb align with holes in base. (2)
5. Carefully slide the bulb into the base until the clip locks the bulb into place.
6. Be sure the bulb is securely locked into base. (3)
7. Replace the plastic retaining clip. (4)
8. Repeat steps 2 - 7 for each bulb.
9. Before you turn on the fixture for the first time, be sure that the fuse holder on the back of the unit is turned clockwise until tight. If it's loose, the lights will not illuminate.

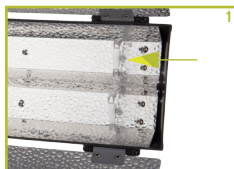

Removing bulbs from the fixture

1. Disconnect the fixture from power source.
2. Remove the plastic retaining clip. (5)
3. Push the metal clip on the base to release the bulb. (6)
4. Carefully pull the bulb out of base
5. Replace the plastic retaining clip.



SPECIFICATIONS

INPUT VOLTAGE	110 ~ 220 V 50/60 HZ
AMPERAGE	1.1 AMPS
BULB SWITCHING	ON/OFF ONLY
BULB TYPE	STANDARD 4-PIN TWIN-TUBE DAYLIGHT FLUORESCENT
DIMENSIONS	22.25" × 7" × 3.25" (56.5 × 17.8 × 8.2 CM)
WEIGHT (INCLUDING BULBS)	3.75 LB. (1.7 KG)

Warnings

- ▶ Handle fluorescent bulbs with care. See Note below.
- ▶ Dispose of fluorescent bulbs properly.
- ▶ Please read and follow these instructions, and keep this manual in a safe place.
- ▶ Keep this unit away from water and all flammable gases or liquids.
- ▶ Make sure the unit is powered off when plugging it into a power source.
- ▶ Use only the correct, recommended voltage.
- ▶ Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Impact will not be responsible for any damage.
- ▶ Handle the unit with care.
- ▶ Do not stare at the lights when they are powered on.
- ▶ Clean the unit with a soft, dry cloth.
- ▶ Keep this unit away from children.
- ▶ Use only parts provided by the manufacturer.
- ▶ Make sure the item is intact and that there are no missing parts.
- ▶ All photos are for illustrative purposes only.

Limited One Year Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com



Angler is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.

GG1