

Whitebox

INSTRUCTIONS



 **angler**[™]

Introduction

Congratulations on your purchase of an Angler Whitebox Octagonal Softbox!

Angler softboxes are designed to control and soften light for your specific photographic needs. This softbox is compatible with flash (strobe), fluorescent, and LED lighting sources. Do not use this softbox with “hot” lights such as quartz, tungsten, or HMI sources.


Angler octagonal softboxes come in 60-inch, 36-inch, and 18-inch sizes. The Whiteboxes have a matte white interior finish, which softens and diffuses the light. Each softbox has a front diffuser, which can be attached using touch fasteners. The diffuser can be removed to produce more intense light with increased contrast. The removable internal baffle will soften and diffuse light further when installed in the softbox. A speed ring (not included) is required to mount the softbox to a light.

The size of the softbox is related to the lighting effect produced — the larger the softbox, the softer the light. The distance from the softbox to the object being photographed also affects the quality of light produced — when the softbox is close to the object, the light will be more intense, with more contrast. When the distance is greater, the light will be more diffused, with less contrast. The removable interior baffle will also soften and diffuse light — you can subtract or add a degree of contrast through inserting or removing the baffle.

Highlights

- ▶ For strobe, fluorescent, and LED lights
- ▶ Matte white interior
- ▶ Removable, recessed front diffuser
- ▶ Removable inner baffle
- ▶ Fits most brands of speed rings and lights
- ▶ Accepts optional fabric grids

Contents

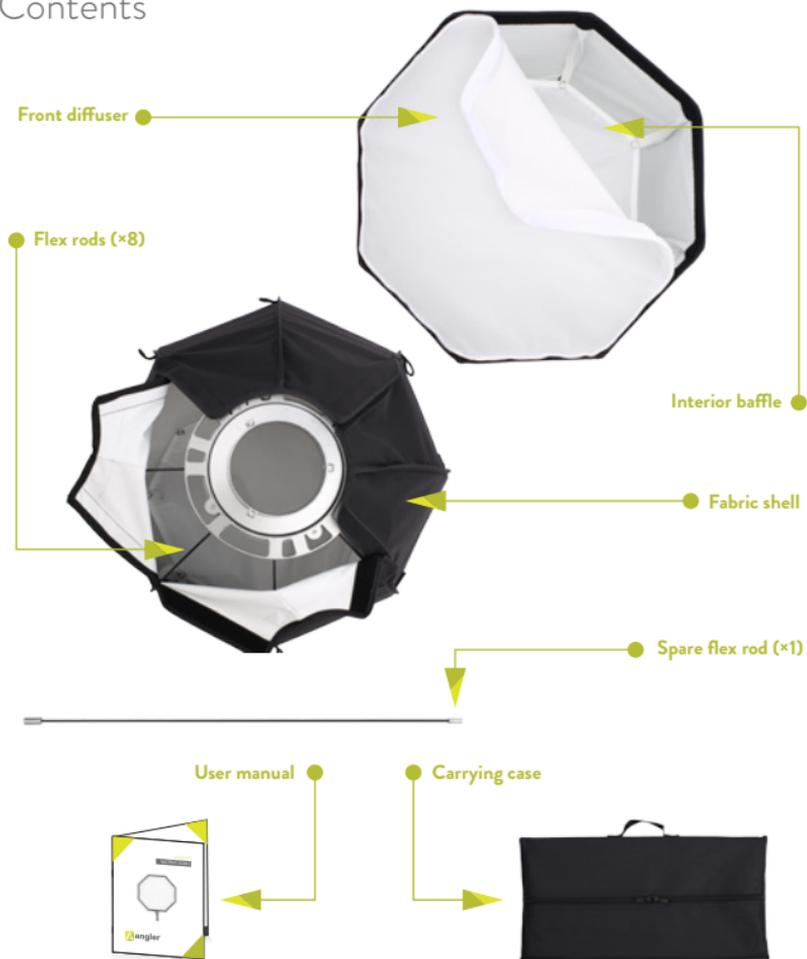


User Instructions

Please follow these instructions carefully when assembling your Angler softbox.

There are four parts to your softbox:

1. Fabric shell
2. Flex rods
 - 18" - Pre shaped
 - 36" - Standard
 - 60" - Heavy duty
3. Front diffuser
4. Removable internal baffle

A speed ring (not included) is required to assemble the Angler softbox and mount it to a light. Speed rings are available separately.

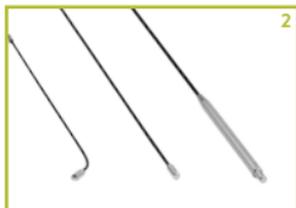

Assembling the Whitebox

1. Insert the small tip of a flex rod into the sleeve along the inner seam of the softbox shell. Slide the flex rod through the sleeve until the tip fits into the end of the sleeve in the front corner of the softbox. The large tip is now at the rear of the softbox shell. Repeat this step with the remaining flex rods.
2. With the speed ring's reflector mount facing away from the softbox, insert the end of a flex rod into a rod hole in the speed ring.
3. Locate the flex rod directly opposite the first flex rod installed. Insert the second rod into the corresponding rod hole in the speed ring, which is directly opposite the first rod hole used. Flex the rod gently but firmly until it is securely seated in the speed ring.
4. Insert the third and fourth flex rods into the speed ring in the same manner. As each flex rod is inserted, flex it gently but firmly into position until each rod is securely seated in the speed ring.



5. Continue in the same manner, always working in opposite pairs.

NOTE: The second pair of flex rods installed should be at a 90° orientation from the first pair so that a square framework is established.


6. Fold the flaps of the softbox shell over the speed ring and press down on the touch fasteners to close the back of the softbox.
7. If you are using the internal baffle, attach it to the interior now, using the straps with snaps that are built into the softbox.
8. Attach the front diffuser to the front of the softbox using the touch fastener, making sure the diffuser is in contact with the softbox all the way around its perimeter so no direct light can escape.
9. With your light unit's power off, mount the speed ring to the light unit according to its manufacturer's instructions.



Using an optional grid

An optional grid provides more control over the light of your softbox by producing a narrower beam of light than the softbox alone.

1. Be sure to install the softbox front diffuser at the rear edge of the softbox touch-fastener strip.
2. Press the grid's touch fastener firmly against the softbox's touch-fastener strip as smoothly as possible along the length of one side.
3. Repeat for the remaining sides of the grid, attaching sides in opposite pairs.

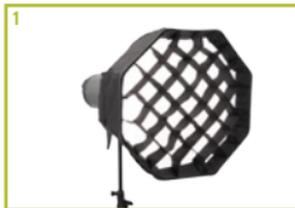

Disassembling the softbox

1. Turn off the power to your light head and disconnect the power cord from the power supply.
2. Allow time for the light unit, flex rods, and speed ring to cool off before proceeding.
3. Unmount the softbox assembly from the light head.
4. Pull the flex rods out of the speed ring using the same opposite rod pattern used in assembly.
5. You can leave the the flex rods, inner baffle and front diffuser in place if you wish. The softbox will roll up for storage with its diffuser and inner baffle in place.

Warnings

- ▶ Please read and follow these instructions and keep this manual in a safe place.
- ▶ Keep this unit away from water and any flammable gas or liquid.
- ▶ Handle this unit with care.
- ▶ Keep this unit away from children.
- ▶ Use parts provided by the manufacturer only.
- ▶ Make sure this item is intact and that no parts are missing.
- ▶ All photos in this manual are for illustrative purposes only.

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com



Angler is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.

GG1



anglerlights.com