

IPM-102

# iPad® Mini Microphone Stand Adapter

**Owner's Manual** 



#### Introduction

Thank you for choosing Auray.

The Auray IPM-102 iPad Mini Microphone Stand Adapter mounts your iPad mini onto a microphone stand's shaft or threaded mount, so you can view your iPad mini hands-free onstage or in the studio. The adjustable bracket ensures safe and easy support for your iPad mini, and the unique positioning system provides 180° tilt and 360° rotation for optimal landscape and portrait positioning. The IPM-102 is ideal for using your iPad mini for music scores, lyric charts, or apps during performances and recording sessions.

iPad is a registered trademark of Apple. Inc.

### Overview



### Instructions



### **Switching Mounting Adapters**

The IPM-102 comes with the threaded mounting adapter attached, but you can switch it with the clamp mounting adapter to mount your iPad mini on a microphone stand shaft.

To switch mounting adapters, follow these steps:

- Unscrew the adapter locking knob all the way and remove the bolt, washers, and threaded mounting adapter.
- Insert the clamp mounting adapter into the adapter socket, with the washers on either side of the adapter. Make sure the holes in the adapter, washers, and socket line up.
- 3. Insert the bolt into the square hole in the adapter socket, so the square bottom of the bolt head mates with the square shape of the hole. 2
- 4. Screw the adapter locking knob onto the bolt until secure.







## Mounting the IPM-102 to a Microphone Stand's Threaded Mount

To mount the IPM-102 to the threaded mount of a microphone stand, align the adapter's threaded socket with the microphone stand's threaded mount, and screw on the iPad mini adapter until secure.





## Mounting the IPM-102 to a Microphone Stand Shaft

To mount your IPM-102 to a microphone stand shaft via the clamp mounting adapter, follow these steps:

- 1. Open the clamp by loosening the clamp locking knob.
- 2. Fit the clamp around the microphone stand shaft.
- Close the clamp by tightening the clamp locking knob until secure.







#### Inserting Your iPad mini into the Bracket

To insert your iPad mini into the bracket of the IPM-102, follow these steps:

- Loosen the bracket locking knob and open the bracket to its widest extension.
- 2. If your iPad mini is in a case, remove it from the case. Insert your iPad mini bottom-first into the bracket. 6
- Close the bracket extension so it fits over the top corners of your iPad mini and firmly holds it in place.
- 4. Tighten the bracket locking knob until secure.





Important! Do not insert your iPad mini into the bracket until after you have successfully mounted the IPM-102 on to the microphone stand.

### Positioning the IPM-102

The rubber washers in the IPM-102 allow you to adjust the orientation and angle of the bracket without loosening and retightening the adapter locking knob. Make sure the adapter locking knob is tight enough to hold your iPad mini in place but not so tight that you cannot adjust the angle of the bracket.

### **Specifications**

Compatibility: iPad mini

Attachments: clamp and 5/8"-27 thread

Weight (with clamp mounting adapter): 8.8 oz. (250 g)

### Precautions /!



Please read and follow these instructions and keep this manual in a safe place.

- Do not attempt to disassemble or repair this product.
- Clean this product with only a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure that this product is intact and that there are no missing parts.
- Unless instructed otherwise, make sure not to unscrew any of the locking knobs all the way, or they will fall off.
- To avoid damage to this product, be careful not to overtighten or improperly thread any of the threaded fittings.
- Do not insert your iPad mini into the bracket until after you have successfully mounted the IPM-102 on to the microphone stand.
- All photos are for illustrative purposes only.

### One-Year Limited Warranty

Auray provides a limited warranty to the original purchaser that this product is free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. Auray's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at Auray's discretion, of any product that fails during normal consumer use. Inoperability of the product or part(s) shall be determined by Auray. If the product has been discontinued, we reserve the right to replace it with a model of equivalent quality and function.

To obtain warranty coverage, contact Auray to obtain a return merchandise authorization ("RMA") number, and return the defective product to Auray, along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, AURAY MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

© Copyright 2013 Gradus Group www.AurayAudio.com

