



SS-5220

Air-Assist Speaker Stand

Owner's Manual

Introduction

Thank you for choosing Auray.

Congratulations on the purchase of your new Auray SS-5220 Air-Assist Speaker Stand. The Auray SS-5220 Air-Assist Speaker Stand features a pneumatic center column that exerts air pressure to make it safe and easy for you to adjust the height of the stand without unloading the speaker. This makes it ideal for heavy speakers, because you can load the speaker onto the stand at a lower height than on conventional speaker stands.

The Auray SS-5220 Air-Assist Speaker Stand is made of durable steel that will support speakers up to 100 pounds, and features a height range of 59.5 to 82 inches. The center column fits 1^{3/8"} speaker mounts, and includes an adapter for 1^{1/2"} mounts.

Box Contents

- Auray SS-5220 Air-Assist Speaker Stand
- 1^{1/2"} mounting adapter
- Warranty



Instructions

Setting Up the Speaker Stand

1. Loosen the locking knob that attaches the legs to the center column of the speaker stand. **1**
2. Pull out each leg a little bit, then push down on the locking knob collar to spread the legs. **2**
3. Tighten the locking knob until the legs are secure. Be careful not to overtighten.
4. If your speaker has a $1\frac{3}{8}$ " mount, load the speaker onto the stand by fitting the speaker's mount onto the center column. If your speaker has a $1\frac{1}{2}$ " mount, fix the included $1\frac{1}{2}$ " mounting adapter onto the center column, and then load your speaker onto the stand. **3**



Adjusting the Height of the Speaker

Warning! If little or no weight is applied to the center column, it will rapidly rise. To avoid possible injury, keep your face clear of the center column.

1. After loading the speaker onto the speaker stand, pull the center column locking pin. **4**
Note: You may need to push down on the center column while pulling the locking pin.
2. Hold onto the center column grip and slowly loosen the locking knob to release the center column.
3. Adjust the height of the speaker by pushing the center column up or down.
4. When the speaker is at the desired height, tighten the locking knob until secure. Make sure to keep one hand on the center column to hold it steady.



Breaking Down the Speaker Stand

1. With one hand firmly holding onto the center column, loosen the center column locking knob. **5**
2. Lower the speaker by pushing the center column down.
3. Push the center column down until the pin locks into place.
4. Tighten the locking knob until secure.
5. Unload the speaker from the speaker stand.
6. Loosen the locking knob that attaches the legs to the center column of the speaker stand.
7. Collapse the legs, and tighten the locking knob until the legs are secure. **6**



Warnings

- Please read and follow these instructions, and keep this manual in a safe place.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Auray will not be responsible for any damage.
- Handle the unit with care.
- Make sure everything is secure before proceeding.
- Make sure the item is intact and that there are no missing parts.
- Before loading the speaker onto the speaker stand, make sure the center column of the stand will fit securely into the speaker's mount.
- Do not exceed the maximum load capacity.
- To avoid damage to your speaker stand, be careful not to overtighten the locking knobs.
- When raising the height of the speaker, always push up on the center column and not on the speaker. Pushing up on the speaker can cause it to fall from the stand and can result in damage and injury.
- All photos are for illustrative purposes only.

Specifications

Height Range – 59.5"–82" (151.13–208.28 cm)

Maximum Load Capacity – 100 lb. (45.36 kg)

Mount Size – 1³/₈" (1¹/₂" adapter included)

Construction – Steel

Weight – 10.2 lb. (4.63 kg)

One-Year Limited Warranty

This AURAY product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Auray Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Auray along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.aurayaudio.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

