

## PRECAUTIONS

- Please read and follow these instructions and keep this manual in a safe place.
- Keep this product away from children.
- Use only parts provided by the manufacturer.
- Make sure everything is secure before proceeding.
- Make sure that this product is intact and that there are no missing parts.
- To avoid damage to this product, be careful not to overtighten or improperly thread any of the threaded fittings.
- Do not exceed the maximum load capacity.
- All images are for illustrative purposes only.



## ONE-YEAR LIMITED WARRANTY

This Axler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Axler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Axler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.axlersupports.com](http://www.axlersupports.com) or call Customer Service at 212-594-2353.


Product warranty is provided by the Gradus Group.  
[www.gradusgroup.com](http://www.gradusgroup.com)

Axler is a registered trademark  
of the Gradus Group.

© 2016 Gradus Group LLC. All Rights Reserved.



[www.AxlerSupports.com](http://www.AxlerSupports.com)

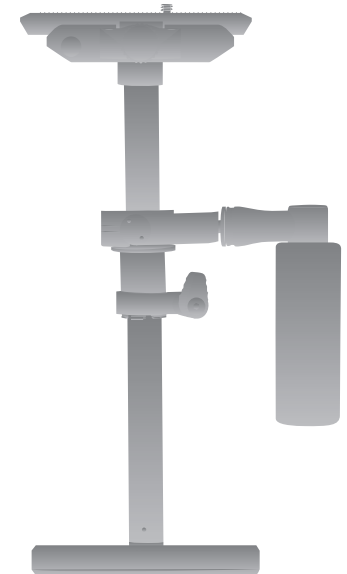

ROBIN

PRO 05R V2

QUICK-START  
GUIDE


## BEFORE YOU START

This quick-start guide contains some basic instructions for balancing the Robin Pro 05R V2 Stabilizer. Setting up a stabilizer like the Robin Pro 05R V2 is not complicated, but it takes some fine-tuning. **Don't feel discouraged if it takes a few tries to balance the stabilizer—a little patience goes a long way.**

Before you start, set up your camera in the exact way that you are going to use it when shooting with the stabilizer. For example, if you are going to use your camera's LCD panel, make sure to extend the panel before mounting your camera onto the stabilizer. Any change to the camera's balance will change its center of gravity, and make it necessary to readjust the stabilizer.

## OVERVIEW

1. Sled
2. Quick-release plate
3. 1/4"-20 mounting threads
4. Quick-release locking knob
5. Locking-pin release button
6. Forward/backward adjustment knob
7. Left/right adjustment knob
8. Handle
9. Center column
10. Gimbal
11. Gimbal locking collar
12. Counterweight

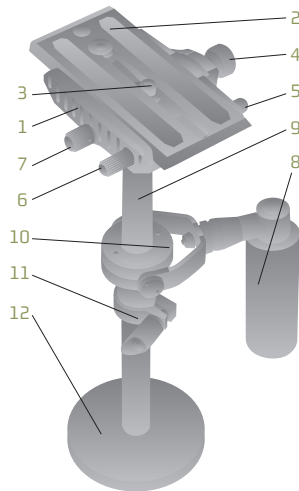

## SETUP

1. Remove the quick-release plate from the stabilizer by holding down the quick-release locking button. Slide the plate off the mount. (Fig. 1)
2. Mount your camera to the stabilizer's quick-release plate by lining up the 1/4"-20 threaded bolt and screwing it in clockwise. Some devices, like a cell phone, may need an additional mounting accessory for secure attachment.
3. With your device on the plate, hold down the quick-release locking button on the stabilizer mount and slide the plate back in. (Fig. 2)
4. Center your device as best as possible on top of the stabilizer by using the forward/backward and left/right adjustment knobs. (Fig. 3-4)

## BALANCING THE STABILIZER

1. Now it's time to balance your stabilizer. Grab the stabilizer's handle and see how it balances. It will likely not be perfectly level at first. (Fig. 3-4)
2. Adjust the height of the gimbal on the center column by loosening the gimbal locking collar and slide to the desired height. (Fig. 5)
3. Secure the gimbal by tightening the locking collar. Repeat these steps until the stabilizer remains vertically balanced while you hold it by the handle.

