

Warnings

- Use only as instructed.
- Do not disassemble or attempt to maintain this product yourself.
- The charger may become warm during use. This is not a malfunction.
- Connect this charger only to a compatible battery pack.
- This product is not water resistant. Keep it away from rain, snow, and humidity.
- Do not store or use this product at temperatures above 40°C / 104°F.
- Do not use if any wire in the cord is exposed as a result of damage or wear.
- Keep out of reach of children.
- Make sure the charger is firmly connected at both ends when charging your device.
- Unplug the charger from the socket on the battery pack when it is not in use.

Limited Warranty

Bolt provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, BOLT MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

Copyright © 2012 Gradus Group.

www.boltflashes.com

Bolt™




Inspiration strikes!

USB DEVICE CHARGER
User's Guide

Introduction

The Bolt USB-C Device Charger turns your Bolt Cyclone Battery Pack into a portable USB charger, so you can power up your USB-charging devices when you're out shooting. Ideal for items like your cell phone, MP3 player, or tablet, the USB-C will help give you the boost you need when there's no electrical outlet nearby.

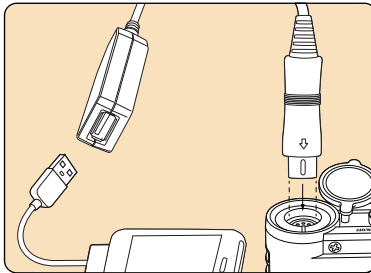

Instructions

1. Plug the six-pin battery connector end of the Bolt USB-C cable into the multifunction socket of the Bolt Cyclone Battery Pack.

Note: Make sure to align the pins in the cable with the corresponding holes in the socket. If the cable does not fit, do not force it in. Check the pins and try again.

2. Plug your USB charging cable into the device you need to charge, and then plug the other end into the female USB port of the Bolt USB-C cable.

Bolt[™]
www.boltflashes.com

Copyright © 2012 Gradus Group.