

P-touch<sup>®</sup>  
ELECTRONIC LABELING SYSTEM

**PT-D200**  
User's Guide  
English  
Español

With your PT-D200, you can create labels for multiple applications. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.

Read this manual carefully before starting and keep the manual in a handy place for future reference.



## Safety Precautions

### WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

Follow these guidelines to avoid the risk of fire, burns, injury, electric shocks, rupture, overheating, abnormal odours or smoke.

- Always use the specified voltage and the suggested AC adapter (AD-24ES) for the P-touch labeler to prevent any damage or failure.
- Do not touch the P-touch labeler during a lightning storm.
- Do not use the P-touch labeler/AC adapter in places of high humidity such as bathrooms.
- Do not overload the power cord.
- Do not place heavy objects on, or damage the power cord or plug. Do not forcibly bend or pull the power cord. Always hold the AC adapter when disconnecting from the power outlet.
- Make sure that the plug is fully inserted to the power outlet. Do not use an outlet that is loose.
- Do not allow the P-touch labeler/AC adapter/power plug/batteries to get wet, for example, by handling them with wet hands or spilling beverages on to them.
- Disconnect the AC adapter and remove batteries immediately and stop using the P-touch labeler if you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.
- Do not use a damaged or leaking battery as the fluid may get on your hands.
- Do not use a deformed or leaking battery or one whose label is damaged. There is a possibility of generating heat.
- Do not disassemble or modify the P-touch labeler/AC adapter/batteries.
- Do not allow a metal object to contact both the plus and minus ends of a battery.
- Do not use sharp objects, such as tweezers or a metallic pen, to change the batteries.
- Do not throw the batteries into fire or expose to heat.
- Disconnect the AC adapter and remove batteries immediately and stop using the P-touch labeler if you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.
- Do not use a damaged or leaking battery as the fluid may get on your hands.
- Do not use a deformed or leaking battery or one whose label is damaged. There is a possibility of generating heat.

## CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

Follow these guidelines to avoid personal injury, liquid leakage, burns or heat.

- When the P-touch labeler is not being used, store it out of the reach of children. In addition, do not allow children to put the P-touch labeler parts or labels in their mouths. If any object has been swallowed, seek medical attention.
- Do not touch metal parts around the print head immediately after printing.
- Do not touch the cutter blade.
- Leaked fluid from batteries gets on your skin or clothes, immediately rinse them with clean water.
- Remove the batteries and disconnect the AC adapter if you do not intend to use the P-touch labeler.
- Do not use a battery other than that specified. Do not use combinations of old and new batteries or combinations of different types, different charging levels, different manufacturers or different models. Do not insert a battery with its plus and minus ends reversed.
- Do not drop or hit the P-touch labeler/AC adapter.
- Do not press on the LCD display.
- Do not put your finger inside the P-touch labeler when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialized battery charger before using the batteries.

## General Precautions

- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the color of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.
- Do not use the P-touch labeler in any way or for any purpose not described in this guide. Doing so may result in accidents or damage the P-touch labeler.
- Use only Brother TZe tapes with the P-touch labeler. Do not use tapes that do not have the TZe mark.
- Only use a soft, dry cloth to clean the labeler; never use alcohol or other organic solvents.
- Use a soft wipe to clean the print head; never touch the print head.
- Do not put any foreign objects into the tape exit slot or AC adapter connector or battery compartment, etc.

- Do not place the P-touch labeler/batteries/AC adapter in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures (e.g., on the dashboard or in the back of your car) or high humidity, or in dusty locations.
- Do not apply excessive pressure to the cutter lever.
- Do not try to print if the cassette is empty; it will damage the print head.
- Do not pull the tape while printing or feeding; it will damage the tape and the P-touch labeler.
- Any data stored in memory will be lost due to failure or repair of the P-touch labeler, or the battery expiry.
- The P-touch labeler is not equipped with a charging feature for rechargeable batteries.
- The printed text may differ from the text that appears in the LCD.
- The length of the printed label may differ from the displayed label length.
- A protective clear plastic sticker it placed over the display during manufacturing and shipping. This sticker should be removed prior to use.
- When power is disconnected for more than three minutes, all text, format settings and any text files stored in the memory will be cleared.

### FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


**Important**

- Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

## BASIC USAGE


### Entering Text

#### Switching Upper Case/Lower Case

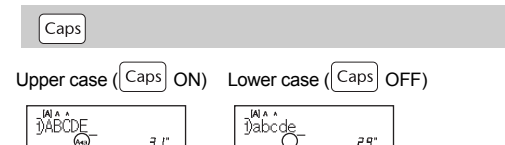

#### Making Two Lines of Text

Move the cursor to where the second line starts and press [Enter]. Use either 0.35" (9mm) or 0.47" (12mm) wide tape for two line text.

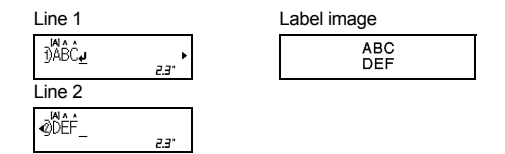


#### NOTE

- The return symbol (↵) will be displayed when the Enter key is pressed.

#### Entering Tab




- You can also set a tab by pressing [Tab]. To change tab length:

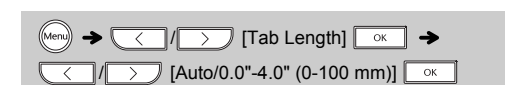

#### Entering Accented Characters

- Refer to the table of accented characters (B) on the enclosed insertion sheet for a list of available accented characters.
- To cancel operations, press [Esc].
- The order of accented characters differs by the selected LCD language.

#### Changing Label Length

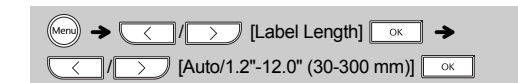

#### NOTE

- After the label is printed, cut along the printed dots (·) with scissors so that the label length matches the machine setting.
- If a specific label length has been selected, ⏏ also appears in the LCD.

#### To Clear

By pressing [Clear], the letters will be deleted one by one.

To delete all text and settings:



To delete text only:



## Printing Labels

### Preview


You can preview the text before printing.

- The print preview is a generated image of the label, and may differ from the actual label when printed.
- When the LCD cannot display all the text at a time, press [Left] / [Right] to display the hidden text.

### Feeding (Tape Feed)



### Printing

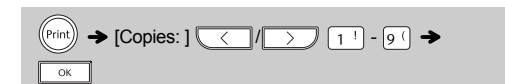


- If you need only 1 copy of the label, press [OK] without selecting the number of copies.
- The number of copies can also be specified by pressing a number key.
- To prevent damage to the tape, do not touch the cutter lever while the message "Printing..." or "Feeding..." is displayed.
- To cut off the label, push in the tape cutter lever on the upper-right corner of the machine.
- To remove the backing, fold the label lengthwise with the text facing inward, to expose the inside edges of the backing. Peel off the backing one piece at a time and apply.
- You can print up to 9 copies of each label.

### Using Print Options (Shift + Print)

#### [Numbering]


You can print many copies of the same text while increasing a selected number by 1 after each label is printed.

**Example:** To print copies of a label containing a serial number (0123, 0124 and 0125)

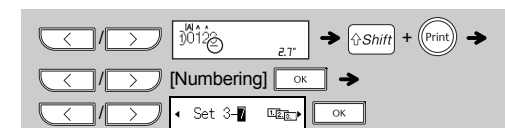

- Select the highest number you wish to be printed when setting the number.

#### [Mirror]

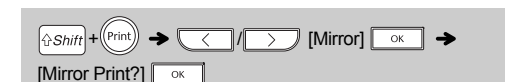

- The machine automatically turns off if no keys are pressed within five minutes.
- To cancel any operation, press [Esc].


## Saving Label Files

You can save up to 30 labels and recall them for printing at a later date. A maximum of 80 characters can be saved per file, a maximum total of 2400 characters for the total memory. You can also edit and overwrite the stored label.

### Save



### Print

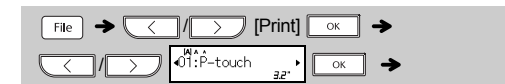

### Open



- You can also enter the File menu by pressing [Menu] + [F].


#### NOTE

If you try to store a label when there is already a label stored to that number, a message "Overwrite?" will appear. Press [OK] to save your new label. Press [Esc] to cancel.

## USING TEMPLATES

### Name Label

This function allows you to create various name labels using the built-in templates. Refer to the Name Label format table (D) on the enclosed insertion sheet.

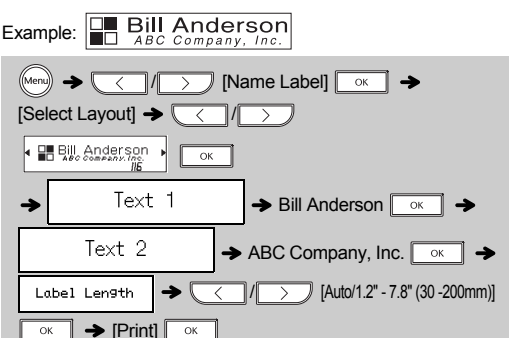

#### NOTE

- Depending on the format you have selected, the entire contents of your text may not be printed. For example, if you selected a fixed Label Length and the text is too long, an error message "Text Limit!" will appear.
- The templates cannot be edited.
- Only the highlighted symbols on the enclosed insertion sheet can be used in DECO MODE.

- To clear all text, press [Shift] and [Clear], then "Clear?" appears. Press [OK] to clear. Press [Esc] to cancel.
- When you access DECO MODE or Name Label function, your most recently printed DECO MODE or Name Label function text and label length will be recalled.
- Press [Esc] to return to the previous step.

## USEFUL FUNCTION KEYS

### Font Key [Font]

- Press [Font] to select the settings to enter the text.



- Press [Left] / [Right] to select the settings.

Font	A A	Helsinki	A 1
		Brussels	A 1
		US	A 1
		Florida	A 1
		Belgium	A 1
		San Diego	A 1
		Los Angeles	A 1
		Calgary	A 1
		HEL + Atlanta *	A 1
		HEL + Adams *	A 1
		HEL + Brunei *	A 7
		HEL + Istanbul *	A 1
		HEL + Sofia *	A 1
		HEL + Germany *	A 1
Size	A A <sub>a</sub>	Large	A
		Medium	A
		Small	A
Width	A A	Normal	A
		× 2	A
		× 1/2	A
Style	A A	Normal	A
		Bold	A
		Outline	A
		Shadow	A
		Solid	A
		Italic	A
		I+Bold	A
		I+Outline	A
		I+Shadow	A
		Vertical	A

- When [HEL + Atlanta], for example, is selected, the font for characters, including accented characters, will be Helsinki, and the font for numbers and some symbols will be Atlanta. Other combined fonts will be divided in the same way.

#### NOTE

- To cancel operations, press [Esc].
- Refer to the font sample table (F) on the enclosed insertion sheet.
- The actual printed font size depends on the tape width, number of characters and number of input lines. Once characters reach a minimum size, the selected font will default to a custom font which is based on the Helsinki style. This allows labels to print using the smallest text possible on narrow or multi-line labels.

### Frame Key [Frame]

Press [Frame] to select the frame design. Refer to the frame design table (E) on the enclosed insertion sheet.




#### NOTE

To cancel operations, press [Esc].

### DECO MODE

This function allows you to create unique labels by using built-in templates. Refer to the DECO MODE format table (C) on the enclosed insertion sheet.

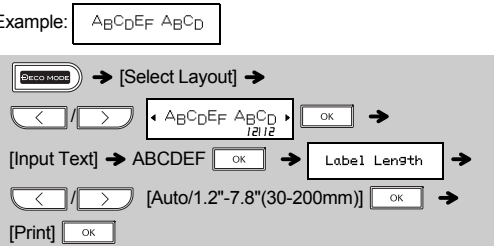


- To exit the DECO MODE or Name Label function and return to the text input screen, do one of the following:

- Press [Esc].
  - Press [Left] / [Right] to select [Cancel], and then press [OK] when "Print" appears.
- These features are only available when using 0.47" (12mm) wide tape cassettes.
  - The maximum label length is 7.8" (200mm) for DECO MODE and Name Label function.
  - When [Auto] is selected for "Label Length", the label will automatically adjust to the correct length for printing the text one time.
  - Press [Space] to return to the [Auto] setting for "Label Length" mode.

### Symbol Key [Symbol]

Press [Symbol] to select various symbols. Refer to the table of symbols (A) on the enclosed insertion sheet for a list of available symbols.

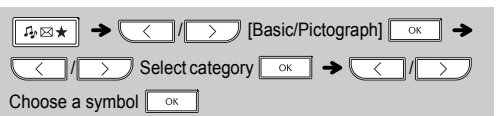

#### NOTE

- To cancel operations, press [Esc].

## Short Cut Keys

Language	[Menu] → [Space]	[Flag]
Label Length	[Menu] → [1]	[Label Length Icon]
Margin	[Menu] → [2]	[Margin Icon]
Name Label	[Menu] → [3]	[Name Label Icon]
File	[Menu] → [4]	[File Icon]
Tab	[Menu] → [5]	[Tab Icon]
Tab Length	[Menu] → [6]	[Tab Length Icon]
Clear	[Menu] → [Clear]	[Clear Icon]
Unit	[Menu] → [7]	[Unit Icon]

## Resetting the P-touch

You can reset the P-touch labeler when you want to initialize the settings, or in the event the P-touch labeler is not working properly.

- Turn off the P-touch labeler, hold down [Shift] and [R] and then press [Enter] to turn the P-touch back on.

- Release [Shift] and [R].

The P-touch labeler turns on with the internal memory reset.

#### NOTE

All text, settings and stored files are cleared.

Should you encounter any problems with your product, please do not return your product to the store! After referring to the User's guide, if you still need assistance, call Brother Customer Service at:  
Voice: 1-877-BROTHER  
Web: www.brother-usa.com  
Fax: 1-901-379-1210  
If you need to locate a service center, please call 1-877-BROTHER or visit us at www.brother-usa.com

**Declaration of Conformity**  
(Europe/Turkey only)  
We, BROTHER INDUSTRIES, LTD  
15-1, Naeshiro-cho, Mizuho-ku,  
Nagoya, 467-8561, Japan  
declare that this product is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC and 2009/125/EC.  
The Adapter AD-24ES is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC.  
The Declaration of Conformity (DoC) is on our Web site. Please go to <http://solutions.brother.com> -> choose region (eg. Europe) -> choose country -> choose your model -> choose "Manuals"-> choose Declaration of Conformity ("Select Language when required).