



D|FOCUS USER GUIDE

WELCOME



TABLE OF CONTENTS

- 1 CONTENTS & ACCESSORIES
- 2 **HOW TO:** USING WITH RAIL SYSTEM AND D|MOUNT
- 3 **HOW TO:** GEAR PLATE REVERSAL AND GEAR TENSION ADJUSTMENT
- 4 **HOW TO:** USING D|GEARS AND THE D|CRANK
- 5 PARTS VIEW

PACKAGE CONTENTS

1	D Focus v3	3	Logo Sticker
2	1/16 Hex Wrench	4	Info Sheet

OPTIONAL ACCESSORIES

D|GEAR

Standard 32 pitch (0.8 mod)
Universal Lens Gear

<http://www.dfocussystem.com/gears.html>



D|CRANK

Standard speed crank for D|Focus or other
follow focus

<http://www.dfocussystem.com/crank.html>



D|MOUNT

Quick rail-free D|Focus mount for
DSLR cameras

<http://www.dfocussystem.com/dslr.html>



HOW TO:

USING WITH A RAIL SYSTEM

First loosen the thumb nut located on the bottom of the rail mount. Then slide the rail mount on to the front of the rail system. Align the drive gear with the lens gear, and tighten the thumb nut.



▶ ONLINE TUTORIAL AVAILABLE

USING WITH THE D|MOUNT

First remove the rail mount. Then rotate the gear plate assembly 90 degrees relative to the slider. Attach the slider using the thumb screw included with the D|Mount. Align the drive gear with the lens gear and tighten the thumb nut.



▶ ONLINE TUTORIAL AVAILABLE

HOW TO:

REVERSING THE GEAR PLATE

First remove the reference wrench from the gear plate. Then remove the (2) 5/8 flat head cap screws from the gear plate. Flip the gear plate over, reinstall the two flat head cap screws and replace the reference wrench.



ADJUSTING THE GEAR TENSION

The gear tension can be adjusted using the nylon locknut on the drive shaft. D|Focuses ship with optimal tension and should not require adjustment out of the box. However with use over time it may be necessary to tighten or loosen the nylon locknut.



HOW TO:

USING D|GEARS*

First install the appropriate size legs for your lens. Then slide the D|Gear on to the front of your lens and secure to the focus ring using the thumb screw, rubber band, or zip tie.



 ONLINE TUTORIAL AVAILABLE

USING THE D|CRANK*


The D|Focus is equipped Arri standard accessory in the knob. To use the D|Crank or other standard accessory insert the connector into the port.



* OPTIONAL ACCESSORIES

PARTS VIEW

1	MARKING DISC
2	REFERENCE WRENCH
3	GEAR PLATE
4	5/8 FLAT HEAD CAP SCREW (X2)
5	NYLON LOCKNUT
6	MITER GEAR
7	KNOB SHAFT
8	DRIVE SHAFT
9	3/16 WASHER (X3)
10	DRIVE GEAR
11	SLIDER
12	1 1/4 CARRIAGE SCREW
13	RAIL MOUNT
14	THUMB NUT
15	GEAR PLATE MOUNT
16	3/8 FLAT HEAD CAP SCREW
17	KNOB

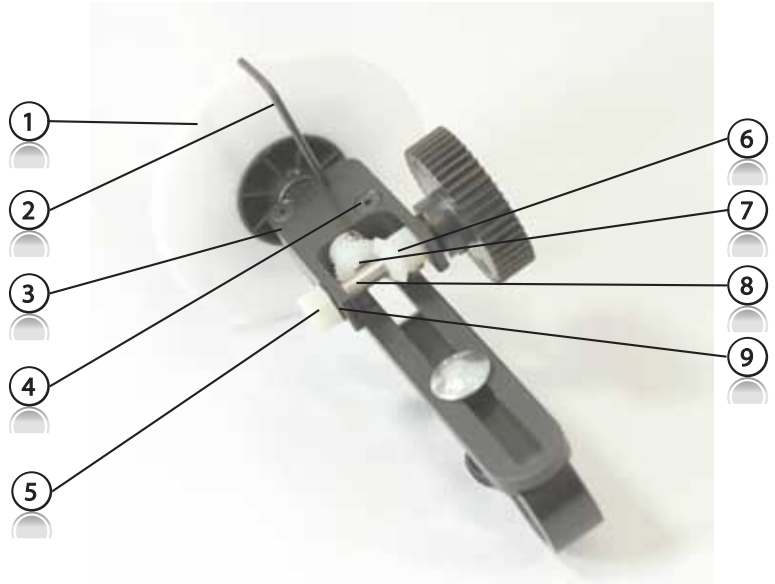

MORE INFO

- ▶ Video tutorials and guides available at: <http://www.dfocussystem.com/support.html>
- ✉ Questions or comments contact: dfocusinfo@gmail.com
- 🖱 Visit our webiste at: <http://www.dfocussystem.com>