

FIELDVISION BATTERY PLATE

USER MANUAL

FOR: CMP-C511A / CMP-CE6 CMP-NEL3 / CMP-SML



elvid

INTRODUCTION

Thank you for choosing Elvid. The Elvid Battery Plate for the Elvid CM-7 7" FieldVison Monitor will allow you to use the battery indicated on the package to power your CM-7 FieldVision LCD monitor.

By removing the battery plate that's mounted on the monitor and replacing it with this battery plate, you can use the indicated battery to power your CM-7 monitor.

PRECAUTIONS

- Please read and follow these instructions and keep this manual in a safe place.
- Keep this unit away from water and flammable gases or liquids.
- Handle this unit with care
- Clean this unit with a soft, dry cloth only.
- Keep this unit away from children.
- Use parts provided by the manufacturer only. •
- Make sure the item is intact and that there are no missing parts.
- Use only with designated battery.

The following battery plates are available for use with the Elvid CM7 7" FieldVision Monitor-

Elvid CMP-C511A Canon BP-511A Battery Plate for Sony L and M Series Battery Flvid CM7 Monitor

Elvid CMP-CE6 Canon LP-E6 Battery Plate for Flvid CM7 Monitor

Elvid CMP-SL Plate for Flvid CM7 Monitor

Elvid CMP-NEL3 Nikon EN-EL3e Battery Plate for Flvid CM7 Monitor

BOX CONTENTS

- Battery plate
- Battery plate adapter
- Four mounting screws
- User instruction manual
- Warranty



INSTRUCTIONS

- Turn the Elvid CM7 7" FieldVision monitor around so that the back of the monitor faces you.
- Remove the battery plate that's mounted to the back of the monitor by unscrewing the four screws holding it in place and taking it off the monitor. Set the old battery plate aside.
- The battery plate is open on one end to slide the battery into place. When the battery plate is mounted to the monitor, the open end of the battery plate must be the end closest to the top of the monitor.
- Position the new battery plate adapter with the battery plate in place of the old one, with the







screw-mounting holes positioned over the screw holes on the monitor. (Battery plate is pre-installed on the battery plate adapter.)

 Make sure that the connecting cable from the battery plate is positioned to the left of the plate, as shown in this image.



- When the battery plate is correctly positioned, use the four included screws to mount the plate to the back of the monitor. Tighten the screws securely, but do not over-tighten them.
- When the battery is placed in the battery plate, plug the connector cable into the connector on the upper left side of the back of the monitor.



elvid

LIMITED ONE-YEAR WARRANTY

Elvid provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later (the "Warranty Period"). Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN. ELVID MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

www.elvidcinema.com

Copyright 2013 Gradus Group LLC