

## GENUS PRODUCTS

Matte Boxes  
Hurricane Rig Systems  
Shoulder Mount Systems  
Support Bar Systems  
Adaptor Plates  
Adaptor Rings & Donuts  
French Flags  
DSLR Camera Accessories  
and more


## WARRANTY



Your Genus F3 Cheeseplate  
is covered by a one year warranty from the date of purchase.  
Full terms and conditions of warranty can be found on our website

**[www.genustech.tv](http://www.genustech.tv)**

Date of Purchase

Dealer

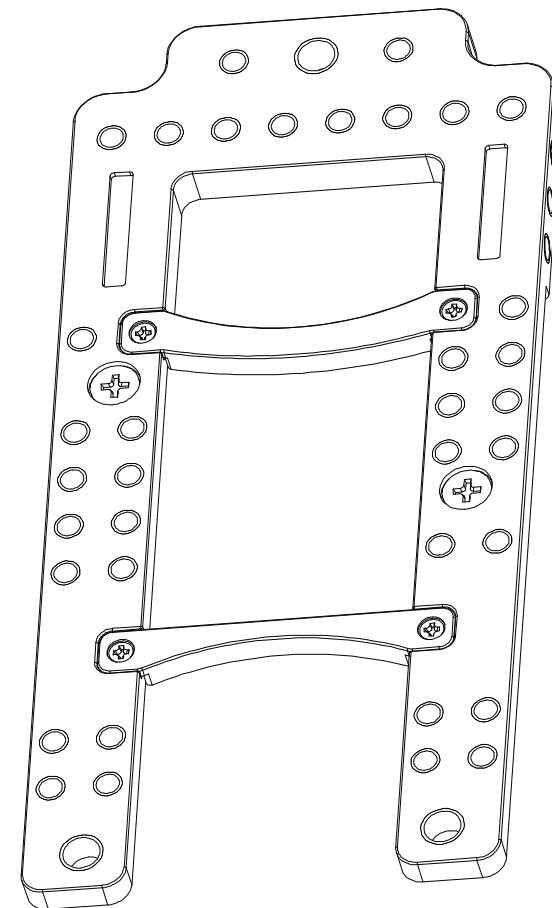

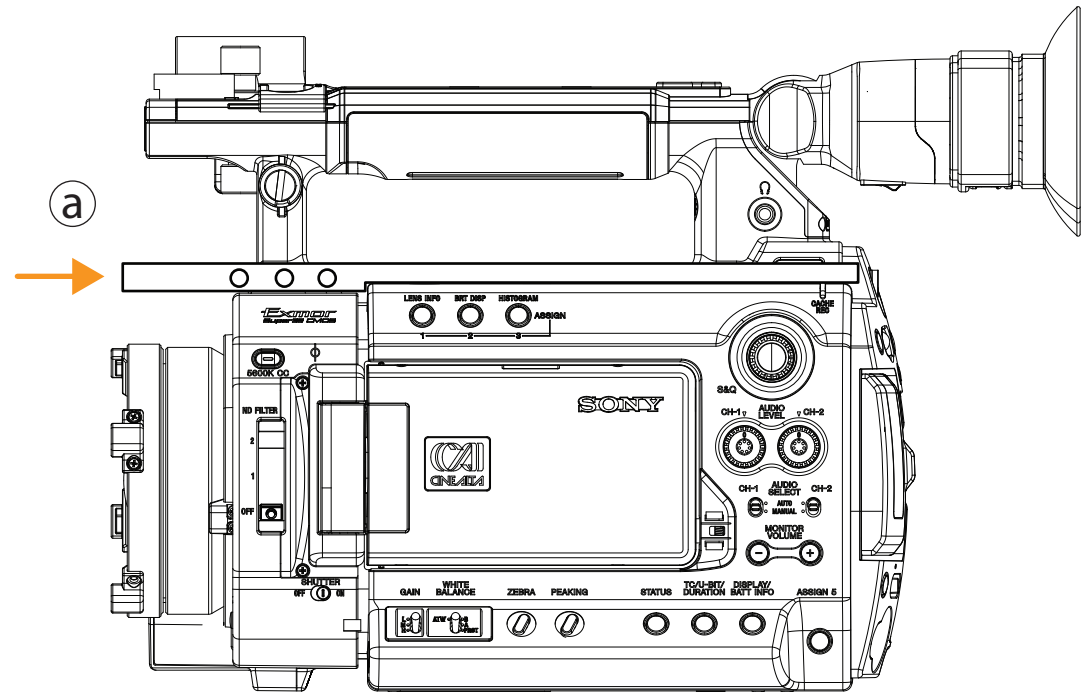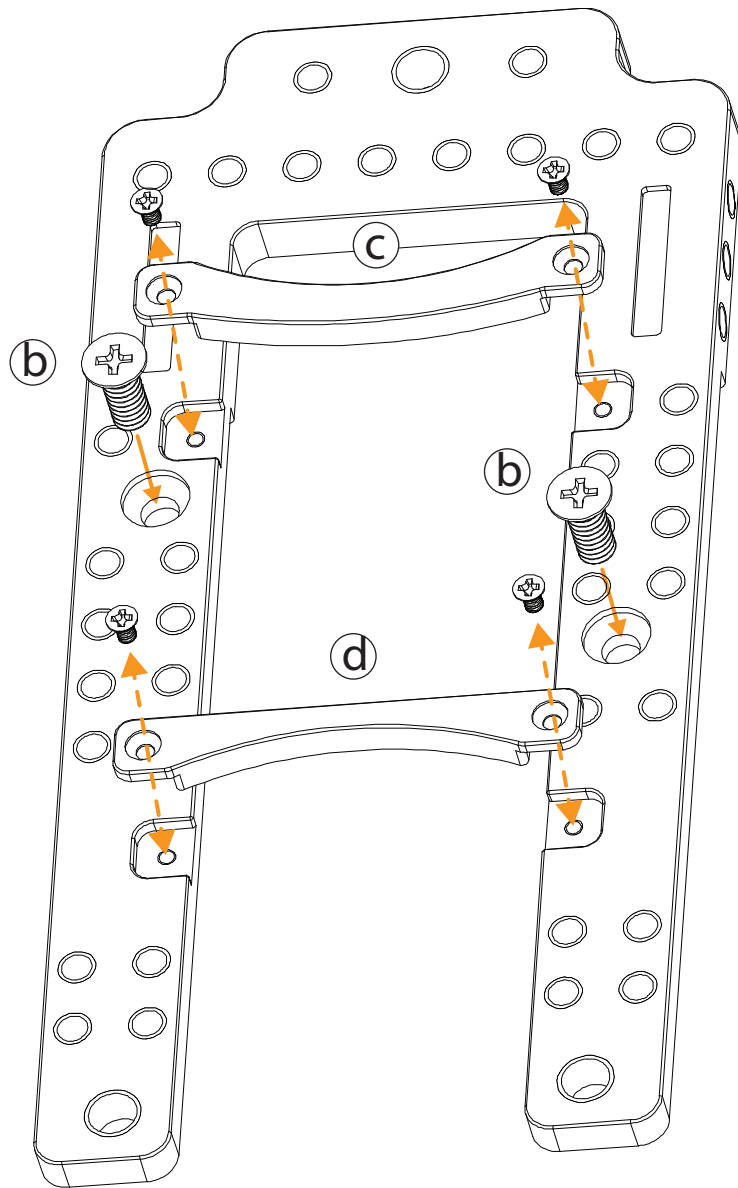

- 1 Loosen all screws on the F3 Cheeseplate.
- 2 Slide the F3 Cheeseplate (a) on the SONY F3 Camera.
- 3 Tighten two 3/8" Screws through the screw holes on the F3 Cheeseplate (b) and the SONY F3 Camera.
- 4 Put the Front Cheese Bridge (c) on the F3 Cheeseplate and tighten with two screws.
- 5 Put the Back Cheese Bridge (d) on the F3 Cheeseplate and tighten with two screws.
- 6 Attach your Camera Accessories through the 1/4" and 3/8" screw holes on the F3 Cheeseplate.