iB**IIIWER**®

USER MANUAL

HIGH-IMPACT SELFIE STICK



Thank you for purchasing the iBower IBO-MTB1000B. Before use, please read the instructions below.

INCLUDES:

- 1. Selfie Stick x1
- 2. Smartphone adapter clip x1
- 3. Mount adapter for GoPro® x1
- 4. Aluminum thumb screw x1
- 5. USB charging cable x1
- 6. Tether with wrist strap x1

FEATURES:

- Supports iOS 4.0 and Android 3.0 operating systems
- Highly durable, lightweight and compact (collapses to 9.5")
- Effortless tilt design for seamless angle adjustments
- Wireless trigger button for image and video capture
- Ergonomic handle for comfortable, balanced hold
- Standard ¼"-20 mount on bottom securely mounts to monopods & tripods

NOTE:

Recommended to fully charge selfie stick before first use.

PRODUCT FUNCTIONS:



CHARGING INSTRUCTIONS:

- 1. Unscrew the Selfie Stick bottom cover with wrist strap to locate the charging port. Connect the Micro USB side of the included charging cable into the Selfie Stick charging port.
- 2. Plug the USB side of the included charging cable into your computer's USB port or an AC adaptor to charge the Selfie Stick.
- 3. It can take up to 1 hour to fully charge the Selfie Stick. The indicator light inside the charging port will be red when charging and turn off when fully charged.

HOW TO USE:

- 1. Press down the power button for three seconds until blue indicator light flashes
- 2. Turn on Bluetooth on your smartphone device
- 3. Locate and select "iBower" Bluetooth option
- 4. Open camera app and begin taking photos with "Shutter Button"

Ouick Tip: The Micro USB charger port is located on the bottom of the stick, which is protected and blocked by the bottom cover when it is attached.



Apple iOS and



Nount Adapter

COMPATIBILITY:

The Selfie Stick supports iOS 4.0 and above, Android 3.0 and above.

SPECIFICATIONS:

- Max load capacity: 1.10 lbs.
- Range of motion: 180° vertical / 360° horizontal
- Extension range: 9.5 to 40 inches (24-101cm)
- Charging voltage: 5V
- Estimated charging time: 1 hour

©2015 S, Bower, Inc. All rights reserved. All rights reserved. No portion of this package may be reproduced or transmitted in any form or by any means without the express written permission from S. Bower, Inc. Unauthorized reproduction or distribution of this package, design, or any portion of it will be prosecuted to the maximum extent possible under law.

iPhone and iOS is a trademark of Apple Inc., registered in the U.S. and other countries Galaxy is a trademark of SAMSUNG, registered in the U.S. and other countries Android is a trademark of Google Inc., registered in the U.S. and other countries All brand names and trademarks belong to their respective owners S. Bower, Inc. LIC, NY 11101 www.BowerUSA.com



