

impact™



Digital Light Shed
INSTRUCTIONS

Thank you for choosing the Impact Digital Light Shed. This tabletop shooting enclosure features a high-quality translucent cloth material housing, perfect for photographing jewelry, glassware, and other highly reflective objects. It's also perfect for generating consistently illuminated images for catalogs or e-commerce. The translucent material will dramatically reduce unwanted reflections and give you soft, nearly shadowless lighting. The Impact Digital Light Shed can be lit with electronic flash, fluorescent, or tungsten light sources. It can be lit from the sides, top, back, front, or can be placed on a shooting table for bottom illumination. The Impact Digital Light Shed includes removable white plastic bases and black and white sweeps, giving you a choice of backgrounds. Please read these instructions carefully on how to assemble and then break down your Impact Digital Light Shed.

Key Features

- Lighting is made simple and efficient, taking less time than conventional lighting solutions
- Portable with easy setup and breakdown
- Dual zippered front and side panels for camera lens positioning
- Bottom panel peels back on all four sides for easy positioning of objects inside

Contents

Your Impact Digital Light Shed kit contains the following:

- Shooting enclosure
- Two translucent bases
- White fabric sweep
- Black fabric sweep
- Storage bag
- User manual



Setting Up Your Digital Light Shed



Remove the digital light shed from its storage bag.



The sides of the light shed are folded together into layers.



Peel one layer from the other as if you were opening a book.



The light shed is now open halfway.



Grab an inside corner and pull out.



The light shed will pop open completely.



Peel the touch fastener cover away from the opening. This opening gives you access to set up the scene inside the shed.



Inside the digital light shed are two translucent surfaces, which you can use as base or background for your scene.



Your kit also includes white and black sweeps, giving you more choices for background.




The sweeps can be secured at the touch-fastener corners.



You can remove the cover completely and place the light shed over your scene. Or light your scene through a translucent tabletop.



Place your lighting as desired. Here the shot is set up with the cover removed. This open set-up gives you many choices for camera angles.

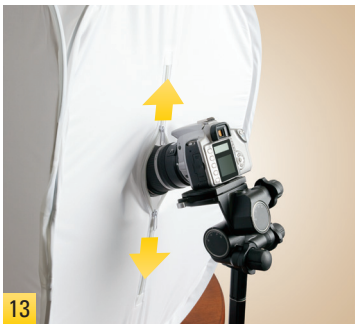

The dual zippers allow you to place the camera high, low, or in the middle of the light shed.



Turn the light shed on its side to shoot wider scenes. Keep the opening closed to minimize reflections.



You can shoot through the smaller opening on the end of the light shed if you want a deeper scene.



Take the shot. Note the soft shadows and the absence of distracting reflections in the chrome.

Breaking Down Your Digital Light Shed



You can leave the translucent bases inside the digital light shed. Lay them flat inside.



To fold the light shed, push one edge of the shed to the opposite edge.



Continue folding until one side lies flat.



Fold the standing side onto the flat side. Your digital light shed is now ready to go back into its protective carry bag.

Specifications

Small (DLS-S)	10.5 × 10.5 × 13.5"	(27 × 27 × 34 cm)	2.2 lb	(1 kg)
Medium (DLS-M)	15 × 15 × 23"	(38 × 38 × 58 cm)	5 lb	(2.2 kg)
Large (DLS-L)	18 × 18 × 27.5"	(46 × 46 × 70 cm)	5 lb	(2.2 kg)
X-Large (DLS-XL)	24 × 24 × 36"	(61 × 61 × 91 cm)	11 lb	(5 kg)

One-Year Limited Warranty

This IMPACT product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Impact Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Impact along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.impactstudiolighting.com or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.
www.gradusgroup.com

IMPACT is a registered trademark of the Gradus Group.
© 2014 Gradus Group LLC. All Rights Reserved.