



Wall-Mounted Boom Arm
INSTRUCTIONS

Precautions △ ≶

- Do not exceed the maximum load capacity.
- Always engage safety locks and devices where applicable.
- Product should be used between -22°F and 140°F (-30°C and 60°C) only.
- Please read and follow these instructions, and keep this manual in a safe place.
- Keep this unit away from water and flammable gases or liquids.
- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Impact will not be responsible for any damage.
- · Handle the unit with care.
- Clean the unit with a mild detergent and a soft cloth.
- Keep this unit away from children.
- Use only parts provided by the manufacturer.
- Be certain that the boom arm is securely attached to the wall before proceeding.
- Make sure the item is intact and that there are no missing parts.
- All photos are for illustrative purposes only.

Introduction

Thank you for purchasing the Impact LSA-BAWMBL Wall-Mounted Boom Arm. When this boom arm is securely mounted to a wall, you have a quick and safe way to mount a light or camera without setting up light stands or taking up valuable floor space. A 5/8″ socket at the end of the arm holds a reversible stud with 1/4″ and 3/8″ male threads. The boom arm can extend from 48″ to 87″ and handle a load of up to 8 lbs. when fully extended. The arm offers a pan movement of 180° as well as a tilt movement of 180°.

Contents Include

- Telescoping boom arm
- 5/8" stud with reversible 1/4"-20 and 3/8" male threads
- Removable cable clip

- Allen key
- Mounting hardware
- Mounting instructions
- One-Year Limited Warranty

| Specifications | |
|--|---|
| Boom length minimum | 48" (123 cm) |
| Boom length maximum | 87" (221 cm) |
| Maximum recommended load at full extension | 8.0 lb. (3.6 kg) |
| Pan movement | 180° |
| Tilt movement | 180° |
| Attachment type | two-position 5/8" removable stud with 1/4"-20 and 3/8" male threads |
| Weight | 5.0 lb. (2.3 kg) |

3

Mounting a light to the boom arm

Securely mount the boom arm to the wall. Be certain that the wall will support the weight of the boom arm plus whatever you plan to mount on the boom arm.



 Loosen the locking knob and remove the mounting stud from the end of the boom arm.



- Mount the light to the 1/4" or 3/8" end of the mounting stud.
- With the light mounted, replace the stud at the end of the boom arm and handtighten the locking knob.

Operating the boom arm



 To raise or lower the boom arm, loosen the ratchet handle and push the boom arm up or down to the desired position. Lock the position by hand-tightening the ratchet handle.



Note: If tightening the ratchet handle does not securely lock the position of the boom arm, you may use the included Allen key to tighten the two Allen screws in the base riser collar. This will lock the position securely. To change the position of the boom arm again, you will have to first loosen the Allen screws.

Operating the boom arm



2. To move the boom arm to the left or right, simply move the hinge on the base of the boom arm to the desired position.

Operating the boom arm



3. To extend the boom arm, loosen the locking knob and pull the extension section of the arm out to the desired position. With the locking knob loosened, you can also rotate the extension section to position the light at the desired angle.

Note: In order to prevent accidents, always keep one hand on the light when changing the position of the boom arm. Never exceed the load capacity of 8 lbs.

One-Year Limited Warranty

Impact provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use.

To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number.

This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, IMPACT MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.

© Copyright 2013 Gradus Group

To see all of our lighting equipment, please visit our website.

