


# SPORT-FI M6 AND M6P

In-Ear Sports Headphones  
with Memory Wire


ENGLISH

visit [www.meelec.com/fit](http://www.meelec.com/fit)  
for fitment video and additional info

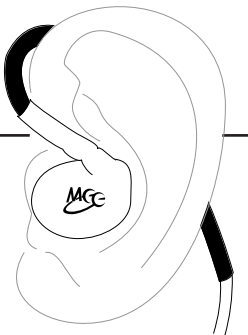

## HOW TO WEAR SPORT-FI CORRECTLY

Incorrect wear will result in poor fit and sound!

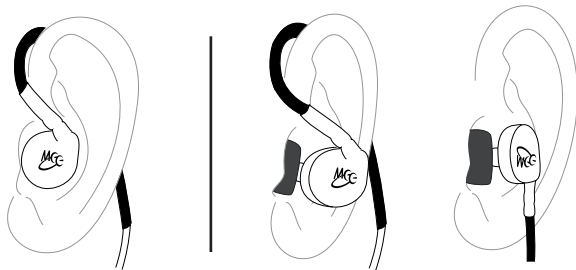

**CORRECT**  
cable over-the-ear  
and earphone flush  
in the ear

**INCORRECT**  
earphone  
not flush  
in the ear

**INCORRECT**  
cable  
hanging  
down

## EAR TIPS: SELECT CORRECT SIZE

If you your music sounds tinny or lacks bass, try different ear tips.



6 sets of ear tips are included to ensure you get  
the best fit, comfort, and sound.


Select ear tips that:

- Allow the earphone to fit flush in your ear
- Seal with your ear canal and reduce outside noise when inserted

Install ear tips as shown. Make sure ear tip is installed tightly before use.



## FIRST USE: MEMORY WIRE CONFIGURATION

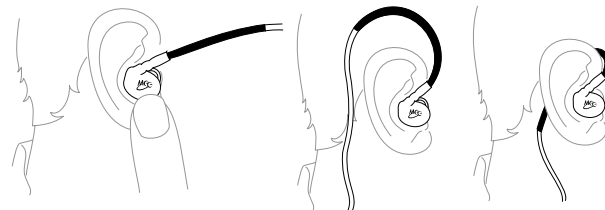

**1.**  
With memory wire straight,  
put the earpiece in your ear  
and move it around until it  
seals in your ear canal and the  
earphone is flush in your ear.



**2.**  
Bend the memory  
wire around your  
ear.

**3.**  
The cable should hang  
down. The fit should be  
comfortable and secure.

For a demonstration, visit [meelec.com/fit](http://meelec.com/fit)  
Contact [support@meelec.com](mailto:support@meelec.com) if you have any issues.

## CABLE MANAGEMENT

Tighten the cable cinch and use the shirt clip to control cable movement during activities

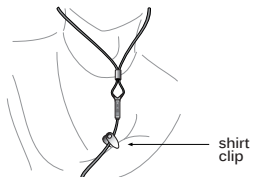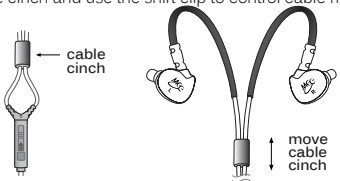

## MICROPHONE & REMOTE USE (M6P ONLY)

The M6P model includes an inline remote with a built-in microphone, button, and universal volume control.

Most smartphones are compatible with the remote and additional functions are available with Apple® and some Android™ devices.


Visit [meelec.com/phone](http://meelec.com/phone) for complete compatibility and functionality.

Button Functionality for iPhone® and Android phones:

Phone Mode	Button Press	Action
Incoming phone call	Single Press	Answer phone call
Phone call in progress	Single Press	End call

Volume Control:

For maximum volume,  
move the slider to  
the + position

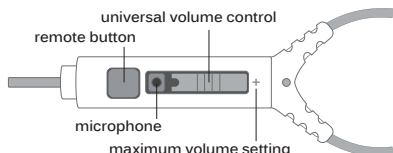

## REMOVAL AND REINSERTION DURING WORKOUT USE:


If you must remove and reinsert the earphones while working out, dry your ears before reinsertion to avoid getting sweat in the nozzle. Sweat will cause the earphones to slip out and may lead to a temporary reduction/loss of sound.

## CARE AND CLEANING

- Do not remove from ears or headphone jack by pulling on the cable.
- Use the included carrying case when not in use.

## CLEAN REGULARLY AS FOLLOWS:

- Put a small amount of rubbing alcohol or hydrogen peroxide on a cotton swab
- Remove the ear tips from your earphone and push the cotton swab through the center of the ear tips.
- Clean the outside of the ear tips
- Swab around the nozzles of the earphones
- Wait for the earphones and ear tips to dry completely
- Put the tips back on the earphone

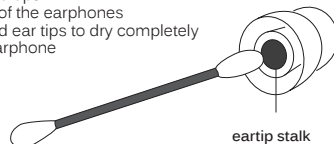

## WARNING

Using headphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Visit [www.osha.gov](http://www.osha.gov) for more info.

## SAFETY TIPS

It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

## TROUBLESHOOTING

Visit [meelec.com/troubleshooting](http://meelec.com/troubleshooting) for solutions to common issues.

## WARRANTY

MEElectronics earphones purchased from authorized retailers are covered by a manufacturer warranty.  
Visit [meelec.com/warranty](http://meelec.com/warranty) for warranty information.