



# Oben™

## LH-2510

Leveling Base Head



You're on steady ground™

### Thank You for choosing Oben!

The Oben LH-2510 is a durable leveling base head that is a superb solution for leveling a camera or camcorder independently of the tripod. It provides smooth and accurate leveling of a tripod head up to ten degrees in any direction.

 
This leveling base head is designed for use with tripods that don't have built-in levels. The integrated bubble level allows for precise leveling of the camera, and the fluid motion of the adjustable base ensures that the camera won't slip when retightening. Hex screws that let you tighten the camera to the base assure a secure attachment.

The LH-2510 comes with a 3/8"-16 bottom socket for easy tripod attachment, and a 1/4"-20 top stud for camera attachment. Additional bushings are included to make the bottom socket and top stud compatible with most tripods, cameras, and camcorders.


When the terrain or lack of time prevent adjusting each leg of a tripod, the LH-2510 allows for precise angle adjustment and a secure lock down once you have set the level.


Key Features	4
Specifications	5
Operation	6
Mount Base to Tripod	5
Mount Camera to Base	6
Leveling the Camera	6
Warnings	7

## KEY FEATURES

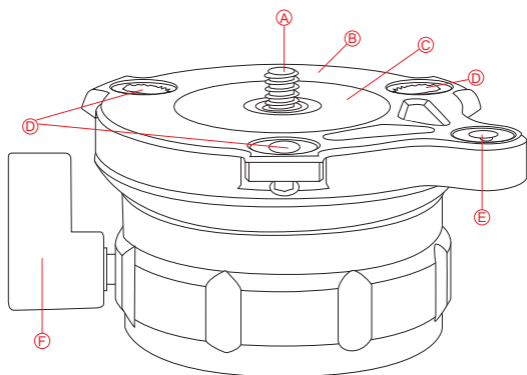

  - Ⓐ 1/4"-20 threaded mounting post
- Ⓑ Fluid head (10° adjustment)
- Ⓒ Rubber mounting pad
- Ⓓ Tightening screws
- Ⓔ Bubble level
- Ⓕ Ratchet-style tightening screw
- Ⓖ Rubber base pad
- Ⓗ 3/8"-16 threaded mounting socket
- Ⓘ 1/4"-3/8" bushing
- Ⓝ 3/8"-1/4" bushing
- Ⓚ Allen wrench

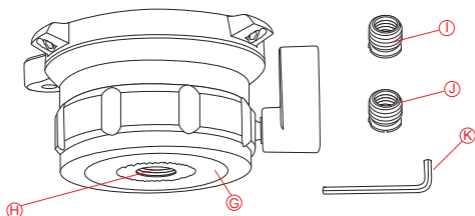

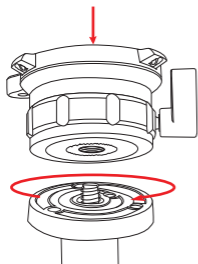

## 1. Mount Head to Tripod

Screw the leveling base head into the tripod until it is tight.

**Note:** If the tripod has a 1/4"-20 threaded post, first screw the 3/8" - 1/4" bushing into the bottom socket and tighten with a flat head screwdriver. Then screw the base head into the tripod.

## 2. Mount Camera to Base

 
Once the base head has been securely attached to the tripod, attach the camera with the following steps:

1. Screw the camera into the threaded post of the base until it is tight.

**Note:** If the camera has a 3/8"-16 threaded socket, screw the 1/4" - 3/8" bushing onto the threaded post of the base. Then screw the camera onto the post until it is securely tightened.

2. Secure the camera by tightening the three screws around the base platform with the Allen wrench.

**Note:** do not overtighten the screws. Doing so can cause damage to the camera.



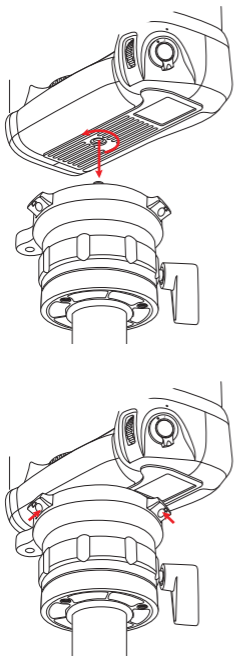


### 3. Leveling the Camera

1. Turn the locking knob counterclockwise to loosen the leveling base.
2. Looking at the bubble level, adjust the level of the base until the bubble rests in the center of the circle.
3. Turn the locking knob clockwise to tighten and secure the leveling base.

**Note:** If it is difficult to operate the locking knob due to the proximity of the camera, utilize the ratchet function of the locking knob:

   - Pull the knob out away from the base head, and turn it to a position where you can operate it without contacting the camera.

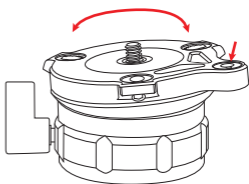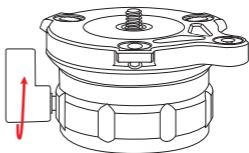

### Specifications

Bottom diameter	2.5" (6.3 cm)
Platform diameter	2.75" (7.0 cm)
Height	2.0" (5.1 cm)
Weight	11.0 oz. (312 g)
Maximum load	25 lb. (11.3 kg)
Adjustment range	10° any direction

**Warnings:**

- *Please read and follow these instructions, and keep this manual in a safe place.*
- *Do not attempt to attach the base head to a tripod with the camera attached.*
- *Remove the camera from the head during setup or transport.*
- *Do not exceed the head's maximum load capacity of 25 lbs. (11.3 kg).*
- *Ensure that all appropriate locks are engaged when necessary.*
- *Do not operate in salt water. Dry the head if it becomes wet.*
- *Avoid long-term exposure to sunlight (to prevent damage to your camera).*
- *Keep out of reach of children.*

Visit our website at **ObenSupports.com**  
for more Oben products.



© Copyright 2014 The Gradus Group  
All other trademarks are the property of their respective owners