



# OP/TECH USA®

304 Andrea Dr. • Belgrade, MT 59714 • USA

800-251-7815 • info@optechusa.com

www.optechusa.com

## TRIPLE CARRIER™ Instructions & Care

Thank you for purchasing the OP/TECH USA **TRIPLE CARRIER™**. It can be configured to carry one, two, or three different pieces of gear, from cameras to binoculars. You can even carry your tripod with the addition of a set of OP/TECH USA **SYSTEM CONNECTORS™-TRIPOD LOOPS** (sold separately).

The **TRIPLE CARRIER™** consists of the following components:

**A** - a neoprene yoke with internal comfort-stretch elastic and a non-skid surface backing

**B** - six (6) Uni-Loop Connectors, three (3) male and three (3) female


**C** - two (2) webbing slings for use on both sides of the **TRIPLE CARRIER™**

**D** - a pair of center straps

**E** - a pair of 3/4" wide Torso Straps for added stabilization  
adjustable from 26" - 57" (66 - 144,8 cm)


**F** - a 3/8" wide Under-Arm Retaining Strap  
adjustable from 12-21" (30,5 - 53,3 cm)

Please note that all these parts come pre-assembled except for the under arm retaining strap.

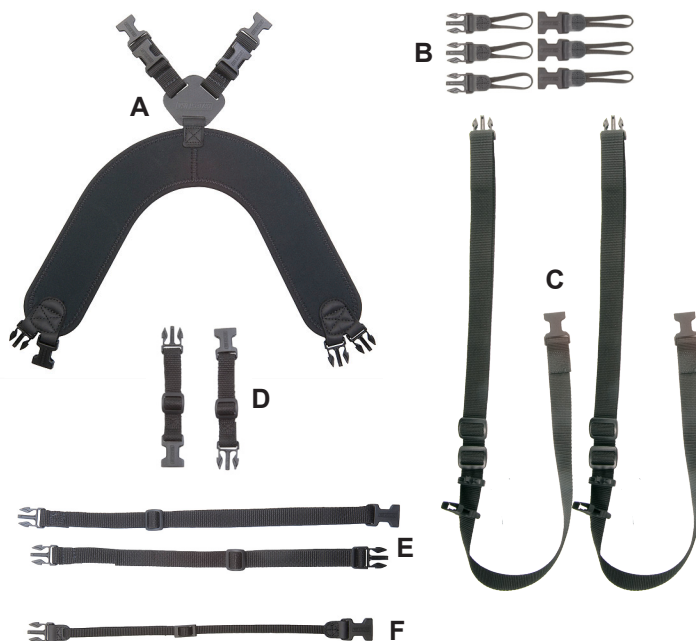

1. Attach the male Uni-Loop connectors to the right-hand sides of your cameras or binoculars.

The female Uni-Loops attach to the left-hand sides of your gear. (Most cameras will only need to engage one Uni-Loop connector when used on a sling.)


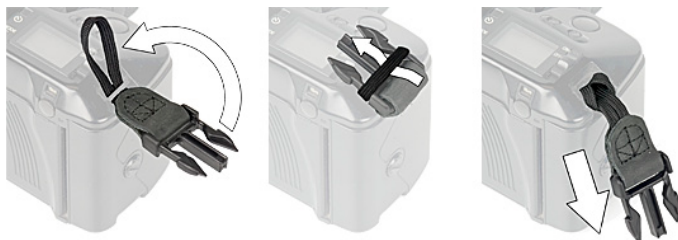


2. Attach the Uni-Loop connectors to the mating quick disconnects. A camera carried on the right side sling will most often only need to be connected via the right Uni-Loop connector on the camera. Similarly, a camera carried on the left side sling will most often only need to be connected via the left Uni-Loop connector on the camera. In general, the Uni-Loop connector on the opposite side is only used for cameras with battery grips. The lengths of the slings can be adjusted with the triglide buckles towards the rear of the harness. The additional triglide buckle on the sling functions as a stop to keep your gear from sliding too far back. It can be adjusted to your preference.



The Triple Carrier™ is great for cameras or binoculars


3. For carrying gear in the center position, connect the center straps to the inner quick disconnects on the front of the yoke.
4. It is recommended to wear the torso strap especially when using the center position strap. This keeps the weight of your gear from creeping up onto your neck. The Torso Straps fasten to the lower quick disconnects on the back of the harness, then come together in front of your body and fasten with a quick disconnect for convenience. The Torso Strap can be adjusted for the most comfortable fit. The adjustability range is approximately 26" - 57" (66-144,8 cm) long.

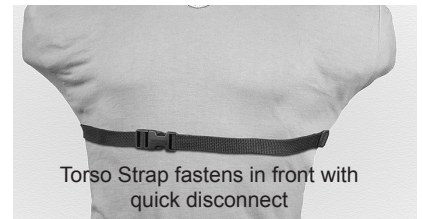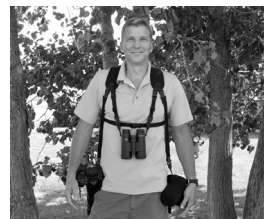

5. Carrying gear on two slings allows for quick access to two cameras, or a camera and pair of binoculars.
6. To carry a single piece of gear on a sling, you can remove the opposite sling and replace it with the 3/8" wide Under-Arm Retaining Strap. This strap is adjustable from approximately 12" - 21" (30,5 - 53,3 cm). Cinch this strap to keep the yoke in place on the shoulders during use.



Two Slings

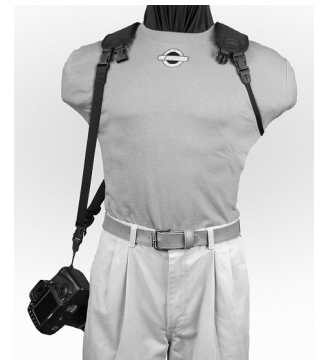

One Sling with Under-Arm Retaining Strap

7. If you would like to use one of the side positions to carry a tripod, you can attach a pair of OP/TECH USA's **System Connectors™ - Tripod Loops** (sold separately).



System Connectors™ - Tripod Loops (sold separately)

8. If the Triple Carrier becomes soiled it can be hand washed in mild detergent, rinsed thoroughly and set flat to dry.