PHOTOFLEX®

PHOTOFLEX.COM MultiDisc® Family | Instruction Manual





Figure 3



Figure 5



Figure 7



Figure 2



Figure 4



Figure 6



MultiDisc

Before assembling your MultiDisc, make sure all components are present. You will need:

- · Translucent inner disc
- Zippered skin with four reflective surfaces
- For 7-in-1 only: Second zippered skin.

Opening and Re-Collapsing the MultiDisc

- 1. Remove the disc with zippered skin attached from the protective carry bag. Figure 1
- 2. The disc is twisted and collapsed to fit into the carry bag. Slowly and carefully unfold it until it is completely open. Figure 2
- To collapse the disc for storage place one hand up and one hand down on opposing edges of the disc. Figure 3
- 4. Twist one hand toward the other. Figure 4
- 5. Continue twisting, folding one side over the other. Figure 5
- 6. The MultiDisc will now resemble three hoops. Figure 6
- The collapsed MultiDisc can now be sized to properly fit back into the bag. Figure 7



 








Figure 10.



Figure 12.



Figure 9.



Figure 11.

Removing the Reflective Skin

- 8. The MultiDisc's reflective skin can be removed by slowly unzipping the self-repairing zipper.
- 9. At the end of the zipper there is a hole in the skin where the inner disc's handle is passed through.
- 10. The inner diffusion disc can now be removed from the outer reflective skin.
- 11. The MultiDisc's reflective skin can be reversed to expose two more reflective surfaces.
- 12. Zip the skin on with reverse options exposed and you are ready to use!

Note: For the MultiDisc 7-n-1 there is an additional reflective cover provided, simply remove one to use the other, following the previous steps.

Available Accessories

- LiteDisc Holder Item #DL-BHOLDER
- LiteDisc Holder Compact Item #DL-BHLDRCOMP



DL-B HOLDER Extended length 69.5"/176.5cm Collapsed length 39.5"/100.4cm



DL-BHOLDERCOMP Extended length 50"/127cm Collapsed length 28.5"/72.4cm



PHOTOFLEX® 5 YEAR WARRANTY

- Warranties only cover manufacturer's defects and workmanship
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be accompanied by a receipt showing date of purchase.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (800) 486-2674 E-mail: sales@photoflex.com

Corporate Office (831) 786-1370 • FAX (831) 786-1372 97 Hangar Way, Watsonville, CA 95076

©2013 Photoflex, Inc. ALL RIGHTS RESERVED. Photoflex and the Photoflex logo are trademarks or registered trademarks of Photoflex and/or its affiliates in the U.S. and other countries