

## MP-25

# 25-WATT MEGAPHONE WITH MP3 PLAYER, WHISTLE, AND SIREN

Thank you for choosing Polisen.

The Polisen MP-25 Megaphone is a powerful and durable solution for voice amplification and is ideal for high-noise areas and large open spaces. With a maximum output of 25 watts, the MP-25 is audible over 1,500 yards away.

The MP-25 features an attached hand-held microphone with a coiled cable allowing operators to face a different direction than the crowds they are addressing. The microphone can also be mounted on the mic holder enabling easy, one-handed operation.


The MP-25 also features a built-in MP3 decoder that plays files stored on SD cards or flash drives. Since the microphone and MP3 player have independent volume controls, users have the option of speaking over music or prerecorded audio. For more playback options, mobile devices such as MP3 players or smart phones can also be connected to the MP-25 through the 3.5 mm auxiliary (Aux) input jack.

Tough ABS construction of the outer shell protects the megaphone from impact and the demands of outdoor use. The included adjustable shoulder strap provides extra support during periods of extended use.

Among the benefits you'll enjoy:

- Audible speech more than 1,500 yards away
- SD card slot, USB port, and Aux input
- Built-in MP3 player
- Attached microphone with coiled cable, locking talk button, and volume control

## OVERVIEW

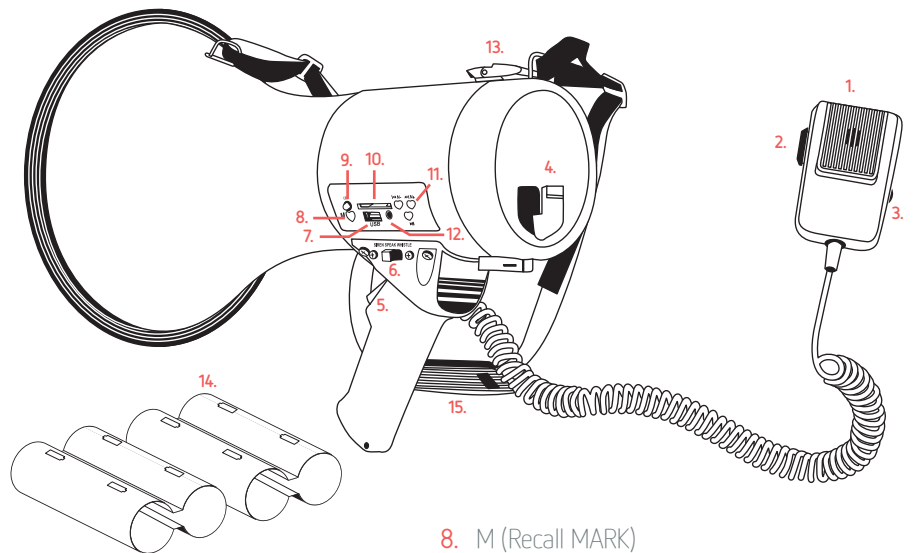

1. Microphone
2. Talk button
3. Mic volume control wheel
4. Mic holder
5. Trigger control
6. SIREN/SPEAK/WHISTLE selector
7. USB port
8. M (Recall MARK)
9. Power LED
10. SD card slot
11. Playback control buttons
12. Aux input
13. Battery compartment
14. Battery sleeves (2)
15. Shoulder strap

## FEATURES

Audible over 1,500 yards away

Built-in MP3 player with SD card slot and USB port

Aux input for connecting external devices

Built-in siren and whistle

Attached microphone with coiled cable, locking talk button, and volume control

Ergonomic handle with trigger

Adjustable shoulder strap

Sturdy ABS construction

## PRECAUTIONS ⚠

- Please read and follow these instructions and keep this manual in a safe place.
- Keep this product away from water and any flammable gases or liquids.
- Photos and diagrams are for illustrative purposes only.

### Caution ⚠

Exposure to high sound levels may cause hearing impairment or loss. Be sure to observe the following instructions:

- Reduce the volume to its lowest setting before use.
- Never point the megaphone directly at a person's ear when using in close proximity.
- Point the megaphone toward the ground when testing volume levels.



## INSTALLING THE BATTERIES

1. Unlatch the battery compartment and insert the two batteries into the plastic sleeves.
2. Place the sleeves, with the partially-closed ends down, into the battery compartment. Be sure to match the polarity with the diagram on the inside of the battery compartment.
3. Close the battery compartment and secure the battery compartment latch.

## OPERATING THE MP-25

### Voice Amplification:

The microphone can be used as a handheld device, or attached to the mic holder for one-handed operation.

1. Make sure the selector is in the SPEAK position.
2. For intermittent use: press the TRIGGER CONTROL or the TALK button to activate the microphone.
3. For constant voice amplification: press and lock the TALK button on the microphone.
4. Gradually adjust the MIC VOLUME CONTROL to the desired output volume.

### Using the alert sounds:


1. Move the selector to the SIREN or WHISTLE position.
2. To end the alert sound, move the selector back to the SPEAK position.

**Note:** The siren's and whistle's volume level is preset at a high volume and cannot be adjusted using the mic volume control.

### Using the MP3 Player:

#### Playing prerecorded music or audio

1. Insert a memory card into the SD card slot, or insert a flash drive into the USB port.
2. If using a mobile device, connect it to the Aux input jack with a mini-plug connector.
3. Press and lock the TALK button. The LED will light to indicate the MP3 player is active.
4. If using an SD card or flash drive, the audio will automatically begin playing.
5. When using a mobile device, play and control the audio from the device.
6. Unlocking the TALK button stops all audio playback.

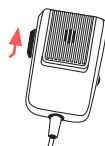

## MP3 player operation

▶   Play/ Pause	Pauses and resumes playing the MP3	
◀◀/V-	Short press: skips to previous track	Long press: decreases volume
▶▶/V+	Short press: skips to next track	Long press: increases volume
M (Recall MARK)	Short press: skips to the beginning of the track without pause	Long press (LED blinks): pauses track  2nd long press: resumes play at the beginning of the track

### Speaking over music

The microphone remains active while the MP3 player or mobile device is operating.

1. With the MIC VOLUME CONTROL set slightly above minimum volume, adjust the volume of the music:

Use the V+ and V- buttons when using an SD card or flash drive.

If using a mobile device, use the volume controls on the device.

2. While music is playing, set the microphone volume to the desired level using the MIC VOLUME CONTROL.

**Note:** The MIC VOLUME CONTROL acts as a master volume control. By decreasing the volume of the microphone it will also decrease the volume of the MP3 or mobile device. However, it will not increase the MP3 or auxiliary volume beyond the level at which it was originally set.

## SPECIFICATIONS

**POWER OUTPUT** 25 W

**HORN DIAMETER** 9" (22.9 cm)

**LENGTH** 13.3" (33.8 cm)

**WEIGHT (WITHOUT BATTERIES)** 3.7 lb. (1.7 kg)

**POWER SOURCE** 8 × C-size batteries (not included)

**BATTERY LIFE** 5 hours (normal use)

**AUDIBLE RANGE** More than 1,500 yards

## ONE-YEAR LIMITED WARRANTY

This Polsen product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Polsen Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Polsen along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.polsenaudio.com](http://www.polsenaudio.com) or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group. [www.gradusgroup.com](http://www.gradusgroup.com)



Polsen is a registered trademark of the Gradus Group.  
© 2014 Gradus Group LLC. All Rights Reserved.

