

80W X 2 MAX Stereo Power Amplifier



www.pyleaudio.com

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read Instructions All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions All operating and use instructions should be followed.
- 5. Water and Moisture The appliance should not be used near water -for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or a wet basement.
- 6. Ventilation The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings: or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 7. Heat The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 8. Power Sources The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 9. Grounding or Polarization Precaution should be taken to insure that the grounding or polarization means of an appliance is not defeated.
- 10. Power-Cord Protection Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the appliance.
- 11. Cleaning The appliance should be cleaned only as recommended by the manufacturer.
- 12. Power Lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- **13. Nonuse Periods** The power cord of the appliance should be unplugged from the outlet when the appliance is to be left unused for a long period of time.
- 14. Object and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- **15. Carts and Stands** If the appliance is used with a cart or stand, the cart or stand should be a type recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces cause the appliance and cart combination to overturn.

- 16. Mounting The appliance should be mounted only as recommended by the manufacturer.
- 17. Damage Requiring Service The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - C. The appliance has been exposed to rain.
 - D. The appliance has been dropped, or the enclosure damaged.
 - E. The appliance does not appear to operate normally or exhibits a marked change in performance.
- 18. Servicing The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified personnel.
- 19. Overloading Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 20. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 21. Safety Check Upon completion of any service or repairs to this appliance, ask the service technician to perform safety checks to determine that the appliance is in proper operating condition.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.		This symbol is intended to alert you to the - 6 presence of un- insulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.
RISK OF ELECTRIC SHOCK		This symbol is intended to inform you that important
CAUTION: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified personnel.		operating and maintenance instructions are included in the literature accompanying this product.



Your new PYLE HOME PAMP Amplifier

gives you the power and versatility you need in a professional sound system. The wide frequency response of it handles easily amplification of voice and music. The signal sensing of dual inputs turns the amplifier on automatically when music is sensed on RCA inputs. The activation of Line 1 input that will override Line 2 input makes the amplifier perfectly as a zone amplifier for a multiroom distribution audio system.

FEATURES AND CONTROLS



FEATURES AND CONTROLS



CONNECTION DIAGRAM-A:

In this application the TV audio signal acts as "Priority" source at Line 1 input and a distributed audio signal from the other audio system acts as "Primary" source at Line 2 input. Whenever the TV is activated, its signal overrides the distributed signal of Line 2, only the TV audio will be heard via the amp, but the distributed audio of Line 2 input will still be present at Line 2 Output and sent to additional zone. Once TV is turned off, the amp will switch to the distributed audio automatically as an audio source, if the distributing audio is still active.



CONNECTION DIAGRAM-B:

In this application a computer's sound card acts as "Priority" source at Line 1 input and the TV audio signal acts as "Primary" local source at Line 2 input. Whenever the computer is activated, its signal overrides the TV signal of Line 2, only the computer audio will be heard via the amp. Once the computer is turned off, the amp will switch to the TV automatically as an audio source, if the TV is still active.



Pyle Home PAMP1000 Manual - 4

Specifications

Input Impedance, balanced (unbalanced) 20 k-Ohms Continuous Output Power

Stereo Mode

20 Hz to 20 kHz, 8 Ohms	60	Watts x 2
1 kHz, 4 Ohms,	70	Watts x 2
Maximum Power, 8 Ohms	65	Watts x 2
Maximum Power, 4 Ohms	80	Watts x 2

Bridged Mode

Maximum, 20 Hz to 20 kHz, 8 Ohms	130 Watts
Maximum, 1 kHz, 4 Ohms,	160 Watts
THD at rated output power	
Frequency Response +/- 3 dB	10 Hz to 50 kHz
Signal to Noise Ratio A-Weighted	100dB

Speaker Impedance

Stereo 4-16 Ohms
Bridged 8-16 Ohms
Speaker Impedance A,B (4-16 ohms)
Bridged (8-16 ohms)
Power Requirement120V AC 60Hz/230V AC 50Hz
Power Fuse T 4AL 250V for 110-120V and T 2AL for 220-240V
Dimensions, inches (mm) WxHxD 16.53 x 2.36 x 8.26 (420 x 60 x 210)
Weight, lbs (kg) 9.08(4.12)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Care and Maintenance

Your Pyle Home Amplifier is an example of superior design and craftsmanship. The following suggestions will help you care for your mixer so you can enjoy years of use:

• Keep the mixer dry. If it gets wet, wipe immediately.

• Use the mixer only in wellventilated installations.

• Handle the mixer gently and carefully - do not drop!

• Keep the mixer away from dust and dirt.

• Wipe occasionally with a damp cloth to keep it looking new. Do not use harsh chemicals, solvents or detergents! Please complete warranty card, detach and return



Limited Warranty

All PYLE HOME products are carefully constructed and tested before shipment. Units purchased in the USA are warranted to be free of defects in material and workmanship for one (1) year from the date of purchase. This warranty is limited to the original retail purchaser of the amplifier.

Should the unit fail due to factory defects in material or workmanship, your unit will be repaired or replaced at the sole discretion of PYLE.

To obtain warranty service, you must first call our Consumer Return Hotline at (718) 236-6948 to obtain a Return Authorization Number. This R.A. # must appear on the outside of your package and on all paperwork relating to your return.

When returning the unit to us for warranty service, it must be carefully packed and shipped, prepaid. to:



R.A.#: _____ PYLE HOME Service Center 1600 63rd Street Brooklyn, NY 11204

You must also include the following items with your return:

- A copy of your sales receipt or other proof of purchase
- A brief letter, indicating the problem you are experiencing with the product
 Include in your letter your return address, daytime phone number and R.A. number
- Also include a check or money order for \$15.00 for return shipping, handling and insurance, or provide your Visa/MC

Our obligation under this warranty is limited to the repair or replacement of the defective unit when it is returned to us prepaid. This warranty will be considered void if the unit was tampered with, improperly serviced or subject to misuse, neglect or accidental damage

Please complete warranty card, detach and return

Thank you for purchasing this PYLE product. To activate your warranty, please mail this card within 10 days.	warranty registration card
Name	
Address	
City, State ZIP	
	nume
Model No.	Serial # (if available)
Date of Purchase	
Durchasad at	
Purchased at: Music Products Store	Sound Contractor/Installer OMail Order
Catalog Merchandiser	O Other

www.pyleaudio.com

^{7 -} Pyle Home PAMP1000 Manual