


# P-10

VISUAL SAMPLER

Owner's Manual

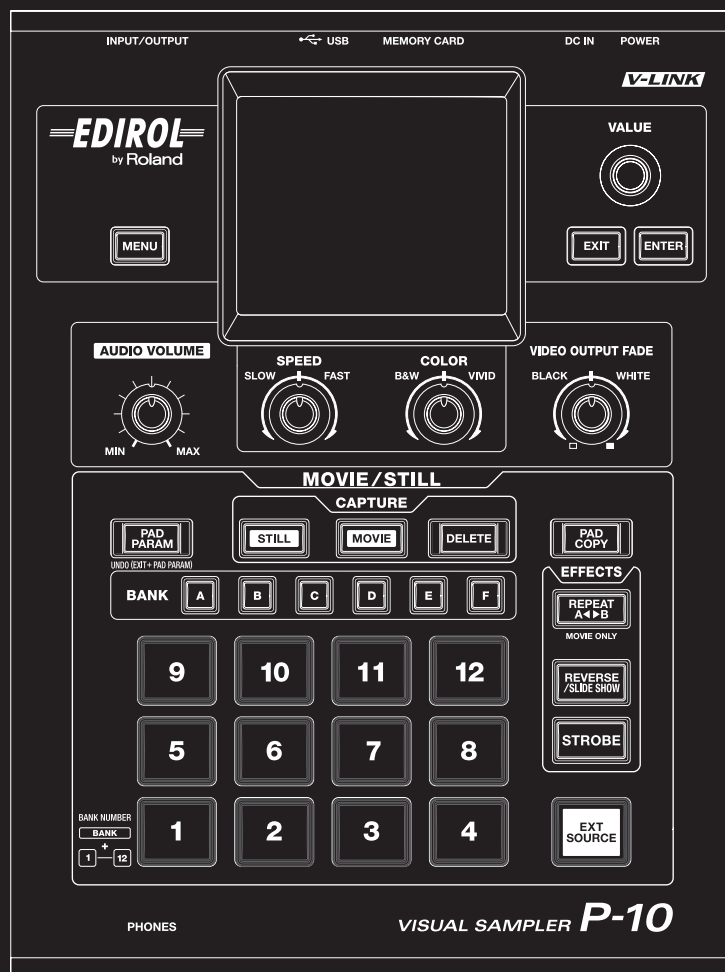


**EDIROL**  
by Roland



Thank you and congratulations on your choice of the Edirol P-10 visual sampler.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (p. 4; p. 6). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of all of your new unit's features, you should read the Owner's manual in its entirety. The manual should be saved and kept on hand as a convenient reference.

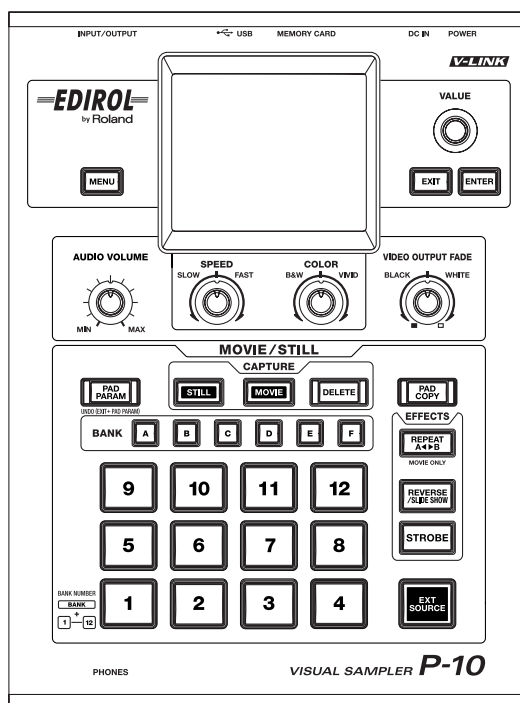

Copyright © 2008 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

**IMPORTANT:** THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL  
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.



The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.







## USING THE UNIT SAFELY

### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices






 <b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 <b>CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.  * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols





	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING









#### WARNING

- Do not open (or modify in any way) the unit or its AC adaptor. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Never use or store the unit in places that are:
  - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
  - Damp (e.g., baths, washrooms, on wet floors); or are 
  - Humid; or are
  - Exposed to rain; or are
  - Dusty; or are
  - Subject to high levels of vibration.
- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 











#### WARNING

- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock. 
- Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device. 
- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards! 
- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist. 

## **WARNING**

- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.   

- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:
  - The AC adaptor, the power-supply cord, or the plug has been damaged; or
  - If smoke or unusual odor occurs
  - Objects have fallen into, or liquid has been spilled onto the unit; or
  - The unit has been exposed to rain (or otherwise has become wet); or
  - The unit does not appear to operate normally or exhibits a marked change in performance.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Protect the unit from strong impact. (Do not drop it!) 
- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- DO NOT play a CD-ROM disc on a conventional audio CD player. The resulting sound may be of a level that could cause permanent hearing loss. Damage to speakers or other system components may result. 

## **CAUTION**

- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation. 
- Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit. 
- At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire. 
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit. 
- Before moving the unit, disconnect the AC adaptor and all cords coming from external devices. 
- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet. 
- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet. 
- Keep the SD card theft prevention cover attachment screws that you remove, the included SD card theft prevention cover, and the SD card in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

# IMPORTANT NOTES

## Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

## Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.  
You can place a piece of felt or cloth under the rubber feet to prevent this from happening. If you do so, please make sure that the unit will not slip or move accidentally.

## Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

## Additional Precautions

- Unfortunately, it may be impossible to restore the contents of data that was stored on a SD card or internal memory once it has been lost. Roland Corporation assumes no liability concerning such loss of data.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- Never strike or apply strong pressure to the display.
- A small amount of noise may be heard from the display during normal operation.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.

## Using the SD Card

- Carefully insert the SD card all the way in—until it is firmly in place.
- Never touch the terminals of the SD card. Also, avoid getting the terminals dirty.
- SD cards are constructed using precision components; handle the cards carefully, paying particular note to the following.
  - To prevent damage to the cards from static electricity, be sure to discharge any static electricity from your own body before handling the cards.
  - Do not touch or allow metal to come into contact with the contact portion of the cards.
  - Do not bend, drop, or subject cards to strong shock or vibration.
  - Do not keep cards in direct sunlight, in closed vehicles, or other such locations.
  - Do not allow cards to become wet.
  - Do not disassemble or modify the cards.

## Handling CD-ROMs

- Avoid touching or scratching the shiny underside (encoded surface) of the disc. Damaged or dirty CD-ROM discs may not be read properly. Keep your discs clean using a commercially available CD cleaner.

## Copyright

- Recording, duplication, distribution, sale, lease, performance, or broadcast of copyrighted material (musical works, visual works, broadcasts, live performances, etc.) belonging to a third party in part or in whole without the permission of the copyright owner is forbidden by law.
- Do not use this unit for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this unit.

- Use of the image supplied with this product for any purpose other than private, personal enjoyment without the permission of the copyright holder is prohibited by law. Additionally, this data must not be copied, nor used in a secondary copyrighted work without the permission of the copyright holder.
- The explanations in this manual include illustrations that depict what should typically be shown by the display. Note, however, that your unit may incorporate a newer, enhanced version of the system (e.g., includes newer sounds), so what you actually see in the display may not always match what appears in the manual.
- This product is compatible with regular NTSC or PAL video signal. In case an irregular signal is input, it may obstruct the stable operation of this product.
- It is possible on this product to create video sequences with extremely quick switching or ON/OFF of effects. Depending on your physical conditions, such video sequence may cause medical problems, such as a headache, etc. It is prohibited to create video sequence that may cause such problems. Roland or Edirol is not responsible for any medical problems you or your audiences/spectators may experience caused by such video sequences.

\* Microsoft and Windows are registered trademarks of Microsoft Corporation.

\* Windows® is known officially as: "Microsoft® Windows® operating system."

\* Apple and Macintosh are registered trademarks of Apple Inc.

\* Mac OS is a trademark of Apple Inc.

\* All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

# Contents

<b>USING THE UNIT SAFELY .....</b>	<b>4</b>
<b>IMPORTANT NOTES .....</b>	<b>6</b>

## **1. Introduction** **13**

---

<b>Panel Descriptions .....</b>	<b>14</b>
Top Panel .....	14
Rear Panel .....	16
<b>Before You Start .....</b>	<b>17</b>
Using the SD Card .....	17
Inserting and Removing the SD Card .....	17
Connecting Peripheral Devices .....	17
Connecting the AC Adaptor to the P-10 .....	17
Connecting External Devices .....	18
Turning the Power On and Off .....	19
Turning the Power On .....	19
Turning the Power Off .....	19
Main Applications .....	19
Using the P-10 for Presentations .....	19
Using the P-10 at Events .....	19
Using the P-10 at Concerts (V-LINK) .....	20
<b>Mastering Basic Operation .....</b>	<b>21</b>
What Does the P-10 Do? .....	21
Basic Operation .....	21
What is a PAD? .....	21
Using the [MENU] Button and [VALUE] Knob .....	22
Using the [ENTER] Button .....	22
Using the [EXIT] Button .....	22
Outputting Images .....	23
Supported Movie and Still Image File Formats .....	23
About NTSC and PAL .....	23

## **2. Playing Back Images** **25**

---

<b>Playing Back Images Assigned to Pads .....</b>	<b>26</b>
Playing Back Images .....	26
Stopping Image Playback .....	26
Displaying Input Images .....	26

---

### 3. Applying Effects to Images

27

<b>Effects.....</b>	<b>28</b>
Changing the Playback Speed of a Movie (SPEED).....	28
Changing the Color of an Image (COLOR) .....	28
Fading an Image (VIDEO OUTPUT FADE).....	29
Repeating Movie Playback (REPEAT).....	29
Reversing Movie Playback (REVERSE) .....	30
Displaying Still Images in a Slide Show (SLIDE SHOW).....	30
Applying Strobe to Image Playback (STROBE).....	31

---

### 4. Capturing Images

33

<b>Capturing Images from an External Device.....</b>	<b>34</b>
What is Capturing? .....	34
Possible Movie Length and Number of Still Images .....	34
Capturing Movies.....	34
Capturing Still Images.....	35
Deleting Captured Images .....	36
<b>Transferring Files from a Computer to the P-10.....</b>	<b>37</b>
Using Windows XP or Windows Vista .....	37

---

### 5. Pad Settings

39

<b>Assigning Images to Pads.....</b>	<b>40</b>
<b>Pad Parameters .....</b>	<b>41</b>
What are the Pad Parameters?.....	41
PAD PARAMETER Screen Operation .....	41
Exiting the PAD PARAMETER Screen.....	41
Returning to the Previous Setting Value (UNDO) .....	42
Movie Pad Parameters .....	42
Still Image Pad Parameters .....	42
<b>Changing the Pad Parameters .....</b>	<b>43</b>
Movies.....	43
Changing a Movie Assigned to a Pad .....	43
Changing the Play Mode (Play Mode) .....	43
Specifying the Playback Range (Start Frame/End Frame) .....	44
Syncing a Movie with Audio (Audio Sync) .....	44

Specifying an Audio File (Additional Audio File) .....	44
Specifying the Volume (Audio Level) .....	45
Specifying the Reverse Effect (Reverse Sw) .....	45
Specifying the Strobe Effect (Strobe Sw) .....	45
Specifying the Strobe Interval (Strobe Time) .....	45
Still Images .....	45
Adding Still Images to a Pad (Add Still Image) .....	45
Exchanging Still Images Assigned to a Pad .....	46
Specifying an Audio File (Additional Audio File) .....	46
Specifying the Volume (Audio Level) .....	46
Specifying Effects (Effect Sw) .....	46
Specifying the Slide Show Set (Slide Show Set) .....	47
Creating a Slide Show Set (Slide Show User Set) .....	47
Specifying the Strobe Interval (Strobe Time) .....	47
<b>Copying Pad Parameters .....</b>	<b>48</b>
<b>Truncating a Movie (Truncate) .....</b>	<b>49</b>

---

## 6. System Settings 51

---

<b>Specifying System Settings .....</b>	<b>52</b>
Items You Can Specify .....	52
MENU Screen Operation .....	54
<b>Menu .....</b>	<b>55</b>
INFORMATION .....	55
Backing Up System Settings on the SD Card (System Backup) .....	55
Restoring System Settings (System Restore) .....	55
Backing Up All Bank Data (Project Backup) .....	56
Restoring All Bank Data (Project Restore) .....	56
VIDEO .....	57
Adjusting the Display Contrast (LCD Contrast) .....	57
Specifying the Video Format (Video Format) .....	57
Specifying the Video Input Jack (Input Video) .....	57
Specifying the Capture Still Mode (Capture Still Mode) .....	58
Specifying the Type of Color Effect (Color Ctrl Type) .....	58
Specifying the Type of Speed Effect (Speed Ctrl Type) .....	58
Specifying the Fade Effect Color (Output Fade Color L, Output Fade Color R) .....	58
Specifying the Startup Logo (Start LOGO) .....	59
AUDIO .....	59
Adjusting the Volume Level Using the Level Meter .....	59
Adjusting the Audio Input Gain (Recording Gain) .....	59
MIDI .....	59
Specifying the Device ID (Device ID) .....	60
Specifying the Reception Channel (Rx Channel) .....	60

Specifying the Transmission Channel (Tx Channel) .....	60
Specifying Soft Through (Soft Through).....	60
Operating the P-10 Using Note Messages (Note Message Enable).....	60
Controlling Movie Speed (Speed Knob) .....	61
Controlling the Image Color (Color Knob) .....	61
Controlling the Output Fade (Output Fade Knob).....	61
Controlling Repeat (Repeat A<>B Sw).....	61
Controlling Reverse (Reverse Sw).....	61
Controlling Strobe (Strobe Sw).....	61
Controlling Still Image Capture (Capture Still Image) .....	62
Controlling Movie Capture (Capture Movie) .....	62
Specifying Video Mixer Control (Video Mixer Control).....	62
Restricting Buttons During Performance (PROTECT).....	62
Restricting Buttons Related to Pads (Pad Edit) .....	62
Restricting the Capture Buttons (Capture).....	62
Deleting Files on the SD Card (DELETE FILE) .....	63
Formatting the SD Card (FORMAT SD CARD) .....	63
Returning to the Factory Default Settings (FACTORY RESET) .....	64

---

## 7. Appendices 65


---

<b>Using V-LINK .....</b>	<b>66</b>
What is V-LINK? .....	66
How to Use V-LINK .....	66
Items You Can Specify with V-LINK .....	66
<b>SD Cards You Can Use With the P-10 .....</b>	<b>67</b>
Recommended SD Cards.....	67
SD Card Protection Feature (LOCK) .....	67
SD Card Folder Structure.....	67
Attaching the SD Card Theft Prevention Cover .....	67
<b>P-10 File Formats .....</b>	<b>68</b>
P-10 Supported Formats .....	68
Safety Area .....	68
<b>Slide Show Set List .....</b>	<b>69</b>
<b>Troubleshooting .....</b>	<b>72</b>
Error Messages .....	75
<b>MIDI Implementation Chart.....</b>	<b>76</b>
<b>Main Specifications .....</b>	<b>77</b>

---


Artist Introductions .....	78
Index.....	79

# 1. Introduction

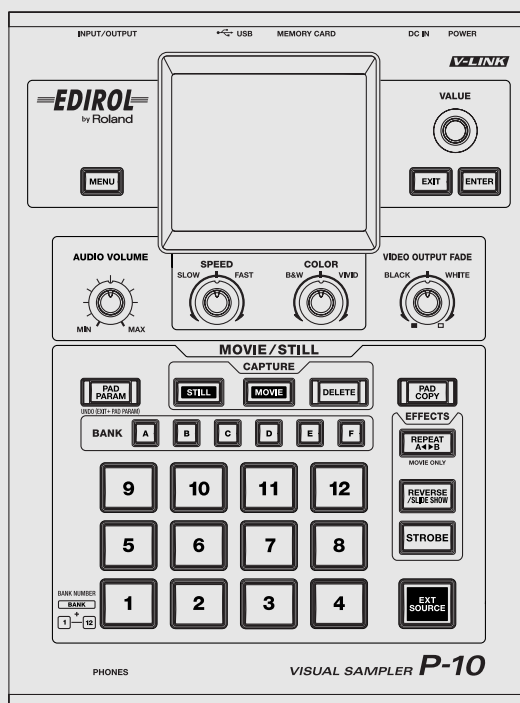

# Panel Descriptions

## Top Panel

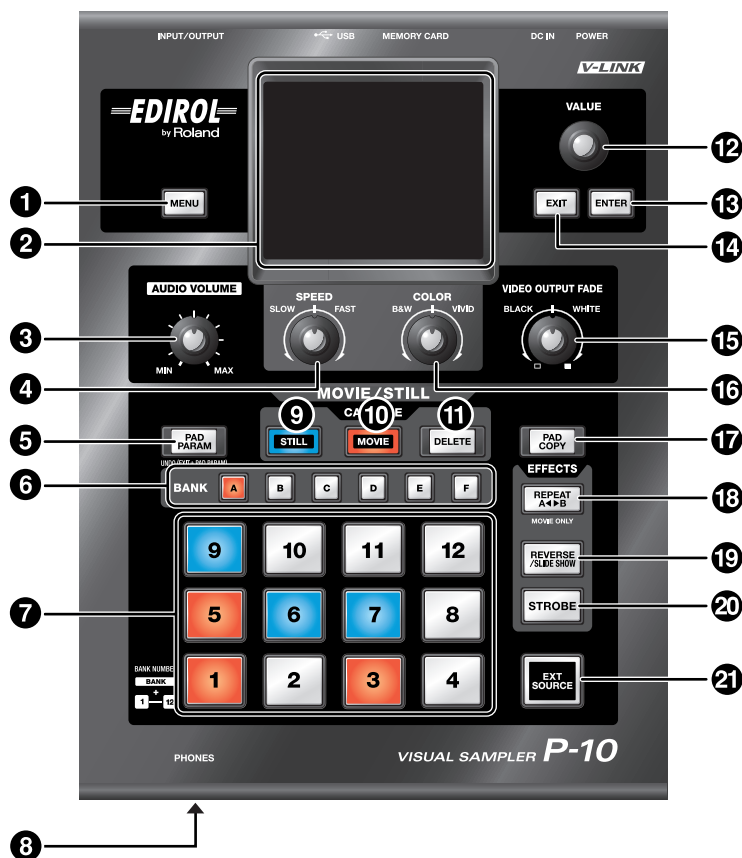

### 1 [MENU] Button

Use to make settings for the P-10's main functions (p. 54).

### 2 Display

Shows information related to the current operation and displays images.

### 3 [AUDIO VOLUME] Knob

Adjusts the level of the volume from the OUTPUT jack.

### 4 [SPEED] Knob

Adjusts the movie playback speed (p. 28).

### 5 [PAD PARAM] Button

Use to make parameter settings for each PAD (p. 41).

### 6 BANK [A]–[F] Buttons

Press to select a bank (p. 26).

### 7 PADS [1]–[12]

PADS [1]–[12] perform the following functions:

- Play back images (p. 26).

You can tell what type of image is assigned to a pad by looking at the pad color.

Pad	Assigned Image Type
Lit Red	Movie
Lit Blue	Still Image
Unlit	No Images Assigned

- While holding down a BANK [A]–[F] button, press a PAD [1]–[12] to change the BANK number (p. 26).

**8 PHONES Jack**

Connect headphones to this jack.

**9 CAPTURE [STILL] Button**

Use to capture still images (p. 35).

**10 CAPTURE [MOVIE] Button**

Use to capture movies (p. 34).

**11 [DELETE] Button**

Delete pad information or images (p. 36).

**12 [VALUE] Knob**

Select setting items or change setting values (p. 22).

**13 [ENTER] Button**

Execute settings that you have specified.

**14 [EXIT] Button**

The [EXIT] button enables you to do the following operations:

- Return to the previous screen from the MENU screen or PAD PARAMETER screen.
- Stop image playback when an image is playing.

**15 [VIDEO OUTPUT FADE] Knob**

Use to fade images to black or white (p. 29).

**16 [COLOR] Knob**

Adjusts the color of the image (p. 28).

**17 [PAD COPY] Button**

Copy pad parameters of images and audio assigned to a pad and assign the copied data to another pad (p. 48).

**18 [REPEAT A ◀▶ B] Button**

Repeat a section of the movie file (p. 29).

**19 [REVERSE/SLIDE SHOW] Button****20 [STROBE] Button**


Apply strobe (play back images with short intervals between frames, which creates a stop motion feel) (p. 31).

**21 [EXT SOURCE] Button**

Display an image from an external device connected to the INPUT jack on the P-10's display (p. 26).

Function	Description	Page
REVERSE	Plays a movie in reverse during playback.	p. 30
SLIDE SHOW	Displays the still images assigned to a pad as a slide show.	p. 30

## Rear Panel

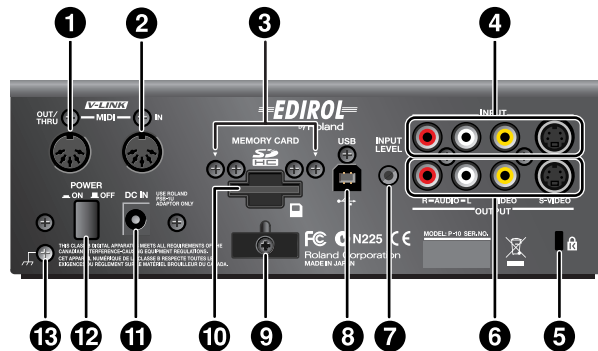

### 1 MIDI OUT/THRU Connector

Connect a MIDI device that you want to control from the P-10.

### 2 MIDI IN Connector

Connect a MIDI device that you want to use to control the P-10.

### 3 SD Card Cover Attachment Screws

Use the screws to attach the SD card theft prevention cover.

### 4 INPUT Jacks (AUDIO L/R, VIDEO, S-VIDEO)

Connect an external device to display its images on the P-10's display or capture images using the P-10.

### 5 Security Lock (K)

Attach a security wire here to prevent theft of the P-10.  
<http://www.kensington.com/>

### 6 OUTPUT Jacks (AUDIO L/R, VIDEO, S-VIDEO)

Connect an external device for displaying images, such as a display or projector.

### 7 [INPUT LEVEL] Knob

Adjusts the audio level of the INPUT jacks. You can check the audio level with the "Level Meter" (p. 59).

### 8 USB Connector

Connect the P-10 to a computer and transfer files back and forth.

### 9 Cord Hook

To prevent inadvertent disruption of power to your unit (should the plug be pulled out accidentally), and to avoid applying undue stress to the DC IN jack, anchor the power cord using the cord hook (p. 17).

### 10 MEMORY CARD (SD Card) Slot

Insert an SD card here (p. 17).

### 11 DC IN Jack

Connect the supplied AC adaptor here (p. 17).

### 12 POWER Switch

Press this switch to turn the power on and off (p. 19).

### 13 Ground Terminal

Depending on the circumstances of a particular setup, you may experience a discomforting sensation, or perceive that the surface feels gritty to the touch when you touch this device, microphones connected to it, or the metal portions of other objects, such as guitars. This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect the ground terminal (see figure) with an external ground. When the unit is grounded, a slight hum may occur, depending on the particulars of your installation. If you are unsure of the connection method, contact your nearest Roland Service Center or an authorized Roland distributor, as listed on the "Information" page.

#### Unsuitable places for connection:

- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

# Before You Start

## Using the SD Card

The P-10 won't function unless an SD card has been inserted. Make sure you insert an SD card before using the unit.


**MEMO**

For details about the types of SD cards that we recommend using with the P-10, see "Recommended SD Cards" (p. 67).

## Inserting and Removing the SD Card

### Inserting the SD Card

Push the SD card into the MEMORY CARD (SD Card) slot until you hear a light clicking sound.

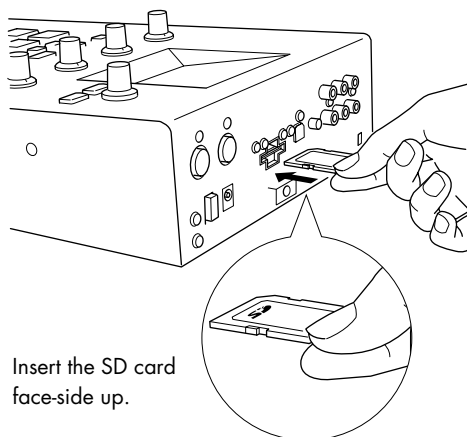

Insert the SD card face-side up.

**NOTE**


Never insert or remove an SD card while this unit's power is on. Doing so may corrupt the data on the SD card.

**NOTE**

Carefully insert the SD card all the way in—until it is firmly in place.

### Removing the SD Card

Push the SD card into the slot, and then pull the SD card out when it pops out.

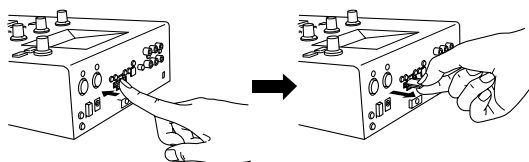

The P-10 comes with an SD card theft prevention cover to prevent the SD card from being stolen. For details on how to attach the cover, see "Attaching the SD Card Theft Prevention Cover" (p. 67).

**MEMO**


## Connecting Peripheral Devices

This section explains how to connect the AC adaptor and various external devices to the P-10.

## Connecting the AC Adaptor to the P-10

Here's how to connect the supplied AC adaptor to the P-10.

1. Connect the power cord to the AC adaptor.
2. Insert the AC adaptor cord into the DC IN jack on the rear panel.
3. Anchor the AC adaptor cord on the cord hook.
4. Connect the plug of the power cord to the AC outlet.

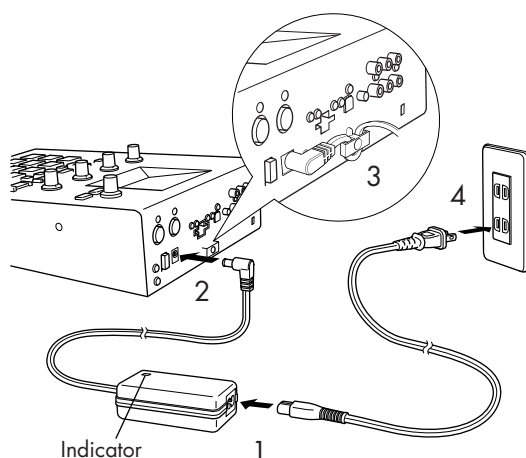

Place the AC adaptor so the side with the indicator (see illustration) faces upwards and the side with textual information faces downwards.


**NOTE**

\* The indicator will light when you plug the AC adaptor into an AC outlet.

**NOTE**

To prevent inadvertent disruption of power to your unit (should the plug be pulled out accidentally), and to avoid applying undue stress to the AC adaptor jack, anchor the power cord using the cord hook, as shown in the illustration.

## Connecting External Devices

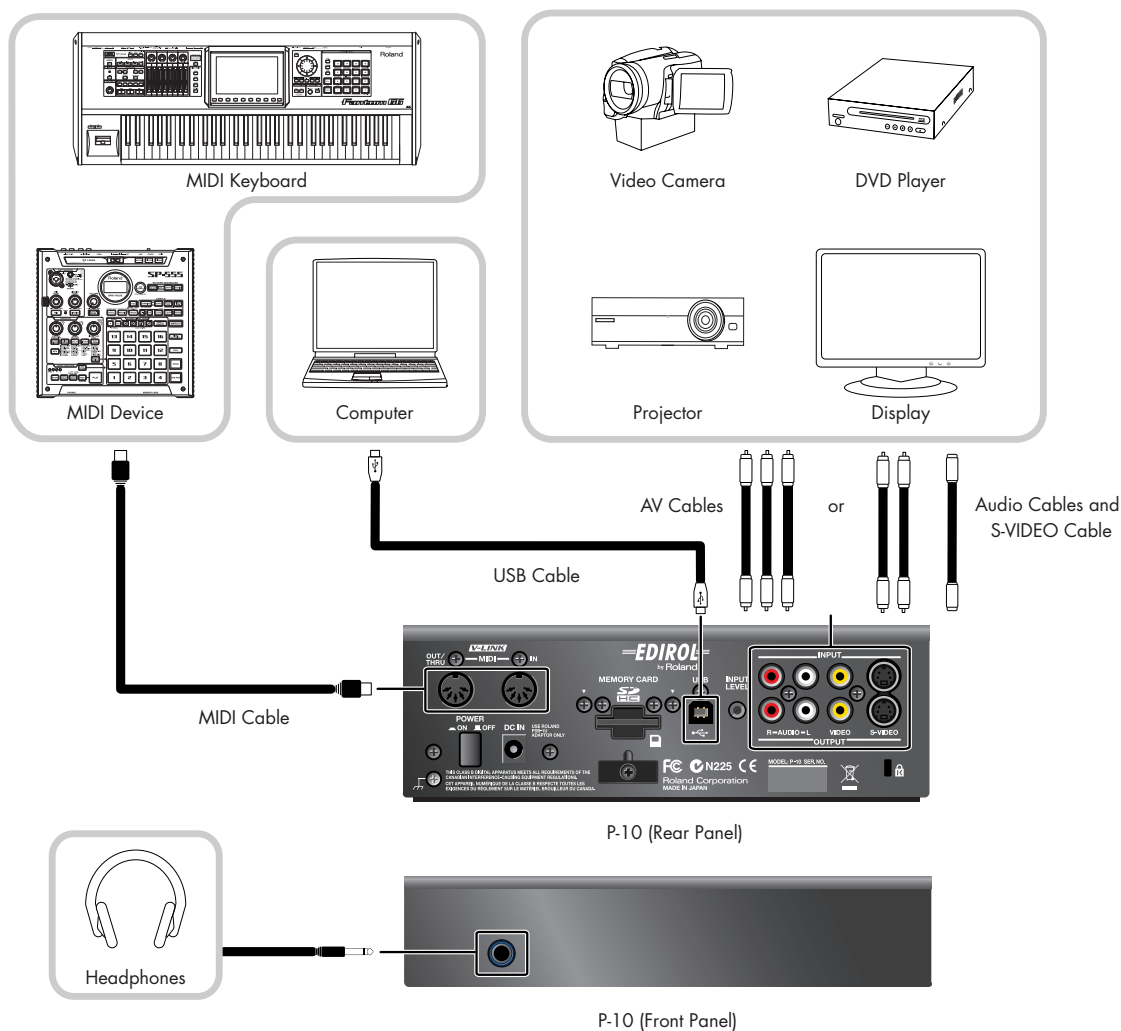

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

### NOTE

When connection cables with resistors are used, the volume level of equipment connected to the inputs (INPUT jack) may be low. If this happens, use connection cables that do not contain resistors.

### NOTE

1. Turn off the power to all devices.
2. Connect the P-10 to the external device.

### NOTE

The necessary cables for connecting the P-10 to various devices are not included with the unit. You will need to supply these cables yourself.


## Turning the Power On and Off

### Turning the Power On

Once the connections have been completed (p. 17), turn on the power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

#### NOTE

1. Turn down the volume on the P-10 and any connected devices.
2. Press the POWER switch on the P-10.

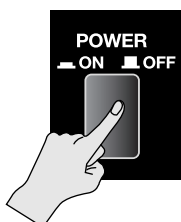

When the power is turned on, the BANK [A] button lights up. Pads that have images assigned to them also light up.

#### NOTE

The P-10's screen may flicker when the power is turned on.

3. Turn on any connected devices.
4. Adjust the volume to an appropriate level on the P-10 and any connected devices.

#### NOTE

This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

### Turning the Power Off


1. Turn down the volume on the P-10 and any connected devices.
2. Turn off the power to any connected devices.
3. Press the POWER switch on the P-10.

All of the buttons and indicators on the top panel turn off.

## Main Applications


### Using the P-10 for Presentations

Use the P-10 at presentations to accurately convey your ideas with movies and still images.

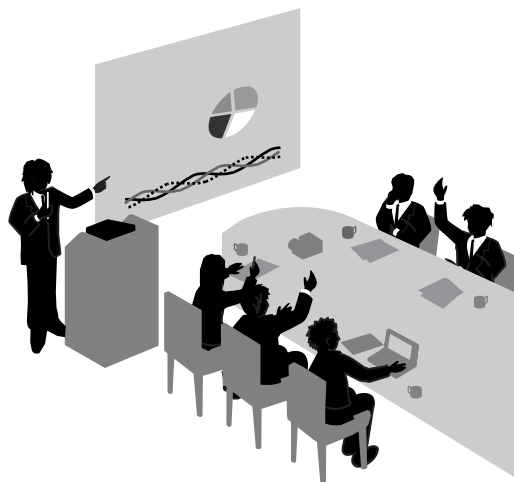

### Using the P-10 at Events

Perform at an event with images that have impact by using effects such as color and speed changes.

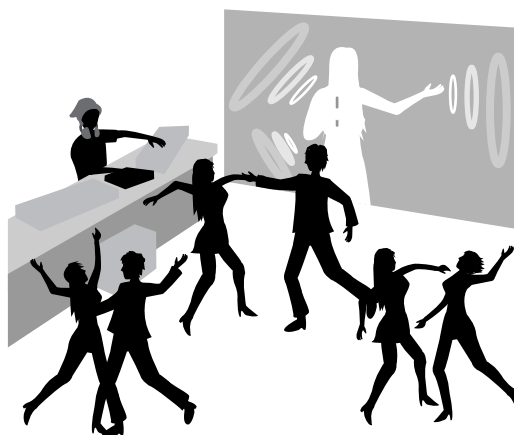

## Using the P-10 at Concerts (V-LINK)


As a musician, use your MIDI device to control the P-10 and synchronize images to the sounds and beats.



# Mastering Basic Operation

## What Does the P-10 Do?

The P-10 is an easy to operate visual sampler that allows you to freely perform with images as your imagination designs.

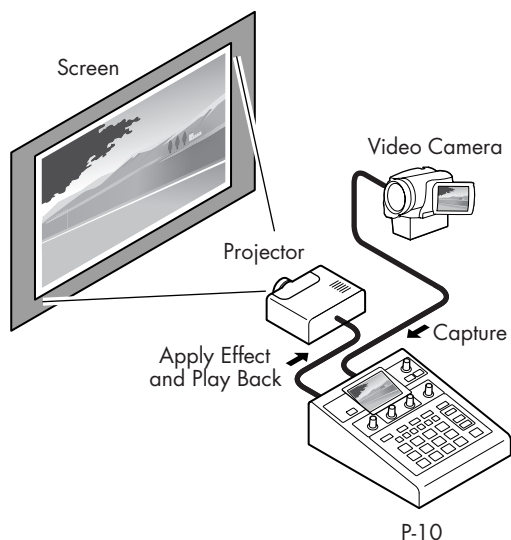


## Basic Operation

### What is a PAD?


Press a pad to play back an image. Pads that have a movie assigned to them light in red. Pads that have still images assigned to them light in blue.

The P-10 has 6 BANK buttons [A]–[F]. For each bank there are 12 bank numbers. Furthermore, each bank number has 12 pads. This means that when you assign images, you have up to 864 possible assignment locations (6 BANK buttons x 12 BANK numbers x 12 PAD buttons = 864 storage locations).

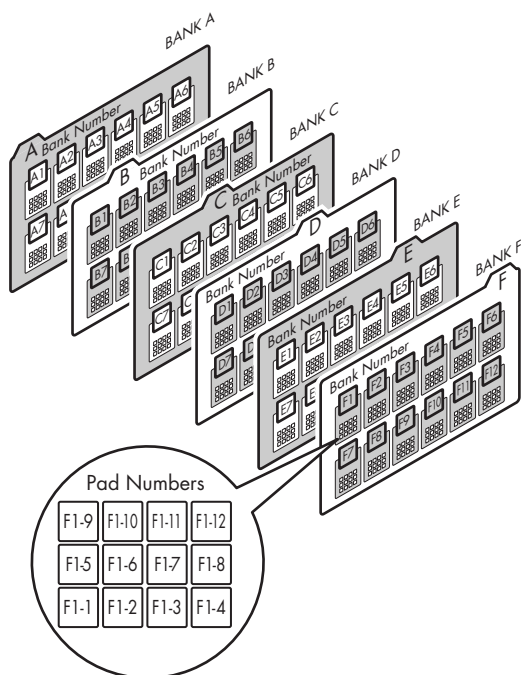


## Using the [MENU] Button and [VALUE] Knob

Press the [MENU] button to display the MENU screen.

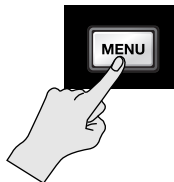

Rotate the [VALUE] knob to select setting items on the MENU screen.

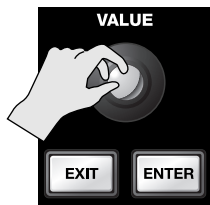

Rotate the [VALUE] knob to the left or right to select setting items.

## Using the [EXIT] Button

Press the [EXIT] button to return to the previous screen.

**MEMO**

When an image is being played back, pressing the [EXIT] button stops playback.



## Using the [ENTER] Button


Press the [ENTER] button to execute the setting that you have selected by rotating the [VALUE] knob.




## Outputting Images

When you connect the P-10 to a visual device such as a display, not only the images played back on the P-10, but also the P-10's setting screens appear on the visual device. Be careful when performing at events, because visuals other than your selected images may be displayed. If you connect a mixer between the P-10 and the display, you can use the mixer to display the image from another connected device while setting screens are displayed on the P-10.

When you connect the P-10 directly to a display:

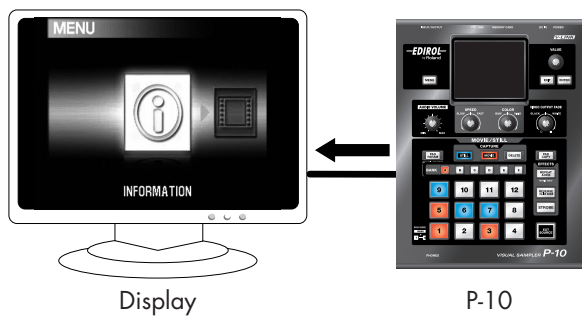

When you connect the P-10 to a mixer:

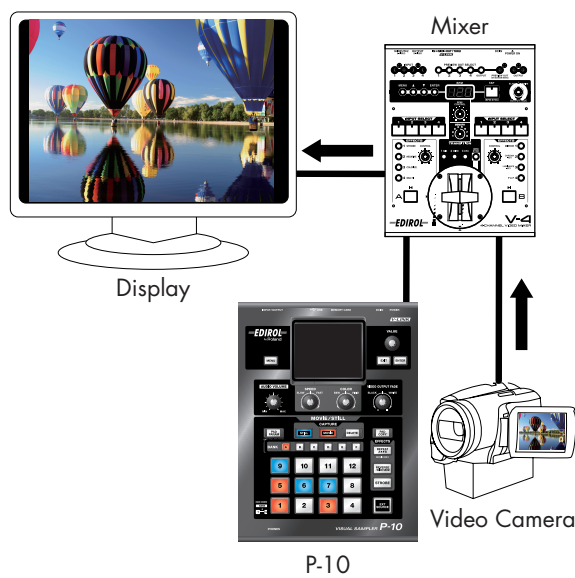

## Supported Movie and Still Image File Formats

The P-10 supports the following movie and still image file formats.

Data Type	Supported Format
Movies	Motion JPEG
Still Images	JPEG
Audio	WAV

**MEMO** For details, see “P-10 Supported Formats” (p. 68).

## About NTSC and PAL

There are two main TV broadcast formats used around the world, NTSC and PAL.

The standard in use differs according to the country or region.

Video Format	Description
NTSC	Mainly North America, Japan, and Korea
PAL	Mainly Europe, Continental Asia, and Australia


If the P-10 format doesn't match the format of the external display, such as a TV, images will not be displayed. When you connect an external display, first check which format is in use and then match the setting on the P-10.

**NOTE** For details, see “Specifying the Video Format (Video Format)” (p. 57).

---

# MEMO

## 2. Playing Back Images

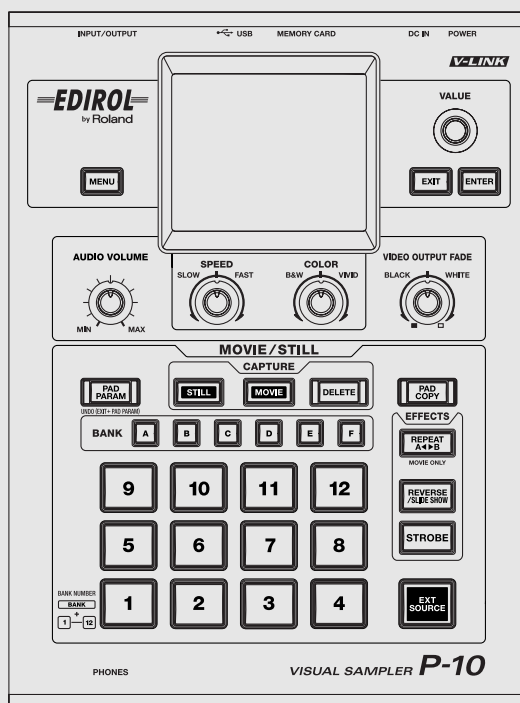

# Playing Back Images Assigned to Pads


## Playing Back Images

To play back an image, select a pad that has an image assigned to it.

### 1. Select the BANK number.

Bank "B1" is selected in this example.


- ① Press and hold the BANK [B] button.
- ② Press PAD [1].

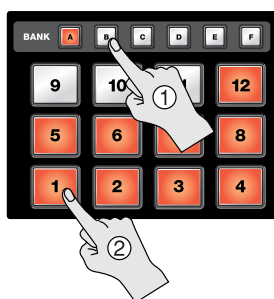

The BANK number switches to "B1."

### 2. Press a PAD [1]–[12].

PAD [1] is selected in this example.

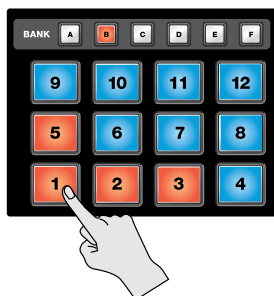

The image assigned to "B1-1" plays back.

The pads light up differently according to the type of image assigned to them.

Pad	Assigned Image Type
Lit Red	Movie
Lit Blue	Still Image
Unlit	No Images Assigned

**MEMO** When you play back an image with audio, rotate the [AUDIO VOLUME] knob to adjust the volume.

**MEMO** When multiple still images are assigned to a pad, pressing the pad repeatedly changes the images in order.

**MEMO** Depending on the movie quality or effects that are applied, some movie frames may be skipped.

If you add an audio file to a movie, when you play back the movie, the audio file plays back at the same time. If you add an audio file to a movie that has its own audio, the added audio plays back when you play the movie.

For details, see "Specifying an Audio Files (Additional Audio File)" (p. 44, p. 46).

## Stopping Image Playback

### 1. Press the [EXIT] button.

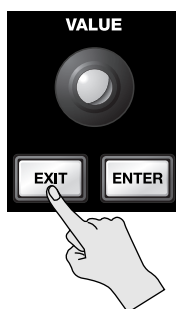



Image playback is stopped.

## Displaying Input Images

Connect an external device (such as a video camera or DVD player) and you can display its images on the P-10's display or on an external display connected to the P-10.

**MEMO** Make sure you specify the video input jack beforehand (p. 57).


1. Connect an external device to the P-10.
2. Turn on the P-10 and the external device.
3. Play back an image on the external device.
4. Press the [EXT SOURCE] button.

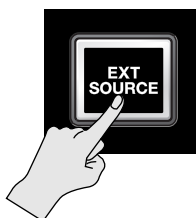

The image from the external device appears on the P-10 display and the external display (if connected).

**MEMO** To stop displaying images that are being input, press the [EXT SOURCE] button again.

# 3. Applying Effects to Images

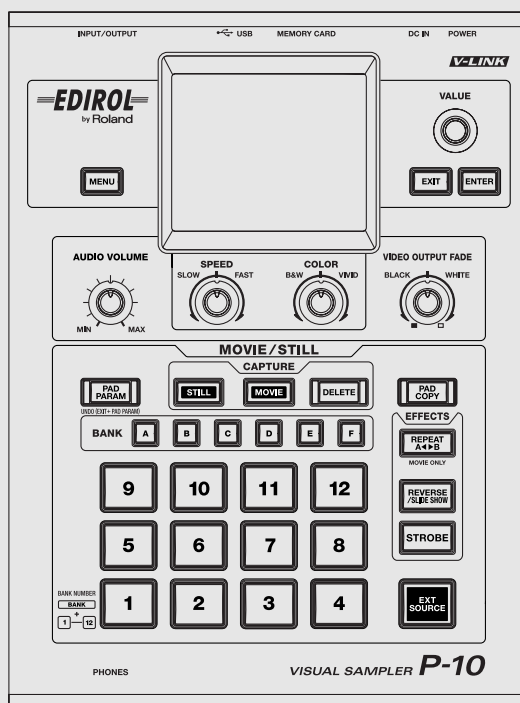

# Effects


Apply image effects—such as changing colors, reversing playback, and changing the playback speed—to enhance your performance.

Effect	Description	Movies	Stills
[SPEED] Knob	Adjust the playback speed.	○	–
[COLOR] Knob	Adjust the image color.	○	○
[VIDEO OUTPUT FADE] Knob	Fade the image.	○	○
[REPEAT A ◀▶ B] Button	Repeat a specified section of a movie.	○	–
[REVERSE/SLIDE SHOW] Button (when playing back movies)	Play the movie in reverse.	○	–
[REVERSE/SLIDE SHOW] Button (when playing back still images)	Play a slide show of all the images assigned to one pad.	–	○
[STROBE] Button	Play back an image with a strobe effect.	○	○

**MEMO** Rotate the [SPEED], [COLOR], and [VIDEO OUTPUT FADE] knobs to the left or right to apply various image effects. When the small notch on the knob is centered, the image plays back normally.

## Changing the Playback Speed of a Movie (SPEED)

Rotate the [SPEED] knob to speed up or slow down movie playback. You can also use this knob to pause a movie during playback.

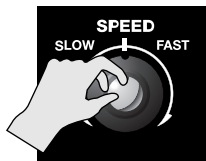


Setting	Description
<b>SLOW</b>	Turn the knob to the left and playback speed decreases. The slowest playback speed is 25% of the normal speed. Turning the knob all the way to the left stops the movie where it is.
<b>FAST</b>	Turn the knob to the right and playback speed increases. Turning the knob all the way to the right increases the playback speed to 400% of the normal speed.

You can specify the type of speed change that occurs when you rotate the [SPEED] knob.

**MEMO** For details, see “Specifying the Type of Speed Effect (Speed Ctrl Type)” (p. 58).

## Changing the Color of an Image (COLOR)

Rotate the [COLOR] knob to adjust the color saturation. You can brighten the colors of an image and change to black and white.

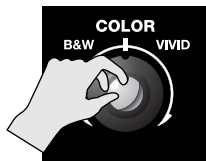


Setting	Description
<b>B&amp;W</b>	Turn the knob to the left to gradually change the display to black and white.
<b>VIVID</b>	Turn the knob to the right to raise the color saturation (color brightness).

You can specify the type of color change that occurs when you rotate the [COLOR] knob.

**MEMO** For details, see “Specifying the Type of Color Effect (Color Ctrl Type)” (p. 58).

# Fading an Image (VIDEO OUTPUT FADE)

Rotate the [VIDEO OUTPUT FADE] knob to fade the image. "Fade" is a playback effect. Gradually fading from an image to a colored screen, such as black or white, is called "fade out." Conversely, gradually fading in to an image from a colored screen is called "fade in."

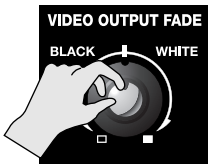

Setting	Description
BLACK	Turn the knob to the left to fade to black.
WHITE	Turn the knob to the right to fade to white.

You can specify fade colors other than black and white, such as red and blue.

**MEMO** For details, see "Specifying the Fade Effect Color (Output Fade Color L, Output Fade Color R)" (p. 58).

# Repeating Movie Playback (REPEAT)

Specify a section of a movie in real-time and then repeat playback.

- 1. Play a movie.**  
For details about playing back movies, see "Playing Back Images" (p. 26).
- 2. Press the [REPEAT A ◀▶ B] button at the point where you want the movie to start repeating.**



The [REPEAT A ◀▶ B] button flashes.

- 3. Press the [REPEAT A ◀▶ B] button at the point where you want the movie to stop repeating.**  
The [REPEAT A ◀▶ B] button lights up and the specified section plays back repeatedly.
- 4. To cancel the repeat effect, press the [REPEAT A ◀▶ B] button again.**  
The [REPEAT A ◀▶ B] button turns off and the repeat effect is cancelled.

**MEMO** When you select another pad, repeat playback is cancelled.

## Reversing Movie Playback (REVERSE)

You can play back a movie in reverse. When you reverse movie playback, audio playback is also reversed.

If you want to play back audio normally while playing back a movie in reverse, see “Syncing a Movie with Audio (Audio Sync)” (p. 44).

### 1. Play a movie.

For details, see “Playing Back Images” (p. 26).

### 2. Press the [REVERSE/SLIDE SHOW] button.



The [REVERSE/SLIDE SHOW] button lights up and the movie plays back in reverse.

### 3. To cancel reverse playback, press the [REVERSE/SLIDE SHOW] button again.

The [REVERSE/SLIDE SHOW] button turns off and reverse playback is cancelled.

To reverse playback whenever you press a pad to play back a movie, set “Reverse Sw” to “ON” in pad parameters.

**MEMO**

For details, see “Specifying the Reverse Effect (Reverse Sw)” (p. 45).

When you select another pad, reverse playback is cancelled.

**MEMO**

## Displaying Still Images in a Slide Show (SLIDE SHOW)

The P-10 slide show doesn’t just display your images in a slide show, you can also apply motion graphics just like the ones used in professional music video clips. Slide show patterns that apply these effects are called a “slide show set.” The P-10 has 79 motions for you to choose from to create a set that displays your own unique style.

### 1. Play a still image.

For details, see “Playing Back Images” (p. 26).

### 2. Press the [REVERSE/SLIDE SHOW] button.



The [REVERSE/SLIDE SHOW] button lights up and slide show playback starts.

### 3. To cancel the slide show, press the [REVERSE/SLIDE SHOW] button again.

The [REVERSE/SLIDE SHOW] button turns off and the slide show finishes.

**NOTE**

The slide show effect may not start immediately after pressing the [REVERSE/SLIDE SHOW] button.

**NOTE**

While a slide show is playing back, the [SPEED], [COLOR], and [VIDEO OUTPUT FADE] knobs don’t work.

For details about specifying a slide show set, see “Specifying the Slide Show Set (Slide Show Set)” (p. 47).

**MEMO**

When you select another pad, the slide show display is cancelled.

## Applying Strobe to Image Playback (STROBE)

Play back images with strobe.

Movies appear with short intervals between frames creating a stop motion feel. Still images are displayed one after another in short flashes.

### 1. Play back an image.

For details, see "Playing Back Images" (p. 26).

### 2. Press the [STROBE] button.



The [STROBE] button lights up and images are played back with strobe.

### 3. To cancel the strobe effect, press the [STROBE] button again.

The [STROBE] button turns off and strobe playback is cancelled.

#### MEMO

When you select another pad, strobe playback is cancelled.

You can set the strobe interval for each pad.

For details, see below.

#### MEMO


**Movies:** "Specifying the Strobe Interval (Strobe Time)" (p. 45)

**Still Images:** "Specifying the Strobe Interval (Strobe Time)" (p. 47)

---

# MEMO

# 4. Capturing Images

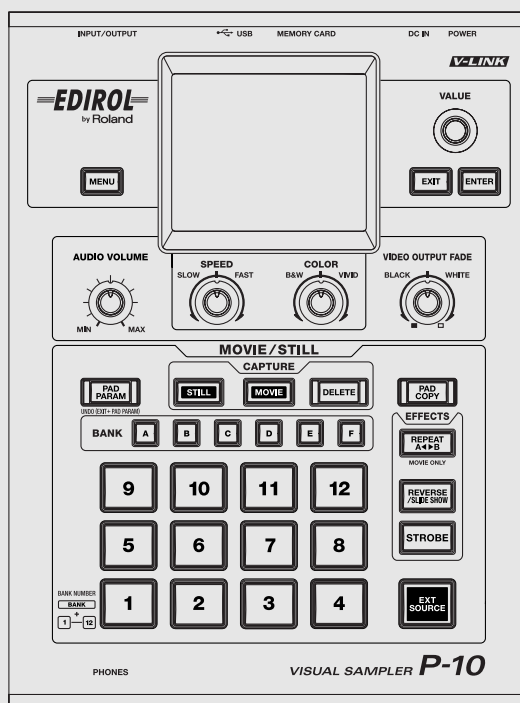

# Capturing Images from an External Device

## What is Capturing?

You can capture images from an external device, such as a DVD player or video camera, as stills or movies using the P-10.

**NOTE** The P-10 cannot capture images from media with technical security measures (copy guard signal).

## Possible Movie Length and Number of Still Images

If you are using an SD card with 1GB of available space, you can save captured files in the following amounts:

<b>Movies</b>	about 15 min.
<b>Still Images</b>	about 2000 files

**NOTE** Depending on the images, the length of a movie that you can save may be shorter, and the number of still images that you can save may be fewer.

## Capturing Movies


Connect the P-10 to an external device beforehand.

1. Play back an image on the external device.
2. Press the [EXT SOURCE] button.



The image from the external device appears on the P-10's display.

3. Press the CAPTURE [MOVIE] button at the point that you want to start capturing the movie.

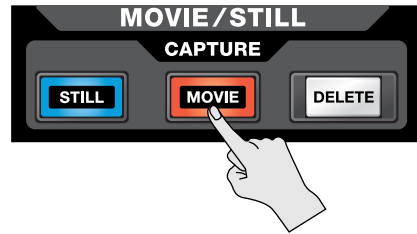

The CAPTURE [MOVIE] button flashes.

4. Press the CAPTURE [MOVIE] button again at the point that you want to stop capturing the movie.  
Empty pads flash red.


### MEMO

When there is no flashing pad, press a bank button to select another bank.

5. Press a pad that is flashing.

The captured movie is assigned to the selected pad.

If you have selected a pad that is lit red (movie) or blue (still image), the following screen appears.

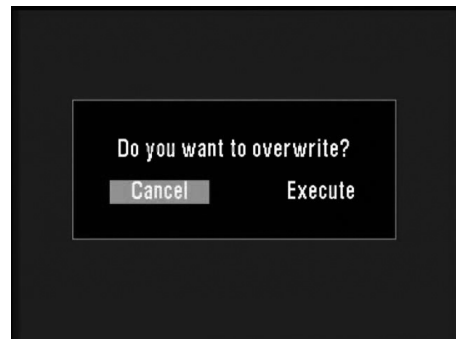

If you want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Execute," and then press the [ENTER] button.

If you don't want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Cancel," and then press the [ENTER] button.

The P-10's captured movie format is Motion JPEG (NTSC: 480/29.97P, PAL: 480/25P). When capturing images that have fast movement, the frames may appear stacked when you pause. This is due to progressive conversion. The JPEG compression format can reduce the quality of the movie, but you can avoid this by transferring the images to a computer and using the P-10 Image Converter application on the included CD-ROM to convert them to P-10 format images.

### NOTE


You can capture up to about 30 minutes of continuous video on the P-10. Even when using a 2GB SD card, capturing automatically stops when the capture time exceeds 30 minutes. Furthermore, capturing automatically stops when the amount of empty space on the card is insufficient.

**MEMO**

## Capturing Still Images


Connect the P-10 to an external device beforehand.

1. Play back an image on the external device.
2. Press the [EXT SOURCE] button.

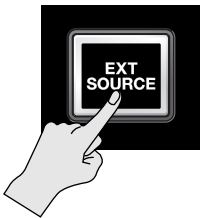

The image from the external device appears on the P-10's display.

3. Press the CAPTURE [STILL] button when the image you want to capture appears.

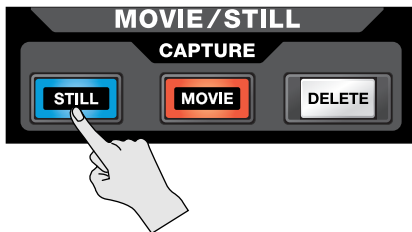

Empty pads flash blue.

**MEMO**

When there is no flashing pad, press a bank button to select another bank.

4. Press a pad that is flashing.

The captured still image is assigned to the selected pad.

If you have selected a pad that is lit red (movie) or blue (still image), the following screen appears.



If you want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Execute," and then press the [ENTER] button.

If you don't want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Cancel," and then press the [ENTER] button.

**MEMO**

You can capture a continuous series of still images. For details, see "Specifying the Capture Still Mode (Capture Still Mode)" (p. 58).

## Deleting Captured Images

1. **Select the pad which has images you want to delete assigned to it.**

For details about selecting a pad, see "Playing Back Images" (p. 26).

2. **Press the [DELETE] button.**


A confirmation screen appears.



3. **Rotate the [VALUE] knob to select "Execute."**

4. **Press the [ENTER] button.**

A screen appears to confirm whether you want to delete the file from the SD card.

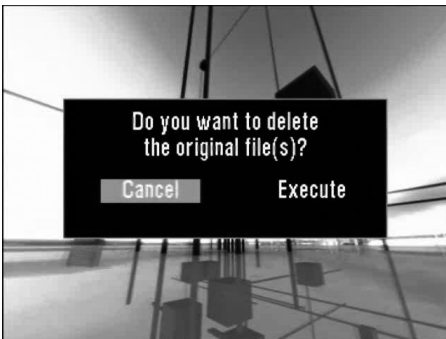

5. **Rotate the [VALUE] knob to select "Execute" or "Cancel."**

When you want to delete the image from the SD card, select "Execute," and when you don't want to not delete the image, select "Cancel."

6. **Press the [ENTER] button.**

**NOTE**

If the image is assigned to other pads, when you delete the file, the image is also deleted from the other pads.

# Transferring Files from a Computer to the P-10

## Using Windows XP or Windows Vista

Connect the P-10 to a computer and you can use the computer to prepare images.

When preparing images with a computer, make sure you install the P-10 Image Converter application from the CD-ROM supplied with the P-10 beforehand.

### MEMO

You can obtain higher resolution images by capturing them (from a format such as DV) on a computer and converting them to P-10 format first than you can by recording on the machine.

## What is the P-10 Image Converter?

P-10 Image Converter is an application that allows you to change movies and still images that you have in your computer to P-10 supported formats and save the files to the SD card.

### NOTE

The P-10 Image Converter application is only supported by Windows XP and Windows Vista. Be aware that Mac OS X does not support the application.

### MEMO

For details about how to install P-10 Image Converter, see the Readme.txt file on the CD-ROM.

### MEMO


You can also insert the P-10 formatted SD card into your computer's card reader, or connect a card reader to your computer to prepare images.

## Starting Up P-10 Image Converter

Format the SD card on the P-10 (p. 63) and prepare images on the computer before performing the following procedure.

1. Insert the SD card into the P-10.
2. Turn on the P-10.
3. Press the [EXIT] button to make sure that nothing is being displayed on its screen.

4. Use a USB cable to connect the P-10 to the computer.

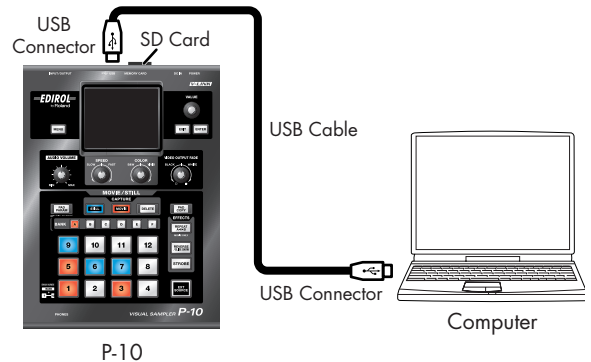

5. Select "P-10 Image Converter" from the "Start" menu.

P-10 Image Converter starts up.

6. Transfer images to the P-10 using P-10 Image Converter.

### MEMO

For details about using P-10 Image Converter, see "P-10 Image Converter Manual" in the P-10 Image Converter Help menu.

### NOTE

For details about operation specifications, see the Roland website.

<http://www.rolandsystemsgroup.net/>


7. Click on the icon in the bottom-right corner of the screen, select [Safely Remove Hardware], and the USB connection is stopped.



8. Disconnect the USB cable.

# MEMO


# 5. Pad Settings

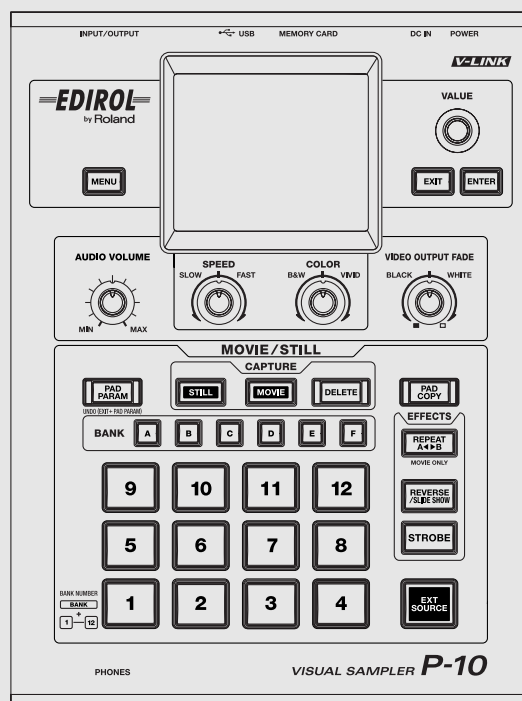

# Assigning Images to Pads

By assigning an image to a pad, you can play back an image by simply pressing the pad to which it is assigned. When you assign images to each pad, you can change to images you want to play back in an instant.

The limits on files that you can assign to one pad are listed below.

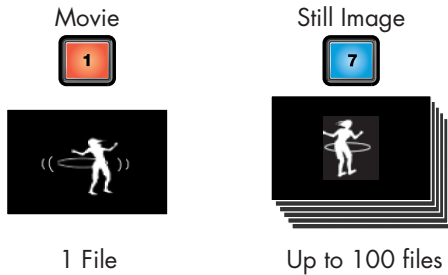

## 1. Press the [PAD PARAM] button.



## 2. Press a pad that is unlit.

The selected pad flashes purple and the FILE SELECT screen appears.



## 3. Rotate the [VALUE] knob to select an image.

## 4. Press the [ENTER] button.

The image is assigned to the pad.

For details about how to add still images to a pad, see "Adding Still Images to a Pad (Add Still Image)" (p. 45).

# Pad Parameters

## What are the Pad Parameters?

“Pad Parameters” are the settings that specify how an image is played back and let you change the image or images assigned to a pad.


## PAD PARAMETER Screen Operation

1. Select the pad which has parameters that you want to change.
2. Press the [PAD PARAM] button.




The PAD PARAMETER screen appears.


The selected pad's number appears in the upper-right corner of the screen.

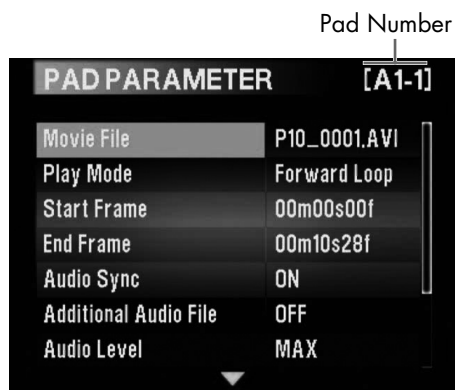

3. Rotate the [VALUE] knob to select a setting item.

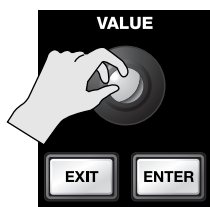

4. Press the [ENTER] button.
5. Rotate the [VALUE] knob to change the value.

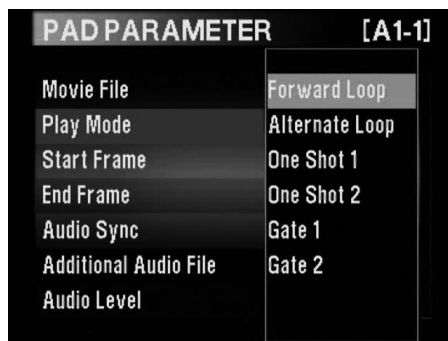

6. Press the [ENTER] button.

The selected parameter is changed.

**MEMO**

While the PAD PARAMETER screen is displayed, you can select another pad and change its pad parameter settings.

**MEMO**

To return to the previous screen, press the [EXIT] button.

## Exiting the PAD PARAMETER Screen

Press the [PAD PARAM] button to close the PAD PARAMETER screen.



## Returning to the Previous Setting Value (UNDO)

You can return the P-10 to its state prior to changing the settings after performing the following operations.

Changing the PAD PARAMETER	p. 43
Deleting pad data only	p. 36
Copying pad data	p. 48
Capturing images	p. 34

1. Press the [EXIT] button while pressing the [PAD PARAM] button.
2. Rotate the [VALUE] knob to select "Execute."



3. Press the [ENTER] button.

The setting returns to its previous value.

You cannot return the P-10 to its state prior to changing the settings after performing the following operations:

- Turning the power off (p. 19)
- Connecting to a computer by USB (p. 37)
- Removing the SD card (p. 17)
- Truncating a movie (p. 49)
- Selecting Delete File (p. 63), Factory Reset (p. 64), or Format SD Card (p. 63) from the MENU screen

## Movie Pad Parameters

You can specify the following parameters for movies.

Parameter Name	Description	Page
Movie File	Change the movie assigned to a pad.	p. 43
Play Mode	Specify the play mode.	p. 43
Start Frame	Specify the first frame for playback.	p. 44
End Frame	Specify the last frame for playback.	p. 44
Audio Sync	Specify whether to sync movie and audio playback.	p. 44
Additional Audio File	Specify an audio file.	p. 44
Audio Level	Adjust the audio level.	p. 45
Reverse Sw	Specify whether to apply the reverse effect (reverse playback).	p. 45
Strobe Sw	Specify whether to apply the strobe effect.	p. 45
Strobe Time	Specify the strobe interval.	p. 45

## Still Image Pad Parameters

You can specify the following parameters for still images.

Parameter Name	Description	Page
Still Image File	Add and exchange still images assigned to a pad.	p. 45
Additional Audio File	Specify an audio file.	p. 46
Audio Level	Adjust the audio level.	p. 46
Effect Sw	Specify still image effects.	p. 46
Slide Show Set	Specify the slide show type.	p. 47
Slide Show User Set	Specify an original slide show set.	p. 47
Strobe Time	Specify the strobe interval.	p. 47

# Changing the Pad Parameters

## Movies

### Changing a Movie Assigned to a Pad

1. Select the PAD which has the movie you want to change assigned to it.

**MEMO** Pads that have movies assigned to them light up red.

2. Press the [PAD PARAM] button.



3. Rotate the [VALUE] knob to select "Movie File," and then press the [ENTER] button.

The FILE SELECT screen appears.



4. Rotate the [VALUE] knob to select the movie that you want to assign, and then press the [ENTER] button.

**MEMO** You cannot assign a movie to a pad that already has still images assigned to it. If you want to do this, first delete the pad data, and then assign the movie. For details, see "Deleting Captured Images" (p. 36).


### Changing the Play Mode (Play Mode)

Specify the play mode according to how you want to play back a movie. Play back a movie using the following play modes.

Play Mode	Description
Forward Loop	<p>Repeats playback.</p>
Alternate Loop	<p>Repeats playback alternating between forward and reverse play back.</p>
One Shot1	<p>Plays the movie file once and then stops, leaving the last frame displayed.</p>
One Shot2	<p>Plays the movie file once and then stops, leaving the screen blank.</p>
Gate1	<p>Plays the movie as long as you hold the pad. When you release the pad, playback pauses and the last frame is displayed. Press the pad again to resume playback.</p>
Gate2	<p>Plays the movie as long as you hold the pad. When you release the pad, playback pauses and the screen is left blank. Press the pad again to resume playback.</p>

## Specifying the Playback Range (Start Frame/End Frame)

Specify the range of the movie that you want to play back.

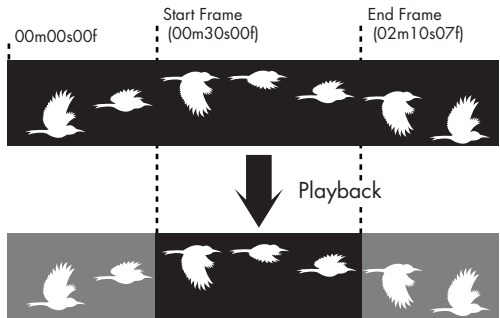

1. Rotate the [VALUE] knob to select “Start Frame” on the PAD PARAMETER screen, and then press the [ENTER] button.  
The Start Frame screen appears.
2. Rotate the [VALUE] knob to select the first frame that you want to play back.
3. Press the [ENTER] button.  
You are returned to the PAD PARAMETER screen.
4. Rotate the [VALUE] knob to select “End Frame.”  
The End Frame screen appears.
5. Rotate the [VALUE] knob to select the last frame that you want to play back.
6. Press the [ENTER] button.  
You are returned to the PAD PARAMETER screen.

You can cut and delete the parts of the movie outside of the specified playback range (Truncate) to make the file size smaller.  
For details, see “Truncating a Movie (Truncate)” (p. 49).

## Syncing a Movie with Audio (Audio Sync)

When you apply speed, repeat, and reverse effects to a movie, you can specify whether to apply the same changes to the audio.

Setting	Description
ON	Change audio at the same time to match the movie.
OFF	Play back audio normally and apply effects to the movie only.

**NOTE** When you turn the [SPEED] knob all the way to the left, the movie and audio playback both pause.

## Specifying an Audio File (Additional Audio File)

You can specify a separate audio file to play back with a movie. When you play back the movie, the specified audio file plays back.

**MEMO** To specify an audio file, make sure you add audio files to the SD card beforehand.

1. Rotate the [VALUE] knob to select “Additional Audio File” on the PAD PARAMETER screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to select an audio file.
3. Press the [ENTER] button.

**MEMO** If there are no audio files saved to the SD card, no audio files are displayed.

**MEMO** If you have specified an audio file for a movie that already has audio, the movie audio doesn’t play back.

## Specifying the Volume (Audio Level)

Specify the volume.

Setting	Description
MAX	This is the maximum volume.
1-9	Specify the volume level with a number. The higher the number you set, the higher the volume becomes.
OFF	The volume is set to "0."

## Specifying the Reverse Effect (Reverse Sw)

When you press a pad to play a movie, it plays back in reverse.

Setting	Description
ON	Turns reverse on.
OFF	Turns reverse off.

## Specifying the Strobe Effect (Strobe Sw)

When you press a pad to play a movie, it plays back with strobe.

"Strobe" is an effect that plays back a movie with short intervals between frames, creating a stop motion feel.

Setting	Description
ON	Turns strobe on.
OFF	Turns strobe off.

## Specifying the Strobe Interval (Strobe Time)

You can specify the time interval for the strobe effect.

For example, if you specify "0.5sec," the movie plays in 0.5 second strobe bursts.

Setting	Description
0.5sec-2.0sec	Specify the interval in 0.1 second units.

## Still Images

### Adding Still Images to a Pad (Add Still Image)

You can add still images to a pad that has a still image assigned to it.

#### 1. Select the pad to which you want to add still images.

**MEMO**

Pads that have still images assigned to them light up blue.

#### 2. Press the [PAD PARAM] button.

#### 3. Rotate the [VALUE] knob to select "Still Image File," and then press the [ENTER] button.

The STILL IMAGE LIST screen appears.



#### 4. Rotate the [VALUE] knob to select "Add Still Image," and then press the [ENTER] button.

The FILE SELECT screen appears.



#### 5. Rotate the [VALUE] knob to select the still image that you want to add.

#### 6. Press the [ENTER] button.

The still image is added to the pad.

## Exchanging Still Images Assigned to a Pad

You can exchange still images that are assigned to a pad.

You cannot add still images to a pad that already has a movie assigned to it. If you want to do this, first delete the pad data, and then assign a still image.

**MEMO**

For details, see “Deleting Captured Images” (p. 36).

1. Select the pad to which the still image that you want to exchange is assigned.

Pads that have still images assigned to them light up blue.

2. Press the [PAD PARAM] button.
3. Rotate the [VALUE] knob to select “Still Image File,” and then press the [ENTER] button.
4. Rotate the [VALUE] knob to select the image that you want to exchange, and then press the [ENTER] button.

The FILE SELECT screen appears.



5. Rotate the [VALUE] knob to select the image that you want to exchange with the previous image, and then press the [ENTER] button.

A confirmation screen appears.

6. Rotate the [VALUE] knob to select “Exchange,” and then press the [ENTER] button.

The new image is assigned to the pad, replacing the old image.

## Specifying an Audio File (Additional Audio File)

You can add an audio file to a pad which has still images assigned to it. When you play back the still images, the audio file also plays back.

**MEMO**

To specify an audio file, make sure you add audio files to the SD card beforehand.

1. Rotate the [VALUE] knob to select “Additional Audio File” on the PAD PARAMETER screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to select an audio file.
3. Press the [ENTER] button.

**MEMO**

If there are no audio files saved to the SD card, you cannot select an audio file.

## Specifying the Volume (Audio Level)

Specify the volume.

Setting	Description
MAX	This is the maximum volume.
1–9	Specify the volume level with a number. The higher the number you set, the higher the volume becomes.
OFF	The volume is set to “0.”

## Specifying Effects (Effect Sw)

When you press a pad to play back still images, they play back with strobe or as a slide show. When you play back still images with the slide show effect, each image is displayed in order. If you apply the strobe effect, the images appear at an interval you specify.

Setting	Description
OFF	Turns off all effects.
Slide Show	Applies the slide show effect.
Strobe	Applies the strobe effect.

## Specifying the Slide Show Set (Slide Show Set)

The P-10 comes with 10 slide show sets (preset). You can also select "User Set" and play back your own customized slide show set. For details, see "Slide Show Set" (p. 69).

Setting	Description
<b>Preset 1–10</b>	Select the slide show set to apply.
<b>User Set</b>	Apply your customized slide show set.

## Creating a Slide Show Set (Slide Show User Set)

Motions are movements such as enlarging, shrinking, and sliding still images. The P-10 comes with 79 types of motions for you to choose from. You can create an original slide show set by selecting and arranging the motions. For details, see "Motions" (p. 70).

Setting	Description
<b>Motion 1–5</b>	Specify the motion.
<b>Preview</b>	Preview the slide show set that you have created. To exit the preview, press the [EXIT] button.

## Specifying the Strobe Interval (Strobe Time)

You can specify the time interval for the strobe effect. For example, if you specify "0.5sec," each still image plays back in 0.5 second strobe bursts.

Setting	Description
<b>0.5sec–2.0sec</b>	Specify the interval in 0.1 second units.

# Copying Pad Parameters

Copy parameters from one pad and assign them to another pad.

## MEMO

When you copy the pad parameters, the images assigned to the pad are also copied.

### 1. Select the PAD button that you want to copy.

For details about selecting pads, see "Playing Back Images" (p. 26).

### 2. Press the [PAD COPY] button.




The bank number and pad number of the pad selected in step one appear in "SOURCE."



### 3. Press a pad that is flashing to select the copy destination.


The selected bank number and pad number appear in "DEST."

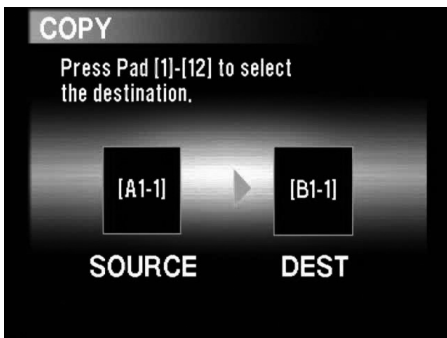

### 4. Press the [ENTER] button.

The pad parameters are copied to the selected pad.

If you have selected a pad that is lit red (movie) or blue (still image), the following screen appears.

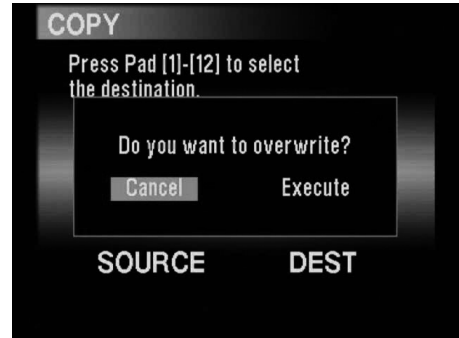

If you want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Execute," and then press the [ENTER] button.

If you don't want to overwrite the image assigned to the pad, rotate the [VALUE] knob to select "Cancel," and then press the [ENTER] button.


## Copying the Parameters of an Entire Bank

You can copy the parameters of an entire bank, such as copying BANK A1-1–A12-12 to BANK C1-1–C12-12.

1. Press the [EXIT] button to stop image playback.
2. Press the [PAD COPY] button.
3. Select the BANK button that you want to copy.
4. Press the [ENTER] button.
5. Select the BANK button that you want to assign copied data to.
6. Press the [ENTER] button.

# Truncating a Movie (Truncate)

After capturing a movie, you can cut and delete excess parts. This works well for capturing movies with some extra footage at the beginning and end, which you can then delete later if you don't need it.

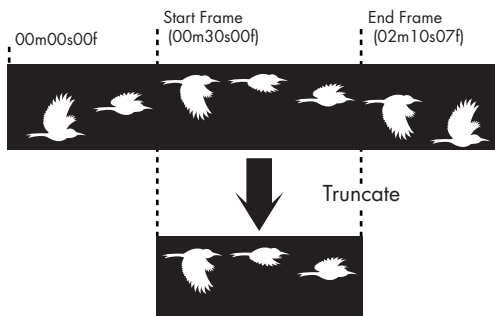

## NOTE

When you truncate a movie, the original file is overwritten so you cannot return to the original movie length once the action is complete.


### 1. Specify the "Start Frame" and "End Frame" from the PAD PARAMETER screen beforehand.

For details, see "Specifying the Playback Range (Start Frame/End Frame)" (p. 44).

### 2. Press the [PAD PARAM] button.


The [PAD PARAM] button lights up.

### 3. Press the [DELETE] button.

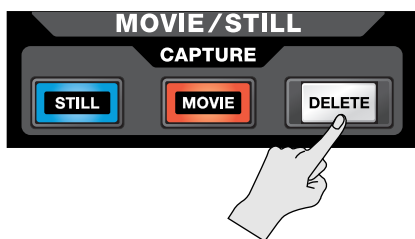

A confirmation screen appears.

### 4. Rotate the [VALUE] knob to select "Execute."

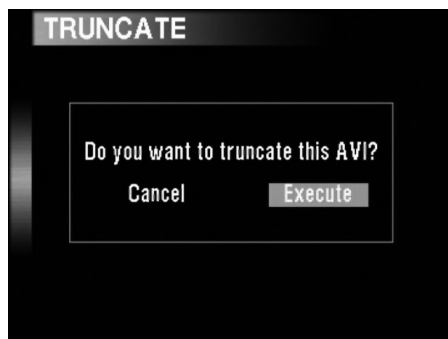

## MEMO

If you want to cancel the operation, rotate the [VALUE] knob to select "Cancel," and then press the [ENTER] button.

### 5. Press the [ENTER] button.

The P-10 begins truncating the movie.

## NOTE

Truncating a file may take some time to complete. Do not turn the power off until "Completed!" appears on the screen.


## NOTE

Because there must be working space on the SD card when you truncate a file, you may not be able to truncate a file depending on the amount of memory remaining.

---

# MEMO

# 6. System Settings

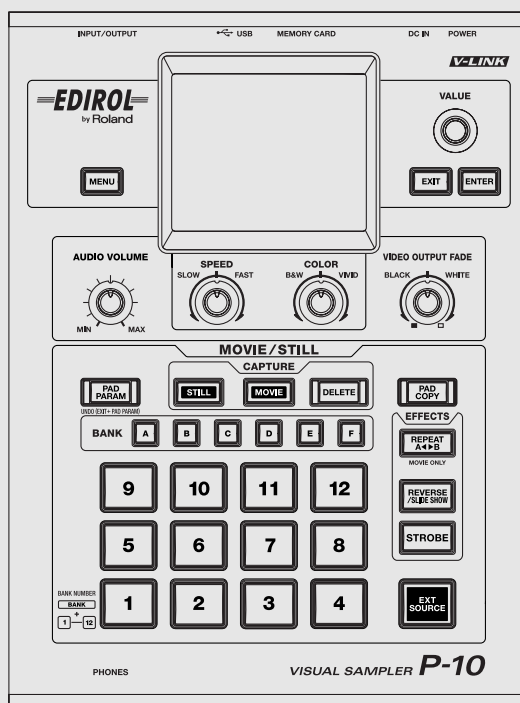

# Specifying System Settings

## Items You Can Specify


Functions relating to the P-10's operations are referred to as the "system." The system settings that you can specify are listed in the table below.

MENU	Setting Item	Description	Page
INFORMATION	<b>System Backup</b>	Back up system settings to the SD card.	p. 55
	<b>System Restore</b>	Restore the system with settings that you have previously backed up.	p. 55
	<b>Project Backup</b>	Back up all of the bank data to the SD card.	p. 56
	<b>Project Restore</b>	Restore all of the banks with data that you have previously backed up.	p. 56
VIDEO	<b>LCD Contrast</b>	Adjust the display contrast.	p. 57
	<b>Video Format</b>	Select the video format (NTSC/PAL).	p. 57
	<b>Input Video</b>	Select the INPUT jack type.	p. 57
	<b>Capture Still Mode</b>	Specify the capture mode for still images (one shot/continuous).	p. 58
	<b>Color Ctrl Type</b>	Specify the color type applied to the [Color] knob.	p. 58
	<b>Speed Ctrl Type</b>	Specify the speed type applied to the [Speed] knob.	p. 58
	<b>Output Fade Color L</b>	Specify the color that appears when the [VIDEO OUTPUT FADE] knob is turned to the left.	p. 58
	<b>Output Fade Color R</b>	Specify the color that appears when the [VIDEO OUTPUT FADE] knob is turned to the right.	p. 58
	<b>Start LOGO</b>	Specify whether to display the Edirol logo when the P-10 starts up.	p. 59
AUDIO	<b>Recording Gain</b>	Specify the audio sensitivity applied to audio input from an external source.	p. 59


MENU	Setting Item	Description	Page
MIDI	Device ID	Set the device ID when you have connected multiple P-10's to a MIDI device so that you can tell them apart.	p. 60
	Rx Channel	Specify the channel for receiving MIDI messages.	p. 60
	Tx Channel	Specify the channel for transmitting MIDI messages.	p. 60
	Soft Through	Specify this setting when you are using the MIDI OUT connector as a MIDI THRU connector.	p. 60
	Note Message Enable	Specify which keys to use for controlling the P-10 using a MIDI keyboard.	p. 60
	Keyboard Range Lower	Specify the lowest note of the range when controlling the P-10 using a MIDI keyboard.	p. 60
	Keyboard Range Upper	Specify the highest note of the range when controlling the P-10 using a MIDI keyboard.	p. 60
	Speed Knob	Specify how the [SPEED] knob is controlled from a MIDI device.	p. 61
	Color Knob	Specify how the [COLOR] knob is controlled from a MIDI device.	p. 61
	Output Fade Knob	Specify how the [VIDEO OUTPUT FADE] knob is controlled from a MIDI device.	p. 61
	Repeat A<>B Sw	Specify how the [REPEAT A ◀▶ B] button is controlled from a MIDI device.	p. 61
	Reverse Sw	Specify how the [REVERSE/SLIDE SHOW] button is controlled from a MIDI device.	p. 61
	Strobe Sw	Specify how the [STROBE] button is controlled from a MIDI device.	p. 61
	Capture Still Image	Specify how the CAPTURE [STILL] button is controlled from a MIDI device.	p. 62
	Capture Movie	Specify how the CAPTURE [MOVIE] button is controlled from a MIDI device.	p. 62
PROTECT	Video Mixer Control	Specify the channel used when controlling a video mixer from the P-10.	p. 62
	Pad Edit	Specify this setting to restrict the [PAD PARAM], [PAD COPY], and [DELETE] buttons.	p. 62
	Capture	Specify this setting to restrict the CAPTURE [MOVIE] and CAPTURE [STILL] buttons.	p. 62
DELETE FILE		Delete files saved on the SD card.	p. 63
FORMAT SD CARD		Format the SD card.	p. 63
FACTORY RESET		Reset the P-10 to its factory default settings.	p. 64

## MENU Screen Operation

1. Press the [MENU] button.

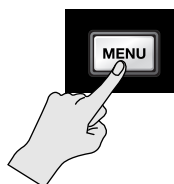

The MENU screen appears.

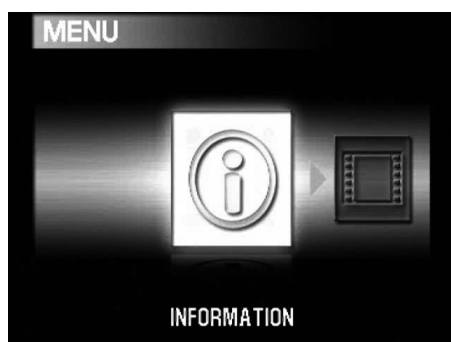

2. Rotate the [VALUE] knob to select a menu.




3. Press the [ENTER] button.

The settings screen appears.

### MEMO


Press the [EXIT] button to return to the previous screen.

4. Rotate the [VALUE] knob to select a setting item.

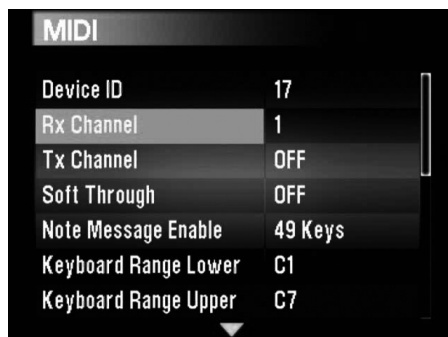

5. Press the [ENTER] button.

6. Rotate the [VALUE] knob to change the setting value.

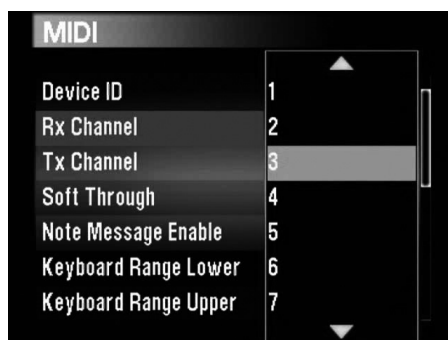

7. Press the [ENTER] button.


The selected value is specified.

8. When you have finished specifying settings, press the [MENU] button.

The screen closes.

## INFORMATION

This section explains the settings that you can specify from the INFORMATION menu.

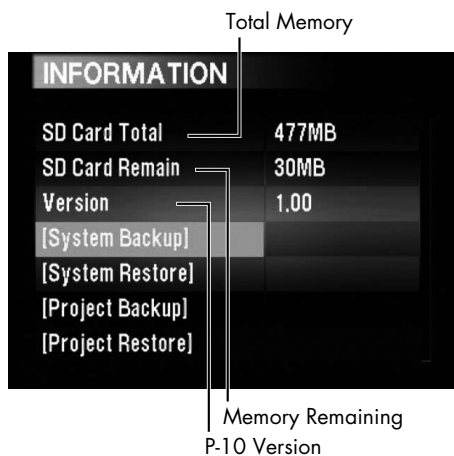

## Backing Up System Settings on the SD Card (System Backup)

Back up system settings on the SD card. You can recreate those settings on another P-10 just as they are by inserting the SD card. The settings that you can back up are listed below.

Menu	Page
VIDEO	p. 57
AUDIO	p. 59
MIDI	p. 59
PROTECT	p. 62

1. Rotate the [VALUE] knob to select "INFORMATION" from the MENU screen, and then press the [ENTER] button.

The INFORMATION screen appears.

2. Rotate the [VALUE] knob to select "System Backup."
3. Press the [ENTER] button.  
A confirmation screen appears.
4. Rotate the [VALUE] knob to select "Execute."



5. Press the [ENTER] button.

The system is backed up.

When the backup is complete, "Completed!" appears.

## Restoring System Settings (System Restore)

Restore P-10 settings using the backup file saved on the SD card.

1. Rotate the [VALUE] knob to select "INFORMATION" from the MENU screen, and then press the [ENTER] button.

The INFORMATION screen appears.

2. Rotate the [VALUE] knob to select "System Restore."
3. Press the [ENTER] button.  
A confirmation screen appears.
4. Rotate the [VALUE] knob to select "Execute."



5. Press the [ENTER] button.

The system is restored. When system restoration is complete, "Completed!" appears.

### NOTE

If there is no backup file saved on the SD card, then you cannot restore system settings.

## Backing Up All Bank Data (Project Backup)

You can save all of the bank parameters and image files on the SD card in up to 99 files. You can also restore the P-10 using bank parameter data that you have saved on the SD card.

For details, see "Restoring All Bank Data (Project Restore)" (p. 56).

### MEMO

Backup data is saved on the SD card in a folder (folder names 001EDROL–099EDROL).

1. Rotate the [VALUE] knob to select "INFORMATION" from the MENU screen, and then press the [ENTER] button.

The INFORMATION screen appears.

2. Rotate the [VALUE] knob to select "Project Backup."

3. Press the [ENTER] button.

A confirmation screen appears.

4. Rotate the [VALUE] knob to select "Execute."



5. Press the [ENTER] button.

The bank data is backed up.

When backup is complete, "Completed!" appears.

### NOTE

If there is not enough free space on the SD card, you cannot save the data.

## Restoring All Bank Data (Project Restore)

Restore all of the bank data using backup data saved on the SD card.


1. Rotate the [VALUE] knob to select "INFORMATION" from the MENU screen, and then press the [ENTER] button.

The INFORMATION screen appears.

2. Rotate the [VALUE] knob to select "Project Restore."

3. Press the [ENTER] button.

A list of folders that contain backup data appears.

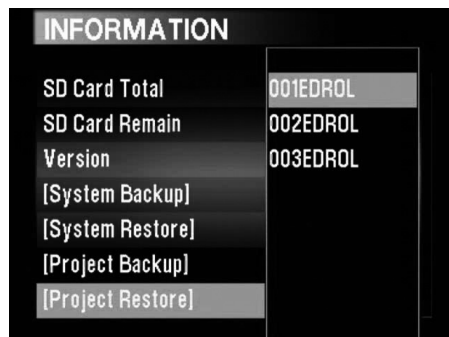


4. Rotate the [VALUE] knob to select the folder that has the bank data that you want to restore, and then press the [ENTER] button.

A confirmation screen appears.

### MEMO

When there is no backup data, the list of folders is not displayed and you cannot restore bank data.

5. Rotate the [VALUE] knob to select "Execute."

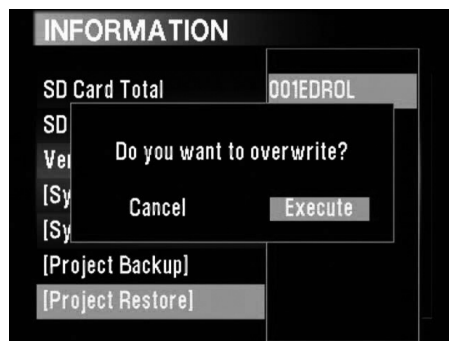

When you restore bank data on the P-10, the current settings are overwritten. We recommend backing up your current settings to the SD card first, and then restoring the P-10.

### MEMO


6. Press the [ENTER] button.

The bank data is restored.

When restoration is complete, "Completed!" appears.

## VIDEO

Make settings related to images on the VIDEO screen.

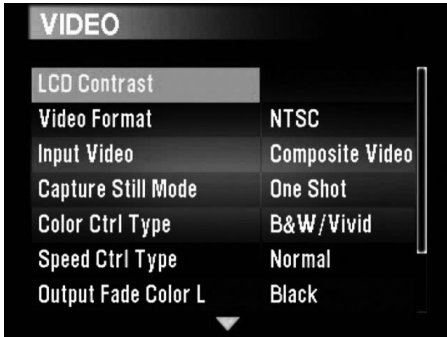

### Adjusting the Display Contrast (LCD Contrast)

You can adjust the brightness of the P-10's display.

1. Rotate the [VALUE] knob to select "LCD Contrast" on the MENU screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to adjust the contrast.

Setting	Description
Rotate the [VALUE] knob to the left.	The display becomes darker.
Rotate the [VALUE] knob to the right.	The display becomes brighter.

#### NOTE

It may take some time for the display brightness to change after rotating the knob. Rotate the [VALUE] knob slowly.

3. Press the [ENTER] button.

#### NOTE

The contrast setting is saved on the display itself. For this reason, the setting does not return to its factory default value by performing Factory Reset.

### Specifying the Video Format (Video Format)

The video format in use differs according to the country or region. If the video format isn't specified correctly when the P-10 is connected to a device, such as a TV, images will not appear on the screen.

When you connect an external display, first check which format is in use and then match the setting on the P-10.

After changing the video format, make sure you turn off the P-10, and then turn it back on again.

Setting	Description
NTSC	This is the standard that is used for television broadcasting mainly in North America, Japan, and Korea.
PAL	This is the standard that is used for television broadcasting mainly in Europe, Continental Asia, and Australia.

### Specifying the Video Input Jack (Input Video)

Specify the video input jack.

Match the setting to the input jack you are going to use.

Setting	Description
Composite Video	Specify this setting when connecting a device to the VIDEO jack using a composite video cable.
S-Video	Specify this setting when connecting a device to the S-VIDEO jack using an S-video cable.

## Specifying the Capture Still Mode (Capture Still Mode)

You can change the mode for capturing still images. The P-10 has a mode for capturing one still image at a time and a mode for capturing multiple still images in succession.

Setting	Description
<b>One Shot</b>	When you press the CAPTURE [STILL] button, the P-10 captures one still image.
<b>Continuous</b>	As long as you press the CAPTURE [STILL] button, the P-10 captures images continuously. You can capture up to 100 images at one time. Still images are captured at about 4 shots per second. * The number of shots taken per second differs according to the write speed of your SD card.

## Specifying the Type of Color Effect (Color Ctrl Type)

Specify how the colors change when you rotate the [COLOR] knob.

Setting	Description
<b>B&amp;W/Vivid</b>	Turn the knob to the left to change the color to black and white. Turn the knob to the right to make the colors more vivid.
<b>CR/CB</b>	Turn the knob to the left to emphasize red tones and decrease blue tones. Turn the knob to the right to emphasize blue tones and decrease red tones.
<b>Color Filter</b>	Change the color balance.

## Specifying the Type of Speed Effect (Speed Ctrl Type)

Specify how the speed changes when you rotate the [SPEED] knob.

Setting	Description
<b>Normal</b>	When you turn the [SPEED] knob to the right, the movie plays back at a faster speed. When you turn the knob to the left, the movie plays back at a slower speed. Turn the knob all the way to the left to pause the movie. When the knob is centered, the movie plays back at normal speed.
<b>Scratch</b>	The movie pauses when the [SPEED] knob is centered. As you rotate the knob to the right, the movie is played forwards and playback speed increases. When you rotate the knob all the way to the right, the movie plays back at normal speed. As you rotate the knob to the left, the movie is played back in reverse and playback speed increases. When you rotate the knob all the way to the left, the movie plays back at normal speed. * The [REVERSE] button is disabled.

## Specifying the Fade Effect Color (Output Fade Color L, Output Fade Color R)

Specify the color to use when fading an image.

"Fade" is an image effect that fades from an image to a specified color, or fades from a specified color to an image. Select "Output Fade Color L" to specify the color that appears when you turn the [VIDEO OUTPUT FADE] knob to the left. Select "Output Fade Color R" to specify the color that appears when you turn the [VIDEO OUTPUT FADE] knob to the right.

Setting	Description
<b>Black</b>	Fade to black.
<b>White</b>	Fade to white.
<b>Red</b>	Fade to red.
<b>Blue</b>	Fade to blue.
<b>Green</b>	Fade to green.
<b>Yellow</b>	Fade to yellow.


## Specifying the Startup Logo (Start LOGO)

Specify whether the Edirol logo appears on the P-10's display when the power is turned on.

Setting	Description
<b>ON</b>	Display the Edirol logo when the P-10 starts up.
<b>OFF</b>	Don't display the Edirol logo when the P-10 starts up.

## AUDIO

You can specify the sound level for audio that is input from a device on the AUDIO screen.

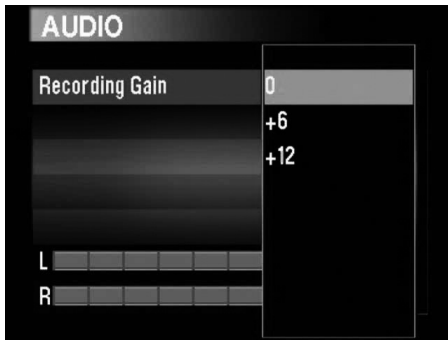

## Adjusting the Volume Level Using the Level Meter

The "L" and "R" meters at the bottom of the AUDIO screen indicate the volume level of the input audio. While looking at the level meter, rotate the [INPUT LEVEL] knob on the rear panel to adjust the volume level.

When you rotate the knob to the right, the volume increases. When you rotate the knob to the left, the volume decreases.

## Adjusting the Audio Input Gain (Recording Gain)

Specify this setting to amplify the volume of input audio.




Setting	Description
<b>0, +6, +12</b>	The higher the value you specify, the greater the input gain becomes, and the more the audio level is amplified.

## MIDI

Specify the settings on the MIDI menu when you have connected the P-10 to a MIDI device.

### What is MIDI?

MIDI, short for Musical Instrument Digital Interface, is a standardized protocol for performance communication between musical devices that is used throughout the world. You can easily connect devices that support MIDI with a MIDI cable and control one device's operations and settings through another.

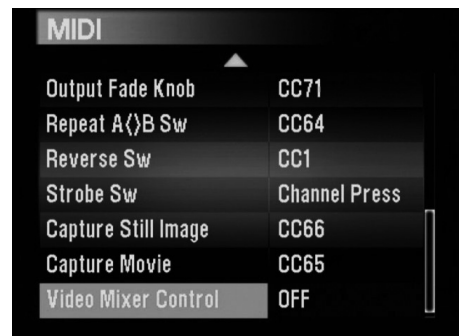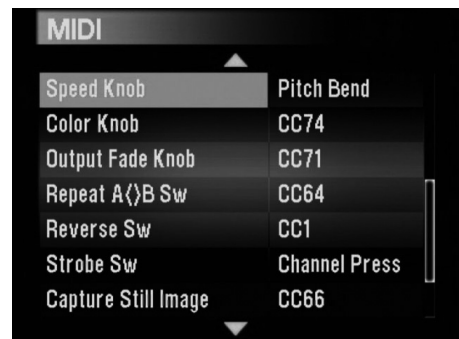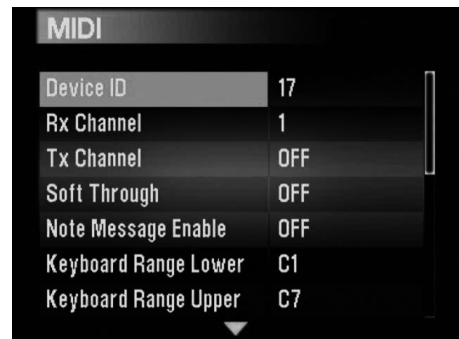

## Specifying the Device ID (Device ID)

Specify the device ID when you have connected multiple P-10's to a MIDI device so that you can tell them apart.

Setting
17-32

## Specifying the Reception Channel (Rx Channel)

Specify the channel for receiving MIDI messages.

Setting	Description
OFF	The P-10 doesn't receive MIDI messages.
1-16	Specify the channel for receiving MIDI messages.

## Specifying the Transmission Channel (Tx Channel)

Specify the channel for transmitting MIDI messages.

Setting	Description
OFF	The P-10 doesn't transmit MIDI messages.
1-16	Specify the channel for transmitting MIDI messages.

## Specifying Soft Through (Soft Through)

When this setting is turned on, MIDI messages received from the MIDI IN jack are transmitted through the P-10 without any changes.

Setting	Description
ON	Transmit MIDI data received from the MIDI IN jack as is from the MIDI OUT/THRU jack.
OFF	MIDI data received from the MIDI IN jack is not transmitted.

## Operating the P-10 Using Note Messages (Note Message Enable)

Specify the key range for controlling the P-10 using a MIDI device.

Setting	Description	
Note Message Enable	OFF	Control from the MIDI keyboard is disabled.
	49keys	Select this setting to use 49 keys of a MIDI keyboard. The keyboard range is as follows. White Keys: C2 (36)–G3 (55) <PADs 1–12>, A3 (57) <EXT SOURCE> Black Keys: C#2 (37)–C#3 (49) <BANK A–F> You can change pads using the white keys and change banks using the black keys. You can change the bank number when you press a white key while holding a black key.
	Assignable	You can change the pad and bank by using the keyboard range specified in “Keyboard Range Lower” and “Keyboard Range Upper.” The bank number corresponds only to the selected number.
Keyboard Range Lower		When “Assignable” is specified, you can specify the lowest note of the keyboard range.
Keyboard Range Upper		When “Assignable” is specified, you can specify the highest note of the keyboard range.



You cannot specify upper and lower keys that overlap when specifying the Keyboard Range.

## Controlling Movie Speed (Speed Knob)

Specify the type of MIDI message to use for controlling the [SPEED] knob from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the knob using "Control Change."
<b>Channel Press</b>	Control the knob using "Channel Press."
<b>Pitch Bend</b>	Control the knob using "Pitch Bend."

## Controlling the Image Color (Color Knob)

Specify the type of MIDI message to use for controlling the [COLOR] knob from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the knob using "Control Change."
<b>Channel Press</b>	Control the knob using "Channel Press."
<b>Pitch Bend</b>	Control the knob using "Pitch Bend."

## Controlling the Output Fade (Output Fade Knob)

Specify the type of MIDI message to use for controlling the [VIDEO OUTPUT FADE] knob from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the knob using "Control Change."
<b>Channel Press</b>	Control the knob using "Channel Press."
<b>Pitch Bend</b>	Control the knob using "Pitch Bend."

## Controlling Repeat (Repeat A<>B Sw)

Specify the type of MIDI message to use for controlling the [REPEAT A ◀▶ B] button from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the button using "Control Change."
<b>Channel Press</b>	Control the button using "Channel Press."
<b>Pitch Bend</b>	Control the button using "Pitch Bend."

## Controlling Reverse (Reverse Sw)

Specify the type of MIDI message to use for controlling the [REVERSE/SLIDE SHOW] button from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the button using "Control Change."
<b>Channel Press</b>	Control the button using "Channel Press."
<b>Pitch Bend</b>	Control the button using "Pitch Bend."

## Controlling Strobe (Strobe Sw)

Specify the type of MIDI message to use for controlling the [STROBE] button from a MIDI device.

Setting	Description
<b>OFF</b>	Control from the MIDI device is disabled.
<b>CC (1–95)</b>	Control the button using "Control Change."
<b>Channel Press</b>	Control the button using "Channel Press."
<b>Pitch Bend</b>	Control the button using "Pitch Bend."

## Controlling Still Image Capture (Capture Still Image)

Specify the type of MIDI message to use for controlling the CAPTURE [STILL] button from a MIDI device.

Setting	Description
OFF	Control from the MIDI device is disabled.
CC (1–95)	Control the button using “Control Change.”
Channel Press	Control the button using “Channel Press.”
Pitch Bend	Control the button using “Pitch Bend.”

## Controlling Movie Capture (Capture Movie)

Specify the type of MIDI message to use for controlling the CAPTURE [MOVIE] button from a MIDI device.

Setting	Description
OFF	Control from the MIDI device is disabled.
CC (1–95)	Control the button using “Control Change.”
Channel Press	Control the button using “Channel Press.”
Pitch Bend	Control the button using “Pitch Bend.”

## Specifying Video Mixer Control (Video Mixer Control)

Specify the channel to use for controlling an Edirol video mixer from the P-10.

When you play back images on the P-10, the mixer channel changes automatically and the images you are playing back are output through the mixer.


Setting	Description
OFF	The P-10 doesn't control the video mixer.
A ch/Input1– B ch/Input8	Select the channel which connects the P-10 to the mixer.

### MEMO

Make sure you match the P-10's MIDI transmission channel and the video mixer's MIDI reception channel.

## Restricting Buttons During Performance (PROTECT)

Disable buttons relating to pads and the capture buttons from the PROTECT screen. This way you can prevent accidental operation during a performance.

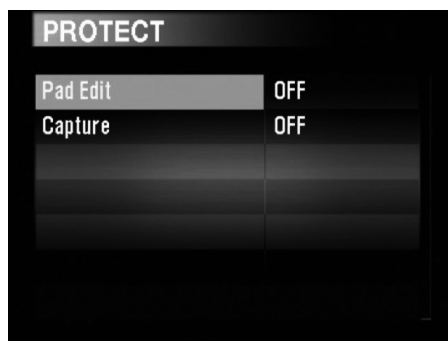

## Restricting Buttons Related to Pads (Pad Edit)

When you restrict the buttons related to pads, the [PAD PARAM], [PAD COPY], and [DELETE] buttons are disabled.

**NOTE** PADS [1]–[12] are not restricted.

Parameter	Setting	Description
Pad Edit	OFF	The [PAD PARAM], [PAD COPY], and [DELETE] buttons are enabled.
	ON	The [PAD PARAM], [PAD COPY], and [DELETE] buttons are disabled.

## Restricting the Capture Buttons (Capture)

When you restrict the capture buttons, the CAPTURE [MOVIE] and CAPTURE [STILL] buttons are disabled.

Setting	Description
Capture	OFF The CAPTURE [MOVIE] and CAPTURE [STILL] buttons are enabled, and you can capture images.
	ON The CAPTURE [MOVIE] and CAPTURE [STILL] buttons are disabled, and you can't capture images.


## Deleting Files on the SD Card (DELETE FILE)

Delete files on the SD card (movie and still image).


You cannot restore files that have been deleted.

**NOTE** Make sure you back up all important data to a computer.

1. Rotate the [VALUE] knob to select “DELETE FILE” from the MENU screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to select the file that you want to delete.

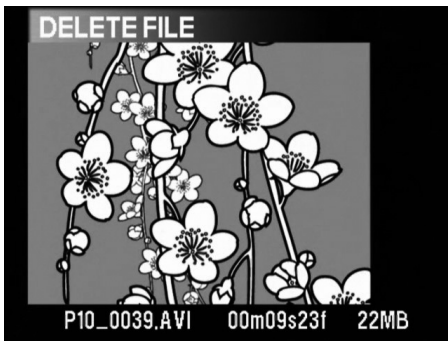

3. Press the [ENTER] button.
4. Rotate the [VALUE] knob to select “Execute.”

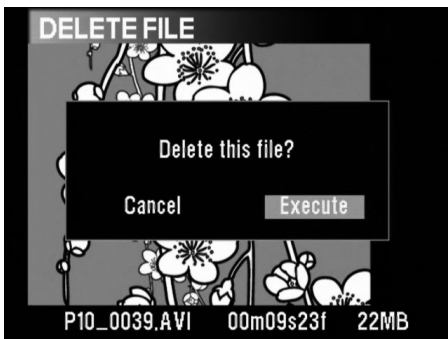

5. Press the [ENTER] button.  
When the file has been deleted, “Completed!” appears.


## Formatting the SD Card (FORMAT SD CARD)

You can format the SD card. All of the data that was previously on the SD card is deleted and the SD card is formatted to the P-10.

You cannot restore files that have been deleted.

**NOTE** Make sure you back up all important data to a computer.

1. Rotate the [VALUE] knob to select “FORMAT SD CARD” from the MENU screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to select “Execute.”

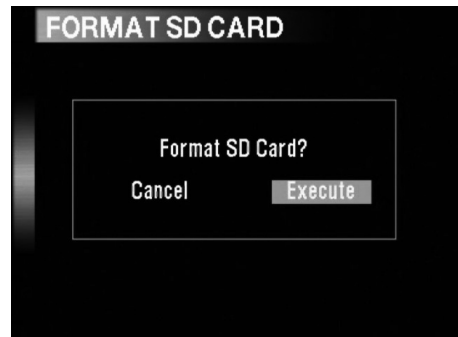

3. Press the [ENTER] button.  
The SD card is formatted.

**NOTE** Depending on the SD card, formatting may take five minutes or more. Do not remove the SD card until formatting has been completed.

## Returning to the Factory Default Settings (FACTORY RESET)

You can return the P-10 back to its factory default settings.


1. Rotate the [VALUE] knob to select "FACTORY RESET" from the MENU screen, and then press the [ENTER] button.
2. Rotate the [VALUE] knob to select "Execute."



**NOTE** While factory reset is being executed, do not turn the power off.

3. Press the [ENTER] button.  
When factory reset is completed, "Please restart the device" appears.  
The P-10 is returned to its factory default settings.
4. Turn the power off, and then on again.

# 7. Appendices

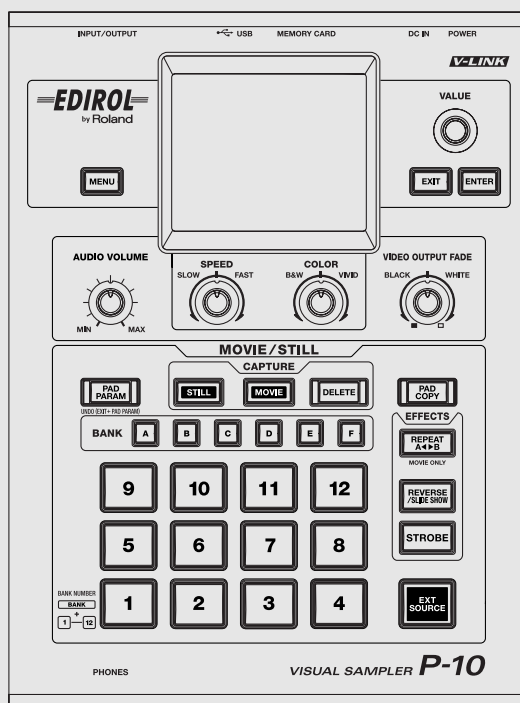

# Using V-LINK

## What is V-LINK?

V-LINK ( **V-LINK** ) is a function that allows music and images to be performed together. By using MIDI to connect two or more V-LINK compatible devices, you can easily enjoy performing a wide range of visual effects that are linked to the expressive elements of a music performance.

Using V-LINK you can conveniently control the P-10 from a MIDI device that supports V-LINK.

**MEMO** You will need a MIDI cable (sold separately) to connect the P-10 and a MIDI device that supports V-LINK in order to use V-LINK.


## How to Use V-LINK

Connect the P-10 to a MIDI device that supports V-LINK with a MIDI cable. By turning the MIDI device's V-LINK feature on, you can control the P-10 and change the images it displays.

### A Connection Example

Connect the MIDI IN connector on the P-10 to the MIDI device's MIDI OUT connector with a MIDI cable.

**NOTE** To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

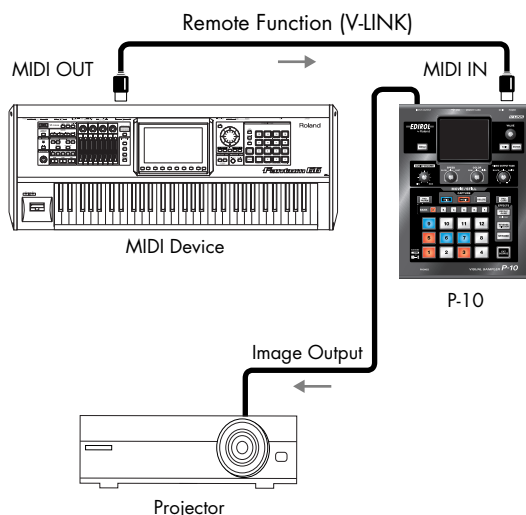

## Items You Can Specify with V-LINK

When you turn the MIDI device's V-LINK feature on, all of the system settings return to their default value.

When you turn the MIDI device's V-LINK feature off, P-10 settings return to the values they had before V-LINK was turned on.

### MENU/VIDEO (p. 57)

Items You Can Specify with V-LINK	Default Setting
Color Ctrl Type	B&W/Vivid
Speed Ctrl Type	Normal
Output Fade Color L	Black
Output Fade Color R	White

### MENU/MIDI (p. 59)

Items You Can Specify with V-LINK	Default Setting
Rx Channel	1
Note Message Enable	OFF
Keyboard Range Lower	C1
Keyboard Range Upper	C7
Speed Knob	Pitch Bend
Color Knob	CC77
Output Fade Knob	CC71
Repeat A<>B Sw	CC64
Reverse Sw	CC1
Strobe Sw	Channel Press
Capture Still Image	CC66
Capture Movie	CC65

**MEMO** For details about specifying V-LINK settings, see the manual that came with the V-LINK device.

# SD Cards You Can Use With the P-10

## Recommended SD Cards

SD card (supports 512MB–16GB)

Supports SDHC

If you intend to use an SD card other than the one supplied with the P-10, check the Roland website first.

The latest information is listed for you on our site.

<http://www.rolandsystemsgroup.net/>

**NOTE** Depending on the SD card maker or type, files may not save or play back correctly.

**NOTE** Never insert or remove the SD card while the P-10's power is turned on. Doing so may corrupt the data on the SD card.

**NOTE** Carefully insert the SD card all the way in—until it is firmly in place.

## SD Card Protection Feature (LOCK)

Slide the write protect switch on the side of the SD card to the “LOCK” position. In this position, the SD card cannot be written to and you can protect the data on the SD card. When you want to write data to and delete data from the SD card, slide the switch to unlock the card.


Write Protect Switch



**MEMO** When the write protect switch is in the “LOCK” position, the following buttons and functions do not work:

- CAPTURE [MOVIE] button
- CAPTURE [STILL IMAGE] button
- [PAD PARAM] button
- [DELETE] button
- [PAD COPY] button
- SD CARD FORMAT function

## SD Card Folder Structure

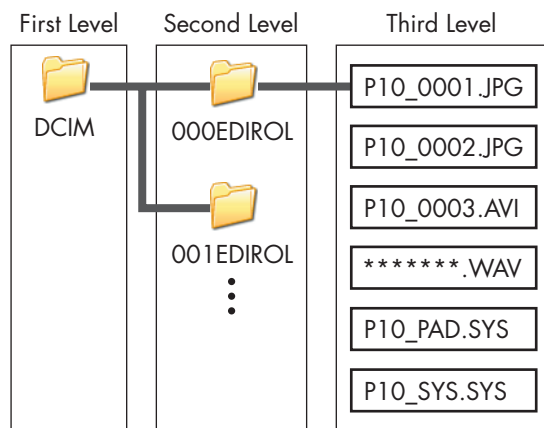


P10_****.JPG	Still Image File	* Four digit numbers “****” are added in numerical order. Numbers 0001 – 9999 are used.
P10_****.AVI	Movie File	
*****.WAV	Audio File	
P10_PAD.SYS	PAD PARAMETER settings	
P10_SYS.SYS	SYSTEM Settings backup file	

## Attaching the SD Card Theft Prevention Cover

At the time of purchase, the P-10 has specialized screws on the back panel marked with a ▼.

When you use these screws to attach the SD card cover, the card can't easily be removed, which is useful for preventing the SD card from being stolen.

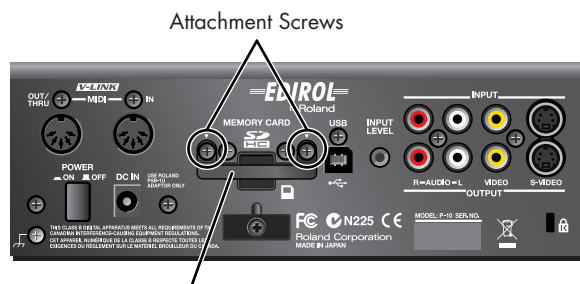

SD Card Theft Prevention Cover

**NOTE** Make sure you use the screws that you removed from the P-10. Using another type of screw could damage the P-10.

# P-10 File Formats

## P-10 Supported Formats

### Movies

Format	Motion JPEG
Size	640 x 480 pixels
Frame Rate	29.97 fps (NTSC) 25 fps (PAL)

**NOTE** Images that have been converted with other commercially available software may not play back on the P-10. Convert still images that you have made on the computer to a P-10 supported format using P-10 Image Converter.

### Still Images

Format	JPEG
Size	640 x 480 pixels

**NOTE** You can write images that you have taken with a digital camera or similar device to the SD card, however depending on the size of the images they might not be displayed correctly on the P-10.

### Audio

Format	WAV (stereo)
Sampling Frequency	44.1 kHz
Sample Size	16 bit


## Safety Area

### What is the safety area?

When you display images that you have created with a device such as a computer on a TV screen, the outer edges of the images may be cut off depending on the maker or the type of TV. In other words, if there are words or elements of an image placed close to the edge, you may not be able to see them on the TV screen.

For this reason, you should be aware of the “safety area” when creating your materials.

As an approximation, you should specify about 90% of the inner area of the screen. When placing a title or characters, place them within 80% of the inner area to be safe.

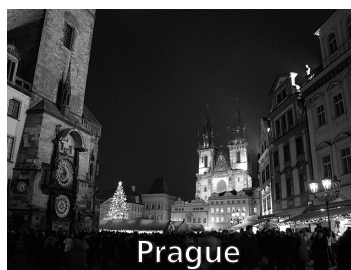

# Slide Show Set List

## Slide Show Set

No.	Parameter Name	Description
1	Preset 1	Simple slide show presentation
2	Preset 2	Presentation with active motions
3	Preset 3	Presentation with a dynamic, sports-like feel
4	Preset 4	Presentation with a promotional video feel
5	Preset 5	Presentation with a travel log photo album feel
6	Preset 6	Presentation with a family photo album feel
7	Preset 7	Presentation with a quick flash and change effect
8	Preset 8	Presentation with little development and a calm feel
9	Preset 9	Presentation with rich expressions, ideal for concert use
10	Preset 10	Presentation with a multi-screen feel
11	User Set	User Set You can create an original slide show set for each pad by selecting and arranging motions (p. 47)

## Motions

No.	Parameter Name	Description
1	Zoom In B-W	Zoom in to the image from a black screen, and then fade out to white.
2	Zoom Out B-W	Zoom out to the image from a black screen, and then fade out to white.
3	Zoom In W-B	Zoom in to the image from a white screen, and then fade out to black.
4	Zoom Out W-B	Zoom out to the image from a white screen, and then fade out to black.
5	Zoom In B-B	Zoom in to the image from a black screen, and then fade out to black.
6	Zoom Out B-B	Zoom out to the image from a black screen, and then fade out to black.
7	Zoom In W-W	Zoom in to the image from a white screen, and then fade out to white.
8	Zoom Out W-W	Zoom out to the image from a white screen, and then fade out to white.
9	Slide B-B 1	Fade in from black while sliding the image down, and then fade out to black.
10	Slide B-B 2	Fade in from black while sliding the image left, and then fade out to black.
11	Slide B-B 3	Fade in from black while sliding the image diagonally to the upper-left, and then fade out to black.
12	Slide B-B 4	Fade in from black while sliding the image diagonally to the lower-left, and then fade out to black.
13	Slide B-B 5	Display the image on the right side and slide up.
14	Slide B-B 6	Display the image on the left side and slide up.
15	Slide W-W	Fade in from white while sliding the image left, and then fade to white.
16	S&Z B-B 1	Zoom in to the image from a black screen while sliding down, and then fade to black.
17	S&Z B-B 2	Zoom in to the image from a black screen while sliding left, and then fade to black.
18	S&Z W-W 1	Zoom in to the image from a white screen while sliding down, and then fade to white.
19	S&Z W-W 2	Zoom in to the image from a white screen while sliding diagonally to the upper-left, and then fade to white.
20	S&Z W-W 3	Zoom in to the image from a white screen while sliding diagonally to the lower-left, and then fade to white.
21	CF Zoom B-B	Fade in from black while crossfading two images zooming out, and then fade to black.
22	CF Zoom W-B	Fade in from white while crossfading two images zooming out, and then fade to black.
23	CF Slide B-B 1	Fade in from black while crossfading two images sliding left, and then fade to black.
24	CF Slide B-B 2	Fade in from black while crossfading two images sliding up, and then fade to black.
25	CF Slide B-B 3	Fade in from black while crossfading two images sliding one image diagonally down and one image up, and then fade to black.
26	CF S&Z W-B 1	Fade in from white while crossfading two images zooming out and sliding horizontally, and then fade to black.
27	CF S&Z W-B 2	Fade in from white while crossfading two images zooming out and sliding horizontally, and then fade to black.
28	CF S&Z W-B 3	Fade in from white while crossfading two images zooming out and sliding diagonally, and then fade to black.
29	CF S&Z W-B 4	Fade in from white while crossfading two images zooming out and sliding diagonally, and then fade to black.
30	CF S&Z W-B 5	Fade in from white while crossfading two images zooming out and sliding vertically, and then fade to black.
31	CF Small 1	Crossfade two small images in the upper-left corner.
32	CF Small 2	Crossfade two small images in the upper-right corner.
33	CF Small 3	Crossfade two small images in the lower-left corner.
34	CF Small 4	Crossfade two small images in the lower-right corner.
35	CF Small 5	Crossfade two small images at center-left.
36	CF Small 6	Crossfade two small images at center-right.
37	Multi-2 1	Display two images at horizontal center, and then switch to the next images.

No.	Parameter Name	Description
38	Multi-2 2	Display two images at vertical center, and then switch to the next images.
39	Multi-3 1	Display three images in the center, zoom into the center image and switch it to the next image.
40	Multi-3 2	After displaying three images on the left, change all three images to a different image.
41	Multi-3 3	After displaying three images on the right, change all three images to a different image.
42	Multi-4 1	After displaying four images, display one image in the center.
43	Multi-4 2	After displaying four images, display one large image in the center.
44	Multi-9	Display nine images.
45	Multi Zoom 1	After switching small images in the center, enlarge the last image.
46	Multi Zoom 2	Display an image. Shrink it and switch images, and then enlarge the last image.
47	Multi Zoom 3	Display an image, switch images, and then shrink the last image.
48	Multi Zoom 4	Slide a small image vertically to the center, switch images, and then enlarge the last image.
49	Multi Zoom 5	Slide a small image from the bottom to the center, switch images, and then enlarge the last image.
50	Divide-4 1	After dividing an image into four parts, shrink a different image.
51	Divide-4 2	After dividing an image into four parts, enlarge a different image.
52	Divide-9 1	Divide an image into nine parts, displaying them horizontally.
53	Divide-9 2	Divide an image into nine parts, displaying them vertically.
54	Zoom B-W (S)	Quickly zoom in to the image from a black screen, and then fade out to white.
55	Zoom B-W 2(S)	Quickly zoom in to the image from a black screen, and then fade out to white.
56	Zoom W-B (S)	Quickly zoom in to the image from a white screen, and then fade out to black.
57	Zoom B-B 1(S)	Quickly zoom in to the image from a black screen, and then fade out to black.
58	Zoom B-B 2(S)	Quickly zoom in to the image from a black screen, and then shrink the last image.
59	Zoom W-W 1(S)	Quickly zoom in to the image from a white screen, and then fade out to white.
60	Zoom W-W 2(S)	Quickly zoom out to the image from a white screen, and then fade out to white.
61	Zoom I/O 1(S)	After quickly zooming in and out of an image, slide the image left.
62	Zoom I/O 2(S)	After quickly zooming in and out of an image, slide the image up.
63	Slide B-W (S)	Quickly fade in from black while sliding the image vertically, and then fade to white.
64	Slide W-B (S)	Quickly fade in from white while sliding the image vertically, and then fade to black.
65	Slide W-W (S)	Quickly fade in from white while sliding the image vertically, and then fade to white.
66	S&Z 1(S)	After quickly sliding the image right, enlarge the image.
67	S&Z 2(S)	After quickly sliding the image down, enlarge the image.
68	Flash B-W (S)	After quickly fading in from black, flash the image, and then fade to white.
69	Flash W-B (S)	After quickly fading in from white, flash the image, and then fade to black.
70	Zoom Effect (S)	Quickly zoom in to the image, and display multiple images for a layered effect.
71	B-W (Flash)	Very quickly fade to the image from black and then fade to white.
72	W-B (Flash)	Very quickly fade to the image from white and then fade to black.
73	Slide B-W(Flash)	Very quickly fade from black while sliding the image left, and then fade to white.
74	Slide W-B(Flash)	Very quickly fade from white while sliding the image left, and then fade to black.
75	Break (Flash)	Very quickly display a black screen.
76	Fade B (Flash)	Very quickly fade from white to black.
77	Fade W (Flash)	Very quickly fade from black to white.
78	Flash B (Flash)	Very quickly flash a black screen.
79	Flash W (Flash)	Very quickly flash a white screen.

# Troubleshooting

If the P-10 does not operate as you expect, please check the following points first. If this does not resolve the problem, contact your nearest Roland service center or authorized Roland distributor.

\* If a message appears on the screen during operation, see "Error Messages" (p. 75).

Problem	Cause/Solution	Page
<b>The power doesn't turn on</b>	Are the AC adaptor and power cord connected? → Connect the AC adaptor and power cord correctly.	p. 17
	Have you inserted an SD card? → The P-10 won't function unless an SD card has been inserted. Please insert an SD card.	p. 17
<b>Can't see any images</b>	Is the P-10's or the connected device's power turned on? → Connect the AC adaptor, power cord and external device correctly and turn the power on.	p. 17
	Have you inserted an SD card? → The P-10 won't function unless an SD card has been inserted. Please insert an SD card.	p. 17
	Are there image files on the SD card? → Save images on the SD card by capturing images with the P-10.	p. 34
	Is the [VIDEO OUTPUT FADE] knob not centered? → Please center the [VIDEO OUTPUT FADE] knob (you will feel the knob stick in the center).	p. 29
<b>Images don't display correctly or the color appears strange</b>	Is NTSC/PAL set correctly? → Check your TV and match its setting on the P-10.	p. 57
	Is the [VIDEO OUTPUT FADE] knob not centered? → Please center the [VIDEO OUTPUT FADE] knob (you will feel the knob stick in the center).	p. 29
	Is the [SPEED] knob not centered? → Please center the [SPEED] knob (you will feel the knob stick in the center).	p. 28
	Is "Scratch" specified in the "Speed Ctrl Type" setting? → When "Scratch" is specified, the movie will stop when the [SPEED] knob is centered.	p. 58
	Is the [COLOR] knob not centered? → Please center the [COLOR] knob (you will feel the knob stick in the center).	p. 28
	Was the image made on a computer? → Depending on the file, the image may not play back correctly. Install P-10 Image Converter from the supplied CD-ROM and convert the image to a format supported by the P-10.	p. 37
	Is the image file too big? → If the image file is too big, the image may not play back immediately after pushing the pad. Truncate parts of the file that you don't need to make the file smaller.	p. 49
	Images are more likely to play correctly if you capture them (from a format such as DV) on a computer and convert them to P-10 format first.	p. 37
<b>The display flickers</b>	Are you playing back an image with many rapid changes? → The display may flicker because the image has many rapid changes. This has no effect on the video output.	–
<b>The slide show doesn't start immediately</b>	It may take some time for a slide show of still images to start.	–
<b>Images from the connected device don't appear on the P-10's display</b>	Is the "Input Video" setting specified correctly? → Check the "Input Video" setting from the MENU screen.	p. 57

Problem	Cause/Solution	Page
<b>The movie doesn't stop</b>	Is the Play Mode set to play back in a loop? → If the Play Mode is set to "Forward Loop" or "Alternate Loop," then playback repeats until you press the [EXIT] button.	p. 43
	Is the Play Mode set to "One Shot 1"? → If the Play Mode is set to "One Shot 1," then after the movie has finished, the last frame remains on the screen and play back stops. To clear the display on the screen, press the [EXIT] button.	p. 43
	Are you controlling the P-10 from an external MIDI device using Program Change while the Play Mode is set to "Gate1" or "Gate2"? → If you are controlling the P-10 from an external MIDI device using Program Change while the Play Mode is set to "Gate1" or "Gate2," then the movie is played back continuously. Change the Note Message Enable setting to either "49 Keys" or "Assignable," and then control the P-10 using Note Message.	p. 43 p. 60
<b>There is no sound</b>	Is the audio cable connected correctly? → Check the cable connection.	p. 18
	Is the audio volume turned down? → Rotate the [AUDIO VOLUME] knob to specify an appropriate audio level.	p. 14
<b>The volume level of the instrument connected to the P-10 is too low</b>	Is the input level set too low? → Rotate the [INPUT LEVEL] knob to adjust the setting to an appropriate level.	p. 59
	Could you be using a connection cable that contains a resistor? → Use a connection cable that does not contain resistor.	–
<b>The audio contains noise or the sound is distorted</b>	Is the audio input level set appropriately when you capture images? → If the input level is set too high, the sound is distorted. Conversely, if the input level is set too low, it will sound like the audio contains noise. Rotate the [INPUT LEVEL] knob to adjust the input level.	p. 59
	Is the [SPEED] knob centered? → When you increase the playback speed, the audio may sound like noise because its playback speed is also increased.	p. 28
<b>The audio and images are not in sync</b>	Is Audio Sync set to "OFF"? → Set Audio Sync to "ON."	p. 44
	Have you added an audio file? → If the lengths of the audio and the images are different, then they will not be in sync. → The [REPEAT A ◀▶ B] button doesn't work for audio files that you have added.	p. 44 p. 46
	When playing back movies on the P-10, a jump of 1 frame about every 100 seconds occurs (when using NTSC).	–
	When the synchronized signal included in an input image is abnormal, the sound and image recording may be misaligned.	–
	When playing back a movie that was captured with the P-10 on a computer, the audio and images on longer movies may be misaligned.	–

Problem	Cause/Solution	Page
<b>Can't capture images with the P-10</b>	Is the SD card write protect switch set to "Lock"? → Move the switch to unlock the SD card.	p. 67
	Is PROTECT on the MENU screen set to "ON"? → Set PROTECT to "OFF."	p. 62
	Is there enough memory on the SD card? → When there is insufficient memory on the SD card, the CAPTURE [STILL] and CAPTURE [MOVIE] buttons don't light up. Check the available SD card memory from the INFORMATION menu.	p. 55
	Are you using the right type of SD card? → Depending on the SD card, the write speed may be extremely slow and you may not be able to capture images. Check the recommended SD card types for the P-10.	p. 67
	The P-10 cannot capture images from media with technical security measures (copy guard signal).	–
<b>Effects don't work</b>	Is the [EXT SOURCE] button on? → When the [EXT SOURCE] button is on, images from the device connected to the P-10 appear on the P-10's display. You can't apply effects to images from an external source.	p. 26
	Is a slide show being displayed? → While a slide show is being displayed, the [SPEED], [COLOR], and [VIDEO OUTPUT FADE] knobs are ineffective.	p. 30
	Is a still image being played back? → While a still image is being played back, the [SPEED] knob and [REPEAT A ◀▶ B] button don't work.	p. 28
<b>Even when the SD card is inserted, the P-10 doesn't recognize it</b>	Is the SD card inserted correctly? → Please check the SD card.	p. 17
	Are you using the right type of SD card? → For the recommended SD card types, see "Recommended SD Cards."	p. 67

## Error Messages

When an error message appears on the P-10, the P-10 is not functioning correctly for some reason or there was an error in user operation. Try the following solutions when this happens.

Message	Description/Solution
<b>This file cannot be used on P-10.</b>	This is a file that cannot be used on the P-10. Convert the file to a P-10 supported format using P-10 Image Converter and save it to the SD card.
<b>This card cannot be used on P-10.</b>	Because there is a problem with the card, it cannot be used. See "Recommended SD Cards" (p. 67).
<b>No remaining capacity in SD card.</b>	The SD card memory is full. Delete some files from the SD card or use a new SD card.
<b>Desired file does not exist.</b>	The image file does not exist on the SD card. Capture images from a connected device or use P-10 Image Converter to save image files to the SD card (p. 37).
<b>Select still image file.</b>	Select a still image.
<b>Select movie file.</b>	Select a movie.
<b>This list is maximum. You cannot add on the still image.</b>	The still image list has reached 100 images. If you want to add images to the list, delete some of the images in the list first.
<b>This card is protected.</b>	The SD card write protect switch is in the "LOCK" position. Move the switch to unlock the SD card.
<b>Backup file does not exist.</b>	The System Backup file doesn't exist.
<b>Now processing. DO NOT turn off power.</b>	The system is processing. Don't turn off the power.

# MIDI Implementation Chart

Function...		Transmitted	Recognized	Remarks
<b>Basic Channel</b>	Default Changed	1-16 1-16	1-16 1-16	Settings can be saved
<b>Mode</b>	Default Messages Altered	X X *****	X X *****	
<b>Note Number :</b>	True Voice	0-127 *****	0-127 *****	Only when Note Message Enable is not set to OFF (varies by setting).
<b>Velocity</b>	Note On Note Off	X X	X X	
<b>After Touch</b>	Key's Channel's	X O *1	X O *1	Control various parameters
<b>Pitch Bend</b>		O *1	O *1	Control various parameters
<b>Control Change</b>	0, 32 1-31 33-95	O O *1 O *1	O O *1 O *1	Switch banks (0-71) Control various parameters Control various parameters
<b>Program Change</b>	: True Number	O 1-12	O 1-12	Select pad
<b>System Exclusive</b>		X	O	Parameter Setting, V-LINK
<b>System Common</b>	: Song Position : Song Select : Tune Request	X X X	X X X	
<b>System Real Time</b>	: Clock : Commands	X X	X X	
<b>Aux Messages</b>	: All Sound Off : Reset All Controllers : All Notes Off : Active Sensing : System Reset	O X O O X	O *2 O O *2 O X	
<b>Notes</b>	*1 X and O may change according to the setting. *2 Turns off (cancels) images that are being played back.			

O : Yes  
X : No

# Main Specifications

## P-10: Visual Sampler

<b>Max. number of files that can play back at once</b>	Image: 1
	Audio: 1 (stereo)
<b>Video Format</b>	NTSC, PAL
<b>File Formats</b>	Movie Format: Motion JPEG Size: 640 x 480 pixels Frame Rate: 29.97 fps (NTSC) 25 fps (PAL)
	Still Image Format: JPEG Size: 640 x 480 pixels
	Audio Format: WAV Sampling Frequency: 44.1kHz Sample Size: 16 bit
<b>Recording Media</b>	SD (HC) Memory Card
<b>Recording Time</b>	512MB: 7 min.
	1GB: 15 min.
	2GB: 30 min.
	4GB: 60 min.
	8GB: 120 min.
	16GB: 240 min.
<b>Max. No. of Recorded Files</b>	* These recording times are estimates. The actual times may differ slightly. * If there are many recorded files, the total recording time may be less.
	When only movies are assigned: 864 (72 banks x 12 pads) When only still images are assigned: 86,400 (72 banks x 12 pads x 100 images)
<b>Movie Playback Modes</b>	Forward Loop Play Back
	Alternate Loop Play Back
	One Shot Play Back (2 types)
	Gate Play Back (2 types)
<b>Image Effects</b>	Repeat, Reverse, Strobe, Speed, Color, Output Fade, Slide Show
<b>Pads</b>	12 Pads
<b>Controllers</b>	SPEED knob, COLOR knob, VIDEO OUTPUT FADE knob
<b>Display</b>	Graphic LCD (color) 3.5 inch, TFT, With Backlight

<b>Connecting Jacks</b>	Composite Video Input Jack (RCA pin type)
	S-Video Input Jack (4 pin mini-DIN type)
	Line Input Jack (L, R) (RCA pin type)
	Composite Video Output Jack (RCA pin type)
	S-Video Output Jack (4 pin mini-DIN type)
	Line Output Jack (L, R) (RCA pin type)
	PHONES Jack (standard stereo type)
	MIDI Connector (IN, OUT/THRU)
	USB Connector (supports storage class)
	DC IN Jack
<b>Power Supply</b>	SD (HC) Memory Card Slot
	DC 9V (AC adaptor)
<b>Current Draw</b>	900 mA
<b>Measurements</b>	215 (W) x 300 (D) x 91 (H) mm
	8-1/2 (W) x 11-13/16 (D) x 3-5/8 (H) inch
<b>Weight</b>	1.9 kg (without AC adaptor)
	4 lbs. 4 oz.
<b>Accessories</b>	Owner's manual
	AC Adaptor
	Power Cord (for AC adaptor)
	CD-ROM (P-10 Image Converter)
	SD Card
	SD Card Theft Prevention Cover

\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

# Artist Introductions

## MASARU OZAKI (aka VJ MASARU)

At the age of 19, Masaru Ozaki crossed over to America from Japan to perform in the "Rhythm Of The World" world tour as a dancer. Participating in such events as an EC Flugshow and a private event for Prince William, Masaru traveled through twelve countries in one year, learning technical and stage direction for images and lighting. After returning to Japan, he not only re-entered the dance field but spread himself further, becoming a narrator, radio DJ, and MC for business events. He has even appeared on MTV as a VJ, introducing some of the latest club music.

As an auteur, Masaru has created many opening movies and commercials for television, as well as PVs. In motion design, Masaru particularly excels in creating animations with expressive textures. His stylish and creative images which incorporate the heart of imagery, continue to mesmerize his many fans. As a performing art pioneer, Masaru creates images in real-time to music at live events and released the "BEHIND" DVD in 2005 featuring a performance in which he used a new crossfader technique that had never been seen before.

In 2006, Masaru performed at the SONAR2006, the world's greatest and largest music and media art festival held in Spain. There he hosted workshops so popular that there was standing room only. He also performed at Florida135, one of Spain's most famous clubs, as its first Japanese VJ, pumping the packed audience. Masaru has also performed at Europe's HD Forum two years in a row (2006, 2007) where he was introduced alongside Ryuichi Sakamoto. He received high acclaim from the local media, who stated that he was a "visual artist of a new level."

In 2008, he appeared as the final performer in the first ever VJ SUMMIT sponsored by Apple, introducing his "cutting performance," creating images in real-time. With a play style that reflects a sense of rhythm born from his street dance upbringing, Masaru continues to be a major influence on the scene.

Aside from images, Masaru has branched into other areas of design such as illustration, space design, object design, graphics, and apparel. His publications include such releases as "BlueFlower" (TDK Core) and "BEHIND" (TDK Core).

He has produced or created performance images for concerts for Hideaki Tokunaga, Hound Dog, Un Girls, Tomoko Yazawa and Tokyo Collection, and has performed at multiple club events. He has created the PV for Gravity and Yellow Generation, and has created numerous title background illustrations for TV shows such as "Daisuki!", Denki Groove "WIRE.WIRELESS" TV SPOT, and Universal Studios Japan "KWBB." Masaru also designs graphics for advertisements and fliers, helps supervise Roland and other companies' product design, and assists brand art direction for companies such as Goldwin.



## Tosh Masuda

Since graduating from the Showa Academia Musicae Composition Department's Digital Music course Tosh Masuda has appeared as an arranger, sound producer, composer, programmer, and musician. As a sound producer, Tosh has worked with such Japanese artists as ACO, Keyco, SAKURA, HOME MADE KAZOKU, CORE OF SOUL, and SKOOP ON SOMEBODY. He has made arrangements for Chemistry, RHYTHEM, and Miho Nakayama and worked as a mixer for Ayumi Hamasaki and MIHO. Tosh is a multi instrumentalist musician, doing his own programming and performing on guitar and bass. With the Japanese group CALM, Tosh has also shown his skill as a singer on multiple recordings, at concerts, and singing for television commercials.

Applying his talents to an even wider array of activities, Tosh has gone to work as a sound producer for live events at Ninety-Nine, and has directed stage music for the Japanese comedy pair, Un Girls. He is also credited with creating the opening theme for various radio programs. Tosh creates audio for use at concerts by Group Tamashii, a Japanese band created by the well known Japanese screen writer, Kankuro Kudo.

Tosh Masuda also holds a position as an adjunct professor in the Sound Production Course at the Showa Academia Musicae Composition Department.



# Index

## A

AC Adaptor ..... 17  
 AC Adaptor Cord ..... 17  
 Add Still Image ..... 45  
 Additional Audio File ..... 44, 46  
 AUDIO ..... 59  
 Audio  
     Specify File (Movie) ..... 44  
     Specify File (Still Image) ..... 46  
     Supported Format ..... 23  
 Audio Input Gain ..... 59  
 Audio Level ..... 45–46  
 AUDIO Screen ..... 59  
 Audio Sync ..... 44  
 [AUDIO VOLUME] Knob ..... 14

## B

Back Up  
     All Bank Data ..... 56  
     System Settings ..... 55  
 BANK [A] – [F] Buttons ..... 14  
 Bank Button ..... 21  
 Bank Number ..... 21, 26

## C

Capture ..... 34, 62  
     Movie ..... 34  
     Still Image ..... 35  
     Using Windows XP/Windows  
     Vista ..... 37  
 CAPTURE [MOVIE] Button .. 15, 34, 62  
 CAPTURE [STILL] Button ..... 15, 35, 62  
 Capture Movie ..... 62  
 Capture Still Image ..... 62  
 Capture Still Mode ..... 58  
 COLOR ..... 28  
 Color Ctrl Type ..... 58  
 Color Effect Type ..... 58  
 [COLOR] Knob ..... 15, 28, 58, 61  
 Color Knob ..... 61  
 Computer ..... 37  
 Connecting ..... 17  
     AC Adaptor ..... 17  
     Computer ..... 37  
     External Devices ..... 18  
 Control  
     Image Color ..... 61  
     Movie Capture ..... 62  
     Movie Speed ..... 61  
     Output Fade ..... 61

Repeat ..... 61  
 Reverse ..... 61  
 Still Image Capture ..... 62  
 Strobe ..... 61  
 Copy  
     Entire Bank Parameters ..... 48  
     Pad Parameters ..... 48  
 Cord Hook ..... 16–17

## D

DC IN Jack ..... 16  
 Delete  
     Captured Image ..... 36  
     Movie ..... 36  
     SD Card File ..... 63  
     Still Image ..... 36  
 [DELETE] Button ..... 15, 36, 49, 62  
 DELETE FILE ..... 63  
 Device ID ..... 60  
 Display ..... 14  
 Display Contrast ..... 57

## E

Effect Sw ..... 46  
 Effects ..... 28  
 End Frame ..... 44, 49  
 End Frame Screen ..... 44  
 [ENTER] Button ..... 15, 22  
 [EXIT] Button ..... 15, 22  
 [EXT SOURCE] Button ..... 15, 26  
 External Devices ..... 18

## F

FACTORY RESET ..... 64  
 Fade ..... 29  
 Fade In ..... 29  
 Fade Out ..... 29  
 File Format ..... 68  
 FILE SELECT Screen ..... 40, 43, 46  
 FORMAT SD CARD ..... 63

## G

Ground Terminal ..... 16

## I

Image Color ..... 28  
 INFORMATION ..... 55  
 INFORMATION Screen ..... 55–56

INPUT Jacks ..... 16, 57  
 [INPUT LEVEL] Knob ..... 16, 59  
 Input Video ..... 57

## L

LCD Contrast ..... 57  
 Level Meter ..... 59

## M

MEMORY CARD (SD Card) Slot ..... 16  
 Menu ..... 55  
 [MENU] Button ..... 14, 22, 54  
 MENU Screen ..... 54  
 MIDI ..... 59  
 MIDI Control  
     Image Color ..... 61  
     Movie Capture ..... 62  
     Movie Speed ..... 61  
     Output Fade ..... 61  
     Repeat ..... 61  
     Reverse ..... 61  
     Still Image Capture ..... 62  
     Strobe ..... 61  
 MIDI IN Connector ..... 16  
 MIDI OUT/THRU Connector ..... 16  
 Motion ..... 70  
 Movie  
     Audio Sync ..... 44  
     Capture ..... 34  
     Change Assigned Movie ..... 43  
     Color ..... 28  
     Delete ..... 36  
     Fade ..... 29  
     Pad Parameters ..... 42  
     Play Mode ..... 43  
     Playback Range ..... 44  
     Playback Speed ..... 28  
     Possible Capture Length ..... 34  
     Repeat Playback ..... 29  
     Reverse ..... 45  
     Reverse Playback ..... 30  
     Specify Audio File ..... 44  
     Strobe ..... 31, 45  
     Strobe Interval ..... 45  
     Supported Format ..... 23  
     Truncate ..... 49  
     Volume ..... 45

**N**

Note Message Enable ..... 60  
 Note Messages ..... 60  
 NTSC ..... 23, 57  
 NTSC/PAL ..... 23

**O**

Output Fade Color L/R ..... 58  
 Output Fade Knob ..... 61  
 Output Images ..... 23  
 OUTPUT Jacks ..... 16

**P**

P-10 Image Converter ..... 37  
 Pad ..... 21, 26, 43  
   Add Still Image ..... 45  
   Assign Images ..... 40  
   Change Assigned Movie ..... 43  
   Exchange Assigned Still Image .... 46  
   Light-Up Color ..... 26  
 PAD [1] – [12] ..... 14, 26  
 [PAD COPY] Button ..... 15, 48, 62  
 Pad Edit ..... 62  
 [PAD PARAM]  
 Button ..... 14, 40–41, 49, 62  
 PAD PARAMETER Screen ..... 41  
 Pad Parameters ..... 41  
 PAL ..... 23, 57  
 PHONES Jack ..... 15  
 Play Back ..... 26  
 Play Mode ..... 43  
 Power  
   On, Off ..... 19  
 Power Cord ..... 17  
 POWER Switch ..... 16, 19  
 Project Backup ..... 56  
 Project Restore ..... 56  
 PROTECT ..... 62  
 PROTECT Screen ..... 62

**R**

Reception Channel ..... 60  
 Recording Gain ..... 59  
 REPEAT ..... 29  
 [REPEAT A ◀▶ B] Button ... 15, 29, 61  
 Repeat AB Sw ..... 61  
 Restore  
   All Bank Data ..... 56

System Settings ..... 55  
 Restrict  
   Capture Buttons ..... 62  
   Pad Related Buttons ..... 62  
 REVERSE ..... 30  
 Reverse Sw ..... 45, 61  
 [REVERSE/SLIDE SHOW]  
 Button ..... 15, 30, 61  
 Rx Channel ..... 60

**S**

Safety Area ..... 68  
 SD Card  
   Back Up System Settings ..... 55  
   Cover Attachment Screws ..... 16  
   Delete File ..... 63  
   Folder Structure ..... 67  
   Format ..... 63  
   Inserting, Removing ..... 17  
   Protection Feature (LOCK) ..... 67  
   Recommended ..... 67  
   Theft Prevention Cover ..... 16, 67  
 Security Lock ..... 16  
 SLIDE SHOW ..... 30  
 Slide Show Set ..... 47  
 Slide Show User Set ..... 47  
 Soft Through ..... 60  
 SPEED ..... 28  
 Speed Ctrl Type ..... 58  
 Speed Effect Type ..... 58  
 [SPEED] Knob ..... 14, 28, 58, 61  
 Speed Knob ..... 61  
 Start Frame ..... 44, 49  
 Start Frame Screen ..... 44  
 Start LOGO ..... 59  
 Still Image  
   Add to Pad ..... 45  
   Capture ..... 35  
   Capture Mode ..... 58  
   Color ..... 28  
   Delete ..... 36  
   Effects Setting ..... 46  
   Exchange Assigned Image ..... 46  
   Fade ..... 29  
   File Limit ..... 34  
   Pad Parameters ..... 42  
   Slide Show ..... 30  
   Slide Show Set ..... 47  
   Slide Show User Set ..... 47  
   Specify Audio File ..... 46  
   Strobe ..... 31  
   Strobe Interval ..... 47

Supported Format ..... 23  
   Volume ..... 46  
 STILL IMAGE LIST Screen ..... 45  
 STROBE ..... 31  
 [STROBE] Button ..... 15, 31, 61  
 Strobe Sw ..... 45, 61  
 Strobe Time ..... 45, 47  
 Supported Format ..... 23  
 System ..... 52  
 System Backup ..... 55  
 System Restore ..... 55  
 System Settings ..... 52

**T**

Transfer Files ..... 37  
 Transmission Channel ..... 60  
 Truncate ..... 49  
 Tx Channel ..... 60

**U**

UNDO ..... 42  
 USB Connector ..... 16  
 User Set ..... 47

**V**

[VALUE] Knob ..... 15, 22  
 VIDEO ..... 57  
 Video Format ..... 23, 57  
 Video Input Jack ..... 57  
 Video Mixer Control ..... 62  
 VIDEO OUTPUT FADE ..... 29  
 [VIDEO OUTPUT FADE]  
 Knob ..... 15, 29, 58, 61  
 VIDEO Screen ..... 57  
 V-LINK ..... 20, 66

# Information

When you need repair service, call your nearest EDIROL/Roland Service Center or authorized EDIROL/Roland distributor in your country as shown below.

## ASIA

### INDONESIA

PT. Citra Inti Rama  
Jl. Cideng Timur No. 15J-15O  
Jakarta Pusat  
INDONESIA  
TEL: (021) 632-4170

### CHINA

Roland Shanghai Electronics Co., Ltd.  
5F. No.1500 Pingliang Road  
Shanghai 200090, CHINA  
TEL: (021) 5580-0800

Roland Shanghai Electronics Co., Ltd.  
(BEIJING OFFICE)  
10F. No.18 3 Section Anhuaxili  
Chaoyang District Beijing  
100011 CHINA  
TEL: (010) 6426-5050

### KOREA

KOREA AVICS CO., LTD.  
463-3 Sunghwa bldg. 3rd F.,  
Seokyo-Dong, Mapo-ku,  
Seoul, KOREA  
Tel: 02-322-3264

### TAIWAN

ROLAND TAIWAN  
ENTERPRISE CO., LTD.  
Room 5, 9fl. No. 112 Chung Shan  
N.Road Sec.2, Taipei, TAIWAN,  
R.O.C.  
TEL: (02) 2561 3339

### SINGAPORE/ MALAYSIA

Roland Asia Pacific Sdn. Bhd.  
45-1, Block C2, Jalan PJU 1/39,  
Dataran Prima, 47301 Petaling  
Jaya, Selangor, MALAYSIA  
TEL: 3-7805-3263

## CENTRAL/LATIN AMERICA

### BRAZIL

Roland Brasil Ltda.  
Rua San Jose, 780 Sala B  
Parque Industrial San Jose  
Cotia - Sao Paulo - SP, BRAZIL  
TEL: (011) 4615 5666

### Other CENTRAL/ LATIN AMERICA

Roland Systems Group U.S.  
425 Sequoia Drive Suite 114,  
Bellingham, Washington,  
98226 USA  
TEL: 360-594-4282

## EUROPE

### AUSTRIA/GERMANY/ ITALY/IRELAND/ UNITED KINGDOM

EDIROL (Europe) Ltd.  
Studio 3.4 114 Power Road  
London W4 5PY  
U. K.  
TEL: (0)20 8747 5949

### BELGIUM/FRANCE/ LUXEMBOURG/ SWITZERLAND/ HOLLAND/SPAIN/ PORTUGAL

Roland Iberia, S.L.  
Paseo Garcia Faria, 33-35  
08005 Barcelona SPAIN  
TEL: 93 493 91 00

### CROATIA

ART-CENTAR  
Degenova 3.  
HR - 10000 Zagreb  
TEL: (1) 466 8493

### CZECH REP.

CZECH REPUBLIC  
DISTRIBUTOR s.r.o  
Voctárova 247/16  
CZ - 180 00 PRAHA 8,  
CZECH REP.  
TEL: (2) 830 20270

### DENMARK

Roland Scandinavia A/S  
Nordhavnsvej 7, Postbox 880,  
DK-2100 Copenhagen  
DENMARK  
TEL: 3916 6200

### FINLAND

Roland Scandinavia As,  
Filial Finland  
Elanontie 5  
FIN-01510 Vantaa, FINLAND  
TEL: (0)9 68 24 020

### NORWAY

Roland Scandinavia Avd.  
Kontor Norge  
Lilleakerveien 2 Postboks 95  
Lilleaker N-0216 Oslo  
NORWAY  
TEL: 2273 0074

### SWEDEN

Roland Scandinavia A/S  
SWEDISH SALES OFFICE  
Danvik Center 28, 2 tr.  
S-131 30 Nacka SWEDEN  
TEL: (0)8 702 00 20

### HUNGARY

Roland East Europe Ltd.  
Warehouse Area 'DEPO' Pf.83  
H-2046 Torokbalint, HUNGARY  
TEL: (23) 511011

### POLAND

ROLAND POLSKA SP. Z O.O.  
UL. Gibraltarska 4.  
PL-03 664 Warszawa  
POLAND  
TEL: (022) 679 4419

### ROMANIA

FBS LINES  
Piata Libertatii 1,  
535500 Gheorgheni, ROMANIA  
TEL: (266) 364 609

### RUSSIA

MuTek  
Dorozhnaya ul.3,korp.6  
117 545 Moscow, RUSSIA  
TEL: (095) 981-4967

### SLOVAKIA

DAN Acoustic s.r.o.  
Povazská 18.  
SK - 940 01 Nové Zámky  
TEL: (035) 6424 330

### UKRAINE

EURHYTHMICS Ltd.  
P.O.Box: 37-a.  
Nedecey Str. 30  
UA - 89600 Mukachevo,  
UKRAINE  
TEL: (03131) 414-40

## OCEANIA

### Roland Corporation

Australia Pty., Ltd.  
38 Campbell Avenue  
Dee Why West, NSW 2099  
AUSTRALIA

For Australia  
Tel: (02) 9982 8266  
For New Zealand  
Tel: (09) 3098 715

## NORTH AMERICA

### CANADA

Roland Canada Ltd.  
(Head Office)  
5480 Parkwood Way, Richmond  
B. C., V6V 2M4 CANADA  
TEL: (604) 270 6626

### Roland Canada Ltd.

(Toronto Office)  
170 Admiral Boulevard  
Mississauga ON L5T 2N6  
CANADA  
TEL: (905) 362 9707

### U. S. A.

Roland Systems Group U.S.  
425 Sequoia Drive Suite 114,  
Bellingham, Washington,  
98226 USA  
TEL: 360-594-4282

As of Oct. 1, 2007 (EDIROL-2)

For C.A. US (Proposition 65)

## WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

## For EU Countries



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit den Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como esté regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olempürgist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti išmetami kartu su buitinėmis atliekomis.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimecības atkritumiem, kā noteikts katrā reģionā. Produktus ar šo simbolu nedrīkst izmest kopā ar mājsaimecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

## For China

### 有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于 2007 年 3 月 1 日以后本公司所制造的产品。

#### 环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日起的规定的期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

#### 产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

因根据现有的技术水平，还没有什么物质能够代替它。

## For the USA

### DECLARATION OF CONFORMITY Compliance Information Statement

Model Name : P-10  
Type of Equipment : Visual Sampler  
Responsible Party : Roland Systems Group U.S.  
Address : 425 Sequoia Drive Suite 114, Bellingham, Washington, 98226 USA  
Telephone : (360)-594-4282



**EDIROL**  
by Roland



\* 5 1 0 0 0 0 2 7 1 4 - 0 2 \*

5100002714 08-07-2N