



Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

### Important Warranty Information Regarding Television Format Viewing

See the warranty card for more information on warranty terms.

Wide screen format LED Displays (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature and the images are constantly moving. Displaying stationary graphics and images on screen, such as the dark sidebars on non-expanded standard format television video and programming, should be limited to no more than 5% of the total television viewing per week. Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. Displaying stationary images that exceed the above guidelines can cause uneven aging of LED Displays that leave subtle, but permanent burned-in ghost images in the LED picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars. On LED models that offer picture sizing features, use these controls to view different formats as a full screen picture. Be careful in the selection and duration of television formats you use for viewing. When LED aging as a result of format selection and use, as well as burned-in images, are not covered by your Samsung limited warranty.

SAMSUNG ELECTRONICS NORTH AMERICAN LIMITED WARRANTY STATEMENT

Subject to the requirements, conditions, exclusions and limitations of the original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein, SAMSUNG will additionally provide Warranty Repair Service in the United States on SAMSUNG products purchased in Canada, and in Canada on SAMSUNG products purchased in the United States, for the warranty period originally specified, and to the Original Purchaser only.

The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center. Along with this Statement, the Original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Service Center.



© 2014 Samsung Electronics Co., Ltd. All rights reserved.

**Timer Viewing:** You can schedule a channel to be displayed automatically at a set time, even when you are watching another channel. You must set the current time first in the **Time > Clock** function to use **Time Viewing**.

To schedule a channel, follow these steps:

- Select a channel in the **Added Channels** list using the **▲/▼** buttons and the Yellow Select button on your remote.
- Press the TOOLS button on your remote. The Tools menu appears.
- Select **Time Viewing** in the Tools menu, and then press the ENTER button. The Time Viewing screen appears.



- Use the **◀/▶** buttons to move from entry field to entry field and the **▲/▼** buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.
  - If you select **Everyday** or **Every Week**, the date you select in the Date field becomes the start date for your scheduled viewing. For **Everyday**, the TV will turn on every day, at the time you selected, starting from that date. For **Everyweek**, the TV will turn on every week, on the same day of the week as the start date you selected, at the time you selected, from that day on. If you select **Once**, the TV will turn on once, on the date and time you selected.

- Press the ENTER button on your remote when done.
  - Only Added Channels** can be scheduled.
  - Scheduled programs and channels are displayed in the **Programmed List**.
  - When you select a digital channel, press the **▶** button to view the digital program list. If you highlight a program in the list, and then press the ENTER (**Schedule**) button, you set **Timer Viewing** for that program directly.
  - Select All:** Select all the channels in the displayed channel list.
  - Deselect All:** Deselect all the selected displayed channels.
    - You can only select **Deselect All** when one or more channels are selected.
  - Channel Name Edit:** Analog channels only. Lets you assign a name of up to five characters to an analog channel. For example, Hist, Food, Golf, etc. This makes it easier to find and select a channel.
  - Auto Program:** See **Auto Program** under Memorizing Channels.

### Programmed List (on the Channel List Screen)

The **Programmed** list displays the channels and programs you have scheduled for viewing using the **Time Viewing** function. You can view, modify, or delete a show you have scheduled using the functions on the **Programmed List** screen Tools menu.

### Programmed List Screen Tools Menu

- Change Info:** Change the scheduling information for a show or channel you have scheduled.
- To change the information, follow these steps:
  - Select the **Programmed List** icon on the left side of the **Channel List** screen, and then press the ENTER button.
  - On the **Programmed List** screen, select the show or channel entry you want to change, and then press the TOOLS button. The Tools Menu appears.
  - Select **Change Info**, and then press the ENTER button. The **Time Viewing** screen appears.
  - Use the **◀/▶** buttons to move from entry field to entry field and the **▲/▼** buttons to change the entries. Where numbers are displayed, you can also enter numbers directly using the number keypad on your remote.
  - Press the ENTER button when done.
- Cancel Schedules:** Cancel a show or channel you have scheduled.

- To cancel a scheduled show or channel, follow these steps:
  - Select the **Programmed List** icon on the left side of the **Channel List** screen, and then press the ENTER button.
  - On the **Programmed List** screen, select the show or channel entry you want to cancel, and then press the TOOLS button. The Tools Menu appears.
  - Select **Cancel Schedules**, and then press the ENTER button. The **Cancel Schedule** screen appears.
  - Select **OK**, and then press the ENTER button.
  - Information:** Display the information for a show or channel you have scheduled. You can also change the schedule information.
    - Select the **Programmed List** icon on the left side of the **Channel List** screen, and then press the ENTER button.
    - On the **Programmed List** screen, select the show or channel entry you want information for, and then press the TOOLS button. The Tools Menu appears.
    - Select **Information**, and then press the ENTER button. The **Time Viewing** information screen appears.
    - Select **Change Info** and press the ENTER button to change information, or select **Close** and press the ENTER button to close the information screen.
  - Select All / Deselect All:** You can select or deselect all channels in the channel list.

### The On Screen Menus

Your TV has two kinds of menus, the Main menu and the various Tools menus. The Main menu gives you access to most or all of the menu options available on your TV. The Tools menus display a selected number of frequently used menu options that change depending on the screen you are viewing. A Tools menu symbol (T) in the lower right side of the screen indicates that a Tools menu is available.

The Main menu has seven primary categories:

- Picture
- Sound
- Channel
- Setup
- Input
- Application
- Support

To view the Main menu, press the MENU button on your remote. To view a Tools menu, press the TOOLS button on your remote.

The menu options that appear in the Main menu depend on the Source you have selected. For example, if you have selected the HDMI source, the Channel category will not appear. To see the Channel category, you must first select TV in the Source List.

The Menu options are presented below, arranged by Main menu categories. A Tools button symbol (T) next to an option name indicates the option is also available in one of the Tools menus.

### Picture Menu

**Mode** (TOOLS): Select your preferred picture mode.

- When your TV is connected to a PC, you can only select **Entertain** and **Standard**.
  - Dynamic:** Brightens the screen. Suitable for a bright room.
  - Standard:** Suitable for a normal.
  - Movie:** Darkens the screen, making it less gray. Suitable for watching movies in a darkened room.
  - Entertain:** Sharpens the picture. Suitable for games.
    - Only available when the TV is connected to a PC.
- Warm1** and **Warm2** are deactivated when the picture mode is set to **Dynamic**.
- Size:** Set the size and aspect ratio of the picture on the screen. Your cable box or satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use the TVs 16:9 mode most of the time.

### Backlight / Contrast / Brightness / Sharpness / Color / Tint (G/R)

- Backlight:** Adjusts the brightness of the screen by adjusting the brightness of the individual pixels.
- Contrast:** Increases or decreases the contrast between dark and light areas of the picture.
- Brightness:** Adjusts the brightness of the screen. Not as effective as Backlight.
- Sharpness:** Sharpens or dulls the edges of objects.
- Color:** Adjusts the color saturation. The higher the Color setting, the more intense the color. Low settings remove color and the picture becomes black, white and gray.
- Tint:** Adjusts the amount of green and red in the picture. As you increase the amount of green, the amount of red decreases and vice versa.
- When the TV is connected to a PC, you can only make changes to **Backlight, Contrast, Brightness, and Sharpness**.

### Advanced Settings

- Available in **Standard** and **Movie** mode only.
- Compared to previous models, new Samsung TVs offer a more precise picture with more precise controls.
  - When your TV is connected to a PC, you can only make changes to **Gamma** and **White Balance**.
  - Color Space (Auto / Native):** Auto automatically matches the range of colors available to create pictures to the color range of the video source. Native provides a color range wider than the color range of the video source.
  - White Balance:** Adjusts the color temperature of the picture so that white objects look white (instead of, for example, slightly pink or slightly yellow) and the overall color of the picture looks natural.
    - R-Offset / G-Offset / B-Offset:** Adjusts each color's (red, green, blue) darkness.
    - R-Gain / G-Gain / B-Gain:** Adjusts each color's (red, green, blue) brightness.
  - Reset:** Resets the **White Balance** to it's default settings.
  - Gamma:** Adjusts the primary color intensity.
  - Dynamic Contrast (Off / Low / Medium / High):** Adjusts the screen contrast.
  - Black Tone (Off / Dark / Darker / Darkest):** Selects the black level to adjust the screen depth. Darker settings make blacks look darker.
  - Flesh Tone:** Adjusts the amount of red in skin tones.
  - Motion Lighting (Off / On):** When on, the TV automatically adjusts the brightness of the screen in response to the brightness of the room. In bright light, the screen brightens. In dim light, the screen dims.
    - Available in **Standard** mode only.

### Picture Options

- When the TV is connected to a PC, you can only make changes to the **Color Tone, Size** and **HDMI Black Level**.
- Color Tone (Cool / Standard / Warm1 / Warm2):** Cool makes the picture bluer (cooler), Warm 1 and Warm 2 make the picture redder (warmer).
  - Warm1** and **Warm2** are deactivated when the picture mode is set to **Dynamic**.
- Size:** Set the size and aspect ratio of the picture on the screen. Your cable box or satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use the TVs 16:9 mode most of the time.
- 16:9:** Sets the picture to the 16:9 wide screen format.
- Zoom1:** Provides moderate magnification of the picture. Sides, top, and bottom are cut off.
- Zoom2:** Provides larger magnification of the picture. Sides, top, and bottom are cut off.
- Wide Fit:** Enlarges the aspect ratio of the picture so the picture fits the entire screen.
- 4:3:** Sets the picture to the old, 4:3 format and puts black or gray borders on the right and left of the picture.
  - Do not watch your TV in the 4:3 format for a long time. Traces of borders displayed on the left, right and center of the screen may cause image retention (screen burn) which is not covered by the warranty.
- Screen Fit:** Displays the full image without any cut-off when your TV is inputting HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) HD signals.
- HD (High Definition)** has a 16:9 aspect ratio and 1080i/1080p (1920x1080) or 720p (1280x720) resolution.
- You can adjust and store settings for each external device you have connected to an input on the TV. Picture Sizes available by Input Source are listed below:

### If you selected Manual:

The **Clock Set** screen appears. Use the **▲/▼** buttons to change the values in each field or use the number buttons to enter the values directly. Use the **◀/▶** buttons to move from field to field. When done with all the fields, press ENTER.

- Available only when **Clock Mode** is set to **Manual**.
- Sleep Timer** (TOOLS): Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).
  - To cancel the **Sleep Timer**, select **Off**.

### Timer 1 / Timer 2 / Timer 3

- Turns the TV on and off automatically at times and days you select. You can set three different on/off timer settings.
  - You must set the clock first.
- On Time / Off Time:** Set the hour, minute, am/pm, and Activate/inactivate fields for the **On Time** and **Off Time**. Use the **◀/▶** buttons to move from field to field. Use the **▲/▼** buttons to change the values in each field. To activate the timer with the setting you have chosen, set the Activate/inactivate field to **Activate**.
- Volume:** Set the desired loudness.
- Contents:** To select what will be turned on when the timer setting is activated. You can set the TV to turn on a specific channel or play back contents such as photo or audio files. Use the **◀/▶** buttons to move to move to the Contents field, and then press the ENTER button. The Contents screen appears. Use the **◀/▶** buttons to move from field to field. Use the **▲/▼** buttons to change the values in each field.

- TV/USB:** Select **TV** or **USB**. The USB device must be connected to your TV before you can select **USB**.
- Antenna:** Displays the current antenna source, **Air** or **Cable**.
- Channel:** If you have selected TV, select the desired channel.
- Music/Photo:** If you have selected USB, follow these steps to select a folder containing MP3 (Music) or JPEG (Photo) files on the USB device:
  - The maximum displayed number of files, including sub folders, in one folder of USB storage device is 2000.
  - The media may not be playing smoothly when using the device lower than USB 2.0.
- 1. Use the **◀/▶** buttons to move to the field under **Music** or the field under **Photo**, and then press the ENTER button. The TV displays a single folder (the Root folder) and the type or name of the device.
- 2. Press the ENTER button. A list of folders on the device appears.
  - If there are no folders on your device, press the **Yellow** select button to select the Root folder, and then press the RETURN button. The Timer screen re-appears.
- 3. Use the **▲/▼** buttons to highlight a folder that contains music or photos, and then press the **Yellow** select button to select the folder.
- 4. Press the RETURN button. The Timer screen re-appears.

**Repeat:** Select **Once, Everyday, Mon-Fri, Mon-Sat, Sat-Sun** or **Manual**. If you select **Manual**, you can select the days you want to activate the timer by using the **◀/▶** buttons to highlight the day, and then pressing the ENTER button. To unselect a day, highlight it, and then press the ENTER button.

When you finished making all your selections on the Timer screen, press either the ENTER or RETURN button.

### Input Source

ATV, AV, Component (480i, 480p)  
 16:9, Zoom1, Zoom2, 4:3  
 DTV (1080, 1080p), Component (1080, 1080p), HDMI (720p, 1080i, 1080p)  
 4:3, Screen Fit

- Digital Clean View (Off / Low / Medium / High / Auto):** If the broadcast signal received by your TV is weak, you can activate the **Digital Clean View** feature to reduce any static and ghosting that may appear on the screen.
  - When the signal is weak, try all the **Digital Clean View** options until the TV displays the best picture.
  - MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide improved picture quality.
  - HDMI Black Level (Normal / Low):** For HDMI signals, select the black level to adjust the screen depth. Low make blacks look darker.
    - Available only in HDMI mode (RGB signals).
  - Film Mode (Off / Auto1 / Auto2):** Sets the TV to automatically sense and process film signals from all sources and adjusts the picture for optimum quality.
    - Available in ATV, DTV (interface), AV, COMPONENT (480i / 1080i) and HDMI (480i / 1080i).
  - LED Clear Motion (Off / On):** Removes drag from fast scenes with a lot of movement to provide a clear picture.

### Picture Reset

- Picture Reset (Reset Picture Mode/Cancel):** Resets the picture settings to their factory defaults.
- Standard:** Selects the normal sound mode.
- Music:** Emphasizes music over voices.
- Movie:** Provides the best sound for movies.
- Clear Voice:** Emphasizes voices over other sounds.
- Amplify:** Increase the intensity of high-frequency sounds to allow a better listening experience for the hearing impaired.

### Sound Menu

- Balance L/R:** Adjusts the balance between the right and left speaker.
- 100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment):** Adjusts the loudness of specific bandwidth frequencies.
- Reset:** Resets the equalizer to its default settings.

### Equalizer

- Available in **Standard** sound mode only.
- Balance L/R:** Adjusts the balance between the right and left speaker.
- 100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment):** Adjusts the loudness of specific bandwidth frequencies.
- Reset:** Resets the equalizer to its default settings.

### SRS TruSurround HD (On/Off)

Available in **Standard** sound mode only. SRS TruSurround HD is a patented SRS technology that solves the problem of playing 5.1 multichannel content through two speakers. TruSurround delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

### Preferred Language

Digital-TV broadcasts can transmit many audio tracks simultaneously (for example, simultaneous translations of a program into foreign languages). You can only select a language from among the ones being broadcast.

### Multi-Track Sound (MTS)

- Analog channels only.
  - Mono:** Select for channels that are broadcasting in mono or if you are having difficulty receiving a stereo signal.
  - Stereo:** Select for channels that are broadcasting in stereo.
  - SAP:** Select to listen to the Separate Audio Program, which is usually a foreign-language translation.
    - Depending on the program being broadcast, you can listen to **Mono, Stereo** or **SAP**.

### Auto Volume

Automatically adjusts the volume level when you change video sources or content so the level remains the same.

### Sound Reset

**Reset All:** Resets all sound settings to the factory defaults.

### Channel Menu

### Memorizing Channels

When you first set up your TV using **Plug & Play**, the TV memorized the channels that were available over the air or through your cable system and added them to the **Channel List**. The **Antenna** and **Auto program** functions described below let you re-run the channel memorization function without having to re-run the **Plug & Play** procedure.

### Antenna (Air / Cable)

Before your television can memorize the available channels, you must select your TV's signal source, **Air** (using an antenna) or **Cable**. Select Menu > Channel > Antenna > Air or Cable. After you have selected the signal source, go on to the **Auto Program** function.

- Selecting the signal source using the **Antenna** function also determines the signal source the TV is tuned to. For example, if you receive your TV signal over the air, and you select **Cable**, you will see only snow. You must select **Air** to see a picture.

### Auto Program

The **Auto Program** function memorizes all channels that are available over the air or through your cable system and adds them to the **Channel List**.

To start **Auto Program**, follow these steps:

- Push MENU → Channel → Auto Program → ENTER on your remote. The Antenna Source screen appears.
- On the Antenna Source screen, select the source of your TV signal.

### Air

If your TV is connected to an antenna choose **Air**, and then press ENTER. The TV will automatically start memorizing channels.

### Cable

If your TV is connected to a cable outlet, choose **Cable**, and then press ENTER. Go to Step 3.

- All Channels:** Shows all currently available channels including those you deleted from the **Added Channels** list.
- Added Channels:** Shows all **Added Channels**. These are the channels that appear when you press the CH button.
- Favorite:** Shows all favorite channels.
- Programmed:** Shows all channels and programs currently scheduled using **Timer Viewing**.
  - Remote control buttons active on the **Channel List** screen.
    - Green (Zoom):** Enlarges or shrinks a channel number.
    - Yellow (Select):** Move the cursor to a channel. Press the Yellow button to select the channel. A ✓ mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a function to the channels you selected.
    - Tools (Tools):** Displays the **Channel List** Tools menu. (The Tools menu may differ depending on the situation.)

### Game Mode (On/Off)

When you connect a game console such as a PlayStation™ or Xbox™ to your TV, you can enjoy a more realistic gaming experience by turning on the **Game Mode** function.

- Precautions and limitations for game mode:
  - When you disconnect the game console and connect another external device, set **Game Mode to Off** in the setup menu.
  - If you display the TV menu in **Game Mode**, the screen shakes slightly.
  - Game Mode** is not available when the input source is set to **TV**.
  - After connecting the game console, set **Game Mode to On**. You may notice slightly reduced picture quality.

### Caption

- (On-Screen Text Dialogue)
  - Caption:** You can switch the caption function on or off. If captions are not available, they will not be displayed on the screen.
    - The Caption feature does not work in **Component** or **HDMI** mode.
  - Caption Mode:** You can select the desired caption mode.
    - Default / CC1-CC4 / Text1-Text4:** (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.)
    - Default / Service1-Service6 / CC1-CC4 / Text1-Text4:** (Digital channels only) The Digital Captions function works with digital channels.
      - Service1-6** may not be available in digital caption mode depending on the broadcast.
    - Digital Caption Options:** (Digital channels only)
      - Size:** Options include Default, Small, Standard and Large. The default is Standard.
      - Font Style:** Options include Default and Styles 0 to 7. The default is Style 0.
    - Foreground Color:** Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the color of the letters. The default is White.
    - Background Color:** Options include Default, White, Black, Red, Green, Blue, Yellow, Magenta and Cyan. You can change the background color of the captions. The default is Black.
    - Foreground Opacity:** This adjusts the opacity of text. Options include Default, Transparent, Translucent, Solid and Flashing.
    - Background Opacity:** This adjusts the opacity of the caption background. Options include Default, Transparent, Translucent, Solid and Flashing.
    - Return to Default:** This option sets each Size, Font Style, Foreground Color, Background Color, Foreground Opacity and Background Opacity to its default.
    - Digital Caption Options** are available only when you can select **Default** and **Service1 – Service6** in **Caption Mode**.
      - The Foreground and Background cannot be set to the same color.

- Locking/Blocking Programs or Movies**
  - You lock or block programs and/or movies in essentially the same way for each option. Each option displays a grid or table. All the tables have ratings listed on the left. The TV Parental Guidelines option also has kinds of content listed across the top: ALL, Lock all TV ratings, / FV: Fantasy violence / V: Violence / S: Sexual situation / L: Adult Language / D: Sexually Suggestive Dialog.
  - To lock/block movies or shows with certain ratings and/or kinds of content, click the square next to the rating and/or under the kind of content. A lock appears. To unlock/unblock, click the square again. When you click a low rating, all the ratings above it will also display locks. You can also Allow All or Lock All. When done, press the RETURN button on your remote.
  - Change PIN:** The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them in **Enter New PIN** fields. Re-enter the same 4 digits in **Confirm New PIN** fields. When the Change PIN screen disappears, press the OK button. The TV has memorized your new PIN.
    - If you forget the PIN, press the remote-control buttons in the following sequence, which resets the pin to "0-0-0-0": POWER (off) → MUTE → 8 → 2 → 4 → POWER (on)

### Melody

Set so that a melody plays when the TV is turned on or off.

- The Melody** does not play:
  - When no sound is output from the TV because the MUTE button has been pressed.
  - When no sound is output from the TV because the volume has been reduced to minimum with the VOL - button.
  - When the TV is turned off by **Sleep Timer** function.

**Auto**  
 If you choose **Auto**, and then press ENTER, the TV will automatically select the correct Antenna source. Go to Step 3.

- On the Cable Type screen, use the **◀/▶/▲/▼** buttons to select the type of digital and analog cable systems you have: **STD, HRC, or IRC**. Most systems are **STD** (Standard). When done, select **STB**, and then press ENTER. The TV will start memorizing channels.
  - Channel memorization can take up to 45 minutes, depending on your cable system.
  - Memorized channels are added to the **Added Channels** list. These are the channels you will see when you use the Channel buttons on your remote.


### Clear Scrambled Channel

- This function filters out scrambled channels after **Auto Program** is completed. This process may take up to 20-30 minutes.
- Press the ENTER button to stop the **Clear Scrambled Channel**.
- This function is only available in **Cable** mode.

### Managing Channels

#### Channel List

See your list of Added channels, Favorite channels, or channels you've scheduled for viewing. Add or delete Favorite channels, add or delete channels from the **Added Channels** list, schedule channels or programs for viewing. Watch a channel by selecting the channel in the **All Channels, Added Channels, or Favorite** screen, pressing the **▲/▼** buttons, and then pressing the ENTER button.

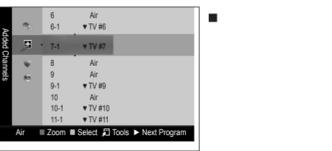

**Channel List Screens icons are listed on the left side. Select an icon using the ▲/▼ buttons to view each list.**

- All Channels:** Shows all currently available channels including those you deleted from the **Added Channels** list.
- Added Channels:** Shows all **Added Channels**. These are the channels that appear when you press the CH button.
- Favorite:** Shows all favorite channels.
- Programmed:** Shows all channels and programs currently scheduled using **Timer Viewing**.
  - Remote control buttons active on the **Channel List** screen.
    - Green (Zoom):** Enlarges or shrinks a channel number.
    - Yellow (Select):** Move the cursor to a channel. Press the Yellow button to select the channel. A ✓ mark appears. Repeat to select additional channels. Then, open the Tools menu and apply a function to the channels you selected.
    - Tools (Tools):** Displays the **Channel List** Tools menu. (The Tools menu may differ depending on the situation.)
</

- The maximum displayed number of files, including sub folders, in one folder of USB storage device is 2000.
- The media may not be playing smoothly when using the device lower than USB 2.0.

## Videos



- In the **Media Play** menu, press the **◀** or **▶** button to select **Videos**, and then press the **ENTER** button.
- Press the **◀/▶/▲/▼** buttons to select a video in the file list.
- Press the **ENTER** button or **▶** (Play) button.
  - The file name is displayed on the top of the screen with the playing time.
  - If video time information is unknown, playing time and the progress bar are not displayed.
  - During video playback, you can search using the **◀** and **▶** buttons.

In this mode, you can play movie clips contained in a game, but you cannot play the game itself.

### Supported Subtitle Formats

Name	File extension
MPEG-4 Timed text	.txt
SAMI	.smi
SubFtp	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass

Name	Container	Format
.xsub	AVI	Picture Format
SubStation Alpha	MKV	Text Format
Advanced SubStation Alpha	MKV	Text Format
SubFtp	MKV	Text Format
MPEG-4 Timed text	MP4	Text Format

### Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate(frames/sec)	Bit rate(Mbps)	Audio Codec
*.avi *.m1v *.avi *.m1v *.mp4 *.3gp *.mpg *.mpeg *.ts *.tp *.mov *.mpv *.vob *.avi *.mkv	AVI MKV ASF MP4 3GP MPEG FLV VRO VOB PS TS	DivX 3.11/4/5/6 MPEG4 SP / ASP H.264 BP / MP / HP Motion JPEG Window Media Video 9	1920x1080 640x480 1920x1080	30 6-30 30	30 8 30	AC3 LPCM ADPCM (IMA/MS) AAC HE-AAC WMA Dolby MPEG (MP3) DTS (Core) G.711 (A-Law, U-Law)
		MPEG2	1920x1080			
		MPEG1				

### Other Restrictions

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the Supported Video Formats table.
- If the Index Table erroneous, the Seek (Jump) function is not supported.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps.
- Video content can not be played if there are many contents in one file.

### Video Decoder

Supports up to H.264, Level 4.1  
H.264 FMO / ASO / RVC, VC1 SP / MP / AP-L4 and AVCHD are not supported.  
MPEG4 SP, ASP :  
– Below 1280 x 720: 60 frame max  
– Above 1280 x 720: 30 frame max  
H.263 is not supported.  
GMC is not supported.

### Audio Decoder

Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO  
WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR mode of WMA Pro is not supported)  
GMC is not supported.  
WMA Lossless is not supported.

### Music



- In the **Media Play** menu, press the **◀** or **▶** button to select **Music**, and then press the **ENTER** button.
- Press the **◀/▶/▲/▼** buttons to select the desired Music in the file list.
- Press the **ENTER** button or **▶** (Play) button.
  - During music playback, you can search using the **◀** and **▶** buttons.
  - (REV)** and **(FF)** buttons do not function during play.

Media Play only displays files with MP3 and PCM file extension. Other file extensions are not displayed, even if they are saved on the same USB device.

- If the sound is abnormal when playing MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)

### Photos



- In the **Media Play** menu, press the **◀** or **▶** button to select **Photos**, then press the **ENTER** button.
- Press the **◀/▶/▲/▼** buttons to select a photo in the file list.
- Press the **ENTER** button or **▶** (Play) button.

NOTE

- While a photo list is displayed, press the **[ ]** (Play) / **ENTER** button on the remote control to start a slide show.
- All files in the file list section will be displayed in the slide show.
- During the slide show, files are displayed in order.
- During the slide show, you can adjust the slide show speed using **(S)** (REW) or **(F)** (FF) button.
- You can move to other files using **◀** or **▶** button.

- Media Play** can play Music files automatically during a Slide Show if **Background Music** is set to **On**.
- You cannot change the **Mode** in **Background Music** until the Background Music file has finished loading.

### Supported Photo Formats

Image	Photo	Resolution
JPEG	Base-line Progressive	15360 x 8704 1024 x 768

### Other Restrictions

CMYK, YCCK Color space JPEG are not supported.

### Playing Multiple Files

#### ■ Playing selected video/music/photo files

- On the File List screen, highlight a file, and then press the **Yellow** button on your remote.
- Repeat Step 1 to select multiple files.
  - NOTE
    - A **✓** mark appears to the left of the selected files.
    - To cancel a selection, press the **Yellow** button again.
    - To deselect all selected files, press the **TOOLS** button, select **Deselect All**, and then the **ENTER** button.
- Press the **TOOLS** button, select **Play Selected Contents**, and then press the **ENTER** button.

#### ■ Playing a video/music/photo folder

- With the folders on your USB device displayed, use the **◀/▶/▲/▼** buttons to highlight a folder.
- Press the **TOOLS** button, select **Play Folder**, and then press the **ENTER** button.

### Media Play - Additional Functions

#### ■ Videos/Music/Photos Play Option menus

When playing a file, press the **TOOLS** button.

Category	Operation	Video	Music	Photos
<b>Title</b>	You can select another video file to play directly.	✓		
<b>Repeat Mode</b>	You can play movie and music files repeatedly.	✓	✓	
<b>Picture Size</b>	You can adjust the picture size to your preference.	✓		
<b>Picture Mode</b>	You can adjust the picture setting.	✓		✓
<b>Sound Mode</b>	You can adjust the sound setting.	✓	✓	✓
<b>Subtitle Setting</b>	You can play the video with Subtitles. This function only works if the subtitles have the same file name as the video.	✓		
<b>Audio Format</b>	You can select the digital audio output format.	✓		
<b>Audio Language</b>	You can change the audio language if the video has more than one language.	✓		
<b>Stop Slide Show / Start Slide Show</b>	You can start or stop a Slide Show.			✓
<b>Slide Show Speed</b>	You can select the slide show speed during the slide show.			✓
<b>Background Music</b>	You can set and select background music when watching a Slide Show.	✓		✓
<b>Zoom</b>	You can zoom into images in full screen mode.			✓
<b>Rotate</b>	You can rotate images in full screen mode.			✓
<b>Information</b>	You can see detailed information about the played file.	✓	✓	✓

### NOTE

- Standard dimensions for wall mount kits are shown in the table below.
- When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- Do not use screws that do not comply with the VESA standard screw specifications.
- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.
- Do not mount the TV at more than a 15 degree tilt.
- Always have two people mount the TV on a wall.

Product Family	TV size in inches	VESA screw hole specs (A * B) in millimeters	Standard Screw	Quantity
LED-TV	19-22"	75 X 75	M4	4
	26-28"	100 X 100		
	32-40"	200 X 200	M6	
	46-60"	400 X 400	M8	



### Securing the TV to the Wall

- Caution:** Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV, doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

### To prevent the TV from falling

- Since the necessary brackets, screws, and string or cable are not supplied, please purchase these separately.
- Insert the screws into the wall brackets and firmly fasten them to the wall. Make sure the screws are firmly fixed to the wall.
- We strongly recommend you drive the screws into a stud.
- Using screws, insert the screws through the TV brackets, and then fasten the screws to the top VESA screw holes on the back of the TV.
- Connect the brackets on the TV and the brackets on the wall with a strong string or cable, and then tie the string or cable tightly to the brackets.
- Verify all connections are properly secured. Periodically check the connectors for any sign of fatigue or failure. If you have any doubt about the security of your connections, contact a professional installer.
- Install the TV close to the wall so that it does not fall.
- Connect the string or cable so that the brackets on the wall are at the same height or lower than the brackets on the TV. Untie the string or cable before moving the TV.
- To purchase a TV Holder kit, contact Samsung customer care.

### Other Information

#### Installing the Wall Mount Kit

The wall mount kit (sold separately) allows you to mount the TV on the wall.

 
For detailed information about installing the wall mount, see the instructions provided with the wall mount items. Contact a technician for assistance when installing the wall mount bracket. Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you elect to install the wall mount on your own.

#### Wall Mount Kit Specifications (VESA)

The wall mount kit is not supplied, but sold separately. Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

### Storage and Maintenance

- If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean it before watching the TV.
- The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.



### License

TheaterSound, SRS and the **Ⓢ** symbol are trademarks of SRS Labs, Inc. SRS TheaterSound™ provides the most immersive surround sound experience from the TV's built-in speakers, while maintaining steady volume and delivering rich bass and clear dialog.

DiViX Certified® to play DiViX® video up to HD 1080p, including premium content.

**ABSOLUTE DiViX VIDEO:** DiViX® is a digital video format created by DiViX LLC, a subsidiary of Rovi Corporation. This is an official DiViX Certified® device that plays DiViX video. Visit [divix.com](http://divix.com) for more information and software tools to convert your files into DiViX videos. **ABOUT DiViX VIDEO-ON-DEMAND:** This DiViX Certified® device must be registered in order to play purchased DiViX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DiViX VOD section in your device setup menu. Go to [vod.divix.com](http://vod.divix.com) for more information on how to complete your registration. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274 DiViX®, DiViX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos. 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+ Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

### Open Source License Notice

Open Source used in this product can be found on the following webpage. (<http://opensource.samsung.com>) Open Source License Notice is written only English.

To send inquiries and requests for questions regarding open sources, contact Samsung via Email ([oss.request@samsung.com](mailto:oss.request@samsung.com)).

- This product uses some software programs which are distributed under the Independent JPEG Group. (I)U License - ICU 1.8.1 and later

 
**COPYRIGHT AND PERMISSION NOTICE**  
Copyright (c) 1995-2008 International Business Machines Corporation and others All rights reserved.  
Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.  
THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.  
Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.  
All trademarks and registered trademarks mentioned herein are the property of their respective owners.

### Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- Please find a **Ⓚ** icon on the rear of the TV. The Kensington slot is beside the **Ⓚ** icon.
- The position and color may differ depending on the model.

### Assembling the Cable manager



### Troubleshooting

If the TV seems to have a problem, first review this list of possible problems and solution. If none of these troubleshooting tips apply, visit [samsung.com](http://samsung.com), then click on Support, or call Samsung customer service at 1-800-SAMSUNG.

 
Problem	Possible Solution
Flickering and Dimming	If your Samsung Television is flickering or dimming sporadically, you may need to disable some of its energy efficient features like the Eco Sensor or the Energy Saving feature. Follow the steps below with your remote to turn these features off or on. <ul style="list-style-type: none"> <li>Energy saving : <b>Menu</b> → <b>Setup</b> → <b>Eco Solution</b> → <b>Energy Saving</b> → <b>Select Settings</b></li> <li>If the test is ok, try making sure :               <ul style="list-style-type: none"> <li>Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source.</li> <li>Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV.</li> </ul> </li> </ul>
Component Connections / Screen Color	<ul style="list-style-type: none"> <li>Self Diagnosis : <b>User Menu</b> → <b>Support</b> → <b>No Device Issues</b></li> <li>If the test is ok, try making sure :               <ul style="list-style-type: none"> <li>Your connections are all consistent. For example, if you've used the AV In jack on your TV, make sure you have used the AV Out jack on your video source.</li> <li>Try making sure you have connected to the correct jacks. For example, if you use the Component jacks, labeled Pb, Pr, and Y, to connect your TV and video source, make sure you have connected the blue Pb jack on the video source to the blue Pb jack on the TV, the red Pr jack on the source to the red Pr jack on the TV.</li> </ul> </li> </ul>
Screen Brightness	If you find that the colors on your Samsung TV are correct but just a little too dark or bright, there are some settings you should check before calling for a repair. <ul style="list-style-type: none"> <li>Backlight, Contrast, Brightness, Sharpness, Color, Tint and so on. Go to "Picture" in the Menu, and then try adjusting these options.</li> </ul>
Unwanted Powering off	If your Samsung TV appears to turn off by itself, there may be an issue with either your Timer settings or your Eco friendly No Signal Power Off feature. <ul style="list-style-type: none"> <li>First make sure the Sleep Timer is not accidentally set. The Sleep Timer lets you fall asleep with the TV still on knowing that it will turn off after a certain period of time and not waste energy.</li> <li>Sleep Timer : <b>User Menu</b> → <b>Setup</b> → <b>Time</b> → <b>Sleep Timer</b></li> <li>If the Sleep Timer is not activated, you may have engaged the No Signal Power Off or Auto Power Off feature.</li> <li>No Signal Power Off : <b>User Menu</b> → <b>Setup</b> → <b>Eco Solution</b> → <b>No Signal Power Off</b></li> <li>Auto Power Off : <b>User Menu</b> → <b>Setup</b> → <b>Eco Solution</b> → <b>Auto Power Off</b></li> </ul>

### Specifications

Environmental Considerations	
Operating Temperature	50°F to 104°F (10°C to 40°C)
Operating Humidity	10% to 80%, non-condensing
Storage Temperature	-4°F to 118°F (-20°C to 45°C)
Storage Humidity	5% to 95%, non-condensing
Model Name	UN28H4000AF
Display Resolution	1366 x 768
Screen Size (Diagonal)	28" Class
Sound Output	(27.5" measured diagonally)
Dimensions (W x H x D)	5W x 2
Body	25.3 X 15.6 X 2.4 inches (643.4 X 396.5 X 62.9 (mm))
With stand	25.3 X 17.1 X 6.4 inches (643.4 X 435.1 X 163.4 (mm))
Weight	
Without Stand	8.2 lbs (3.73 kg)
With Stand	9.0 lbs (4.10 kg)

- Design and specifications are subject to change without prior notice.
- This device is a Class B digital apparatus.
- For information about the power required and more about power consumption, refer to the label attached to the product.
- Typical power consumption is measured according to Energy Star Program requirements for televisions.
- Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: [www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect) or call, (877) 278-0799.

### ■ JACK PANEL DETAIL / REAR VIEW



Model name	①	②	③	④	⑤	⑥
UN28H4000AF	5.8	3.1	4.0	15.5	3.9	3.9

NOTE: All drawings are not necessarily to scale. Some dimensions are subject to change without prior notice. Refer to the dimensions prior to performing installation of your TV. Not responsible for typographical or printed errors.  
© 2014 Samsung Electronics America, Inc