



## Cut-to-Fit LCD Screen Protector Kit

USER MANUAL

### Thank you for choosing Sensei.

Congratulations on the purchase of your Sensei Cut-to-Fit LCD Screen Protector Kit. This cut-to-fit screen protector is designed to protect your device's LCD screen from scratches, dust, and smears. It's easy to apply and remove, it adheres to the LCD screen without leaving behind any sticky residue, and the paper backing includes printed grid lines to help you custom-fit the screen protector to the exact size you need.

 
Please read these instructions carefully before applying your Sensei Cut-to-Fit LCD Screen Protector.

### Box Contents


- Six (6) screen protectors
- Three (3) wet wipes
- Three (3) dry wipes
- Applicator card

### Instructions


**Note:** Before applying your Cut-to-Size LCD Screen Protector, you must determine the size of your camera's LCD screen.

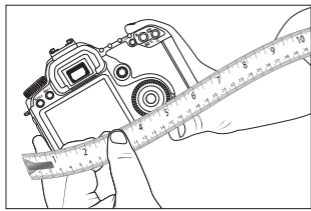

 
1. Measure the height and width your device's LCD screen in millimeters.

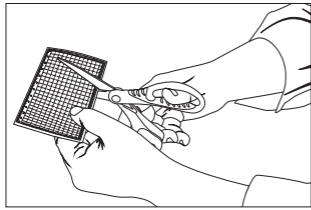

 2. Using a pair of scissors or a razor and a straight edge, trim the screen protector along the guidelines that correspond to your camera's LCD size.

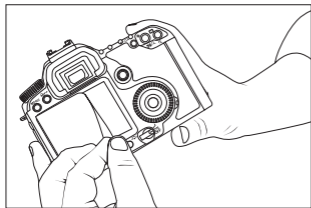


 3. Remove all films or other intervening substances from your camera's LCD.

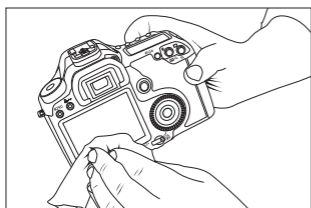


4. Clean the LCD with the included wet wipe, and then wipe it dry with the dry wipe. Be sure to remove all dust and fingerprints.

 5. Partially peel off

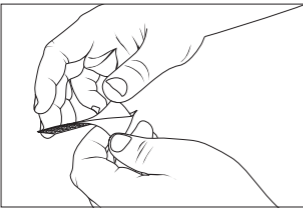

 
the backing from the screen protector. Be careful not to get any fingerprints on the exposed side of the screen protector.

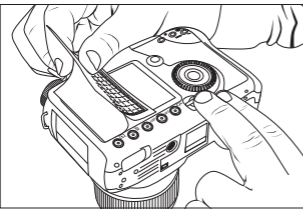

6. Make sure your camera is on a stable surface, and align the screen protector with the camera's LCD.


**Tip:** Turning on the LCD will make it easier to see the edges when aligning the

 screen protector.

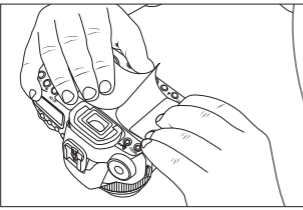

7. Hold the backing of the screen protector up while gently pushing down on the screen protector with the included applicator card. As you push the applicator card along

 the camera's LCD to apply the screen protector, the backing will gradually peel off.

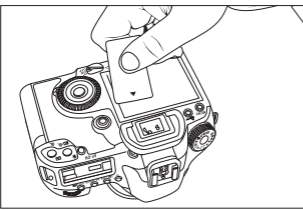

8. Use the applicator card to smooth out any remaining air bubbles by pushing them to the edge of the screen protector.

### Limited One-Year Warranty

Sensei provides a limited warranty that this product is free from defects in materials and workmanship to the original purchaser under normal use for a period of one (1) year from the original purchase date or thirty (30) days after replacement whichever occurs later. Our responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. To obtain warranty coverage during the Warranty Period, contact your place of purchase ("Seller") to obtain a return merchandise authorization ("RMA") number, and return to Seller the defective product along with proof of purchase and the RMA number. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, SENSEI MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights which vary from state to state.