


S *sensei* PRO™

FH-150-14M

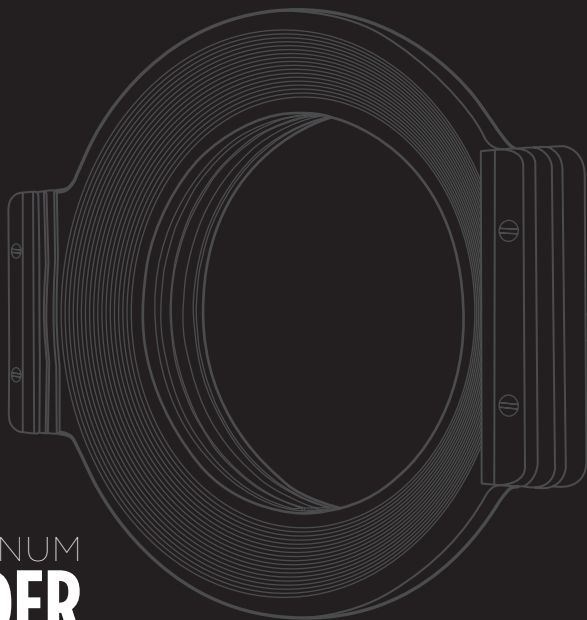

AIRCRAFT ALUMINUM
FILTER HOLDER




for Nikon 14-24mm f/2.8 G AF-S lens

User Manual


Thank you for choosing Sensei Pro

The FH-150-14M filter holder allows the use of standard 150 mm (5.9") 2 mm thick filters with Nikon's 14-24mm f/2.8 lens. It quickly and easily mounts onto the lens and is capable of holding two filters simultaneously. It can be adapted to include an additional slot for a third filter with the included film clips. The holder can smoothly rotate a full 360° allowing use of filters that are most effective with adjustable positioning. Backlighting will not produce flare or glare due to our innovative gapless design that leaves less than a 2 mm space between the filter and filter holder. Aircraft aluminum construction provides durability, and silicon friction strips secure the lens. Together they ensure flawless operation.

Overview

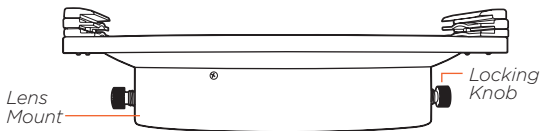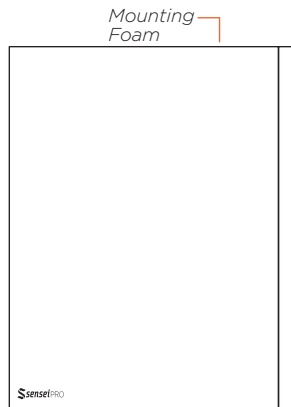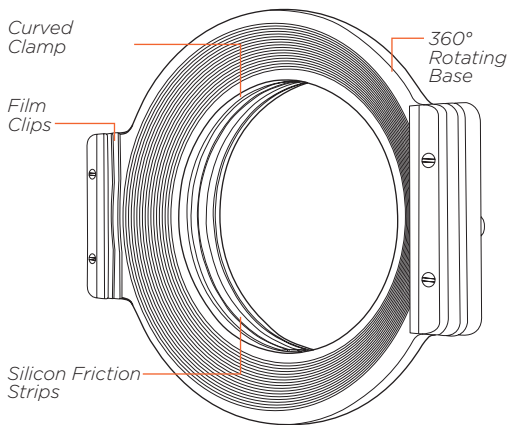


Additional Film Clips and Screws

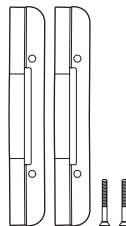


Instructions

Mounting the Filter Holder


1. Insert the mounting foam into the holder. If it doesn't slide into the holder easily, turn the foam 1/4 turn for the proper orientation.

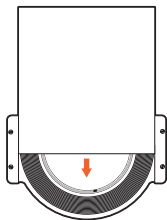


 2. Place the filter holder on a flat surface so that it's resting on the foam and the lens mount is facing up.
3. Loosen the locking knobs on either side of the holder.




4. With the lens holder still on the flat surface, place the lens down into the holder. Make sure the holder and the lens are aligned by lining up the top of the lens and the Sensei Pro logo.

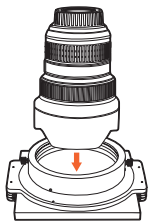

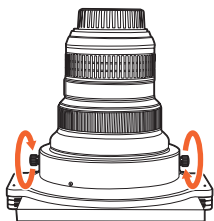

5. Securely tighten the two locking knobs simultaneously. Once the knobs are secure, remove the mounting foam.


Note: To ensure the lens is centered in the holder, make sure the locking knobs are applying equal tension to the lens on either side

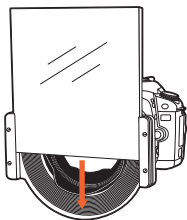

6. Install a filter into the holder by sliding it into position between the film clips. Due to the snug fit, the filter may have to be slightly jiggled to glide into the clips.


Note: Do not use excessive force that can damage the filter or the holder.

Once the filter is installed, the filter can be adjusted for optimum performance by sliding it up and down or rotating it.

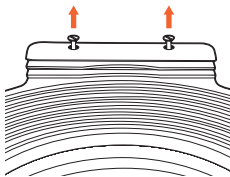


Adding a Third Filter


1. Using a 5/64 flathead screwdriver, carefully remove the screws from the film clips.

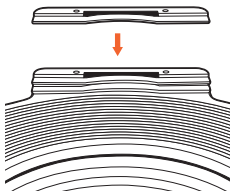


2. Remove the top clips and insert the extra film clips by placing them under the top clips.

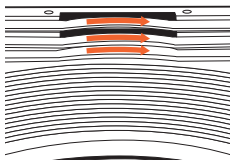

3. Make sure the new clips are oriented similarly to the other clips so that the curve of the clips is bending away from the base.

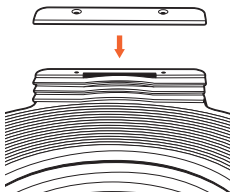

4. Replace the top clips by placing them on top of the newly added clips. As in the previous step, make sure the curve is oriented similarly with the other clips.

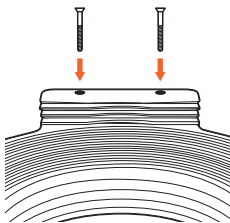

5. Replace and securely screw in the clip screws. If it is taking too much effort to insert a filter, check the orientation of the clips to make sure they are all curving in the same direction.

Note: At the 45° rotation, vignetting will be encountered when using three filters.

One-Year Limited Warranty

This SENSEI product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Sensei Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Sensei along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.madebysensei.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

SENSEI is a registered trademark of the Gradus Group.

© 2014 Gradus Group LLC. All Rights Reserved.

