

Dear Photographer,

You have just purchased a Think Tank Photo Airport Rolling Bag. You may be surprised how much photo gear will fit comfortably inside the bag. We invite you to examine the roller carefully and you will soon discover a number of ways that it can be adapted to fit your specific style of shooting and transportation needs.

If you have any questions feel free to contact us at CustomerService@ThinkTankPhoto.com

Cheers!

Doug Murdoch, President and Lead Designer

Included with your new Think Tank Photo rolling camera bag is a Tripod Kit that enables you to attach a tripod or monopod to the side of the bag.

One of each of the following items is included in the Tripod Kit (shown from left to right):

- Tripod Cup with detachable strap
- Monopod Strap
- Tripod Strap
- Compression Strap



MONOPOD ATTACHMENT



Step 1: Place the Monopod Strap under the webbing loop as shown, matching the hook and loop material together.



Step 2: Thread the Monopod Strap through the buckle to form a loop as shown.



Step 3: Place the foot of the monopod in the stretchable side pocket.



Step 4: Pull the Monopod Strap over the top of the monopod and using the strap, tighten the monopod into place.



LARGE TRIPOD ATTACHMENT



Step 1: Place the Tripod Strap under the webbing on the side of the bag, matching the hook and loop material to keep the strap in position.



Step 2: Weave the webbing on the tripod cup through the buckle on the side of the bag as shown. It's important to back-loop the strap through the buckle to prevent the strap from loosening with usage. Airport Security V2.0 owners will find this buckle on the inside of the side zippered pocket.



Step 3: Adjust the length of the strap so that the Tripod Cup has adequate clearance from the ground.

STANDARD TRIPOD ATTACHMENT



Step 1: Place the Tripod Strap under the webbing on the side of the bag, matching the hook and loop material to keep the strap in position.



Step 2: Place two tripod legs into the expandable pocket on the side of the bag and use the compression strap to secure the lower portion of the tripod to the side of the bag. Pull the buckle straps on both the Compression Strap and Tripod Strap to tighten the tripod onto the side of the bag.





SETTING THE LOCKS

Your Think Tank Photo rolling camera bag includes three unique locks, each of which serves a specific purpose. The following text will explain what each lock is for and will also provide detailed instructions on how to set your own combination on each one.

We encourage you to set and test your locks in advance of travel. In the event that you need further assistance to set any of your locks, feel free to contact us via email or phone. CustomerService@ThinkTankPhoto.com

US Toll Free: 866-558-4465

TSA Zipper Combination Lock

The TSA Zipper Combination Lock is located on the outside of the bag, and enables you to quickly lock the main equipment compartment by being able to push the ends of the main zipper pull tabs into the locking receptacles. The lock also features a keyhole that allows access to the interior of your bag by the Transportation Safety Administration (TSA) when travelling through airports.

Setting the TSA Zipper Combination Lock



Step 1: Turn the dials to the default combination of 0,0,0. If the lock does not open at the default combination, please contact us for assistance.



Step 2: Using a ballpoint pen, depress the small silver button on the top of the lock with adequate force until you hear or feel a faint "click."



Step 3: Rotate the dials to your preferred combination.



Step 4: Push both silver buttons on the sides of the lock inward to activate your new combination.



Step 5: To lock the main compartment, push the ends of the zipper pull-tabs into the slots as shown.



Setting the Front Cable Lock

An additional security cable lock is located in the front pocket. This cable may be used to secure an Artificial Intelligence TM laptop case in the front pocket of the bag as shown. The cable can also be attached directly to a keyed laptop lock.



Step 1: Start by setting the dials to 0-0-0. Take a ballpoint pen and press down firmly on the small recessed reset button located at the base of the clasp until you hear a "click" sound.



Step 2: Rotate the dials to the new combination of your choice.



Step 3: Depress the lock clasp until you hear a "click" sound

Setting the Rear Security Cable Lock


A security cable and lock are located inside the rear zippered pocket. The cable may be used to secure the bag to immovable objects as shown to the right.



This cable may be used to secure your roller to an immovable object.



Step 1: Locate the addtional security cable and lock located in the back zipper pocket.

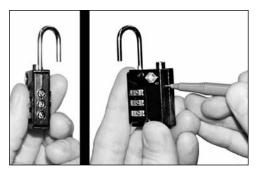

Step 2: Turn the dials and align the numbers so that 0-0-0 is visible inside the combination windows that are located on the narrow side of the lock. Pull up the shackle and turn it 90° counter-clockwise to align the small protrusion on the shackle with the notch on the lock body. Press the shackle down firmly and then turn the shackle a further 90° counter-clockwise. With the shackle still turned in the position above, turn the dials to your own personal combination. Return the shackle back to the original position. Your personal combination is now ready to use.