

Airport Security

Dear Photographer,


You have just purchased the Airport Security, Think Tank Photo's state-of-the-art roller that combines the best of field mobility with airline travel requirements! Many unique features are combined in the Airport Security. We invite you to examine the roller carefully for you will soon discover new ways that it can be adapted to fit your specific style of shooting and transportation needs.

If you have any questions, feel free to contact us at CustomerService@ThinkTankPhoto.com.


Cheers!

Doug Murrdoch


Setting the TSA Combination Lock

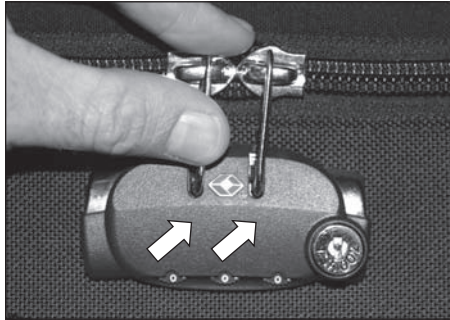

Step 1: To LOCK the main compartment, push the ends of the sliders HARD into the slots.

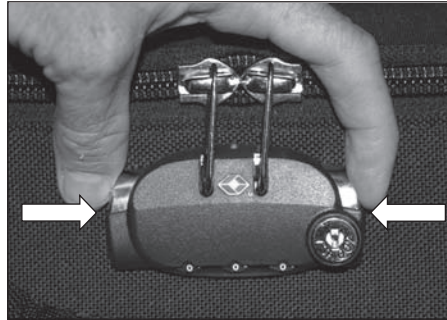


Step 2: To UNLOCK the main compartment, set your combination then push the end buttons INWARD.

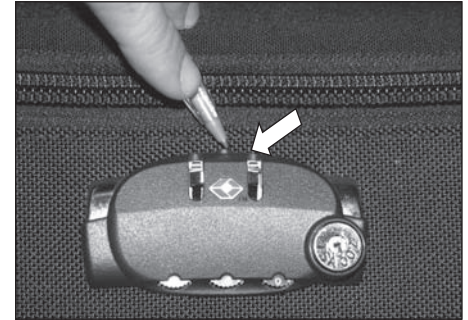

Step 3: The lock's combination is pre set from the factory at 0 0 0. To CHANGE the combination, there is a hole on the side of the lock. Push the button IN with a pen until you hear a "click."



Step 4: SET the numbers to your desired combination. REMEMBER your new combination!

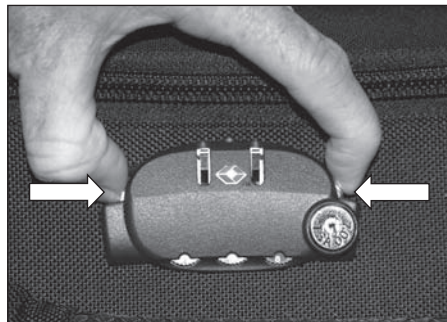

Step 5: PUSH both ends inward HARD until you hear a "click." Your new combination is now active.



TSA (Transportation Security Authorization) lock allows for Airport Personnel to access your bag. Think Tank Photo does not recommend gate-checking your gear, but there may be situations where airport personnel requires entry. Please note that there is no individual key for this bag.

Back Security Cable and Lock



Step 1: A security cable and lock are located inside the back zipper pocket.




Step 2: This cable may be used to secure the bag to immovable objects.



Step 3: Lock is currently set to 0 0 0. To reset lock, pull the shackle and turn it 90° counterclockwise to align with notch on lock body. Press down, and turn an additional 90° counterclockwise. Reset the combination. Return lock to current position.


Front Security Cable and Lock

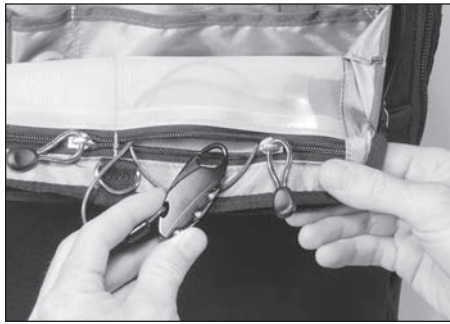

Step 1: An additional security cable and lock are located in the front pocket.



Step 2: This cable may be used to secure a laptop case, such as the *Artificial Intelligence 15* or *17*, to the Airport Security.

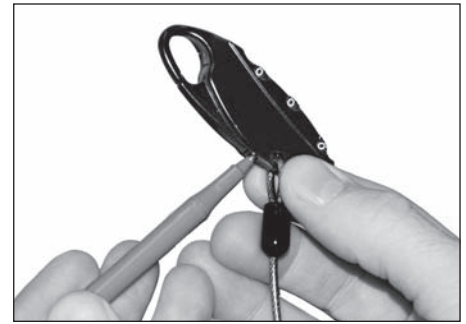

Step 3: Lock is currently set to 0 0 0. To reset lock, use a pen to press in small release button on side of lock. (As shown above.) While pressing, change your combination. Once you release, your new combination will be set.

Removable Emergency Shoulder Harness



Step 1: The removable “emergency” shoulder straps will allow you to temporarily transport your gear in situations where you cannot roll the bag. (This roller is not designed to be used as a backpack on a regular basis).



Step 2: The metal snaphook on the bottom of the shoulder straps connect to the D rings on the sides of the bag. The length of the shoulder straps can be adjusted with the buckle.



Step 3: The shoulder straps can be removed by unthreading the webbing through the metal buckle.



Step 4: To reattach the shoulder straps, put the webbing completely through the buckle.



Step 5: Make sure the webbing is back threaded all the way through the buckle.

Airport Security is Compatible with...



Artificial Intelligence 15 or **17** laptop cases can fit inside the front pocket.



Airport Security Low Divider Set may be used to store laptop inside of the bag.



The **Airport Check In** briefcase is the perfect addition to the Security and slides onto the handle.

Instructions for using a Monopod or Tripod with the Airport Security Roller

Monopod Instructions

A monopod can be attached easily to the side of the roller. Place the monopod into the lower stretchable pocket, and then tighten the strap around the monopod above the pocket.



Step 1: Remove the strap labeled "Monopod Strap" (pictured above) from inside of the roller.



Step 2: Place the strap under the webbing loop as shown, matching the hook and loop together.



Step 3: Thread the strap through the buckle as shown above.



Step 4: The strap was designed to be long enough for you to pull it over the top of the monopod without undoing the buckle.

Wrap the excess strap around the monopod and under the webbing on the roller.

Tripod Instructions



Tripod Strap


Compression Strap for leg of Tripod



Step 1: Remove the strap labeled "Tripod Strap" (pictured above) from inside of the roller.




Step 2: Place the strap under the webbing loop as shown, matching the hook and loop together.

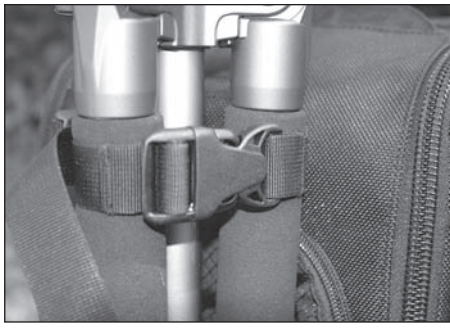


Step 3: The Side Release Buckle should be located on the side of the tripod, as shown above.



Step 4: The Ladder Lock Buckle should also be located on the side of the tripod. Use this buckle to tighten the strap.

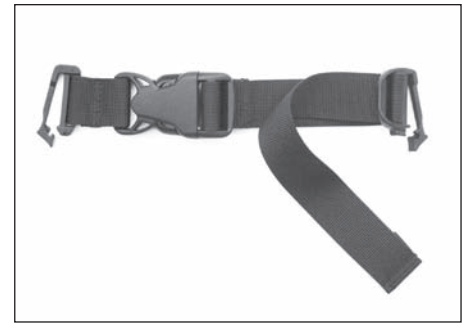

Step 5: Locate the Compression Strap inside of the backpack or roller.

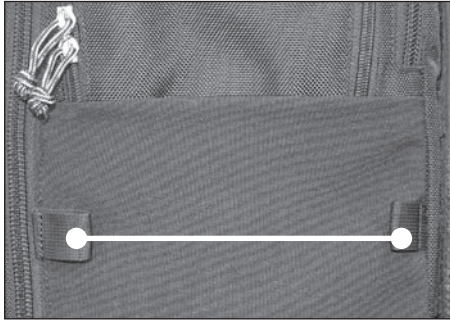

Step 6: On the sides of the stretchable pocket are two webbing attachment loops.



Step 7: Push the open Slik Clip through the webbing, and snap it shut with your fingers on both sides.



Step 8: After both Slik Clips are attached to either side, use the buckle to adjust the proper length.

Large Tripod Instructions



Step 1: Locate the Tripod Cup inside of the backpack or roller.



Step 2: Attach the tripod cup to the buckle located on the inside of the side pocket.



Step 3: With the strap hanging on the outside of the bag, close the side pocket zipper around the strap.

Use this buckle to adjust the Tripod Cup up and down, to fit the correct length of your tripod.

