

# AUTO LENS ADAPTER

## USER MANUAL

LAE-CM-CEF

Canon EF/EF-S Lens to Canon EOS-M Camera



 VELLO™

## INTRODUCTION

Thank you for purchasing the Vello LAE-CM-CEF Auto Lens Adapter – Canon EF/EF-S Lens to Canon EOS-M Camera. This adapter allows you to mount any Canon EF or EF-S lens to a Canon EOS-M camera. With an EF or EF-S lens mounted to a Canon EOS-M camera using this adapter, all automatic functions, such as auto focus and auto exposure, are available and fully operational. A removable tripod mount collar with a 1/4" socket is included.



## CONTENTS INCLUDE

- Vello LAE-CM-CEF Auto Lens Adapter - Canon EF/EF-S Lens to Canon EOS-M Camera
- Front and rear caps
- Removable tripod mount collar
- User manual



## INTRODUCTION

The Vello Auto Lens Adapter – Canon EF/EF-S Lens to Canon EOS-M Camera can expand the arsenal of lenses for your Canon EOS-M camera using lenses you already own. With this adapter, you can mount any Canon EF or EF-S lens to a Canon EOS-M camera. Just attach the adapter to your EF or EF-S lens, then mount the lens and adapter to your Canon EOS-M camera.



When using an EF lens, there will be a crop factor of 1.6x, so that the apparent focal length of the lens will be 1.6x of the actual focal length. With EF-S lenses, there is no apparent change in the focal length. All camera functions will operate normally, including auto focus, auto exposure, and touch-screen modes. A removable tripod mount collar is included for use with longer lenses. When using a lens that's heavier than the camera, it is recommended that you use the tripod mount collar to mount the camera on a tripod. Do not use the tripod mount socket on the camera when using a telephoto lens. A heavy lens will put excessive stress on the lens mount of the camera when the camera is mounted to a tripod using the camera's tripod mount socket.

## PRECAUTIONS

- Mount the lens to the adapter in a dust-free environment.
- Avoid sandy or dusty environments when using this adapter.
- Handle the adapter with care—don't drop it, and avoid bumps and shocks.
- Clean the adapter by wiping it with a soft, dry cloth.
- Do not use solvents such as benzene, alcohol, detergents, etc. to clean the adapter.
- Be sure to read the operating instructions for your digital camera.
- Keep this unit away from water and flammable gases or liquids.

- Do not attempt to disassemble or repair the equipment—doing so will void the warranty, and Vello will not be responsible for any damage.
- Handle the unit with care.
- Keep this unit away from children.
- Use only parts provided by the manufacturer.
- All photos are for illustrative purposes only.
- Please read and follow these instructions, and keep this manual in a safe place.

## OVERVIEW

- ① EF/EF-S lens mount
- ② EF lens red dot indicator
- ③ EF-S lens white square indicator
- ④ Camera mount dot indicator
- ⑤ Lens release button
- ⑥ EOS-M camera mount
- ⑦ Tripod collar
- ⑧ Tripod collar release wheel
- ⑨ 1/4" tripod socket





## ATTACHING THE LENS ADAPTER

1. Turn the camera's power off.
2. Remove the rear lens cap, camera body cap, and lens adapter caps.
3. With an **EF** lens, align the inner red dot on the lens adapter with the red dot on the lens. With an **EF-S** lens, align the white square on the lens adapter with the white square on the lens.



4. Slowly and carefully insert the lens into the adapter and carefully rotate it clockwise until it clicks into place.



5. Align the white mark on the lens adapter with the white lens attachment mark on the camera and slowly rotate the adapter and lens clockwise until it clicks into place on the camera.

*Note: In order to use auto focus with the camera, be sure that the lens is set to auto focus.*



## REMOVING THE LENS ADAPTER

1. Turn the camera's power off.
2. Hold down the lens release button on the camera and rotate the lens and adapter counterclockwise until they come to a stop. Remove from the camera.



3. Hold down the release button on the adapter mount, and remove the lens by rotating it counterclockwise until it comes to a stop.
4. Separate the lens from the adapter mount.
5. Replace the rear lens cap, camera body cap, and lens adapter caps.



## MOUNTING / REMOVING THE TRIPOD COLLAR

1. Align the tripod collar mounting screw with the mounting hole on the bottom of the lens adapter.



- 
2. Carefully rotate the mounting wheel on the tripod collar clockwise until the tripod collar is securely attached to the lens adapter.



3. To remove the tripod collar, rotate the mounting wheel counterclockwise until the collar is loose enough to remove from the lens adapter.

*Note: When attaching a lens that's equipped with a built-in tripod collar to the lens adapter, use the tripod collar on the lens to mount it to a tripod.*



## COMPATIBILITY

Lenses that are compatible with the Vello Auto Lens Adapter  
– Canon EF/EF-S Lens to Canon EOS-M Camera.

	Canon EF Lenses	Canon EF-S Lenses	Canon CN-E Lenses	Canon EF-M Lenses
Compatible	✓	✓	✗	✗

## SPECIFICATIONS

- Dimensions – 2.6" diameter × 0.8" length (65 × 19.5 mm)
- Weight – 2.9 oz. (83 g)



## One-Year Limited Warranty

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense. For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group.

© 2014 Gradus Group LLC. All Rights Reserved.



[www.vellogear.com](http://www.vellogear.com)

All other trademarks are the property of their respective owners

GG2