



# BG-C11

## BATTERY GRIP

Designed for the Canon  
EOS Rebel SL1 DSLR Camera



# Introduction

Thank you for choosing the Vello BG-C11 Battery Grip for the Canon EOS Rebel SL1 DSLR Camera. This camera accessory offers users the ability to extend camera shooting time by housing an additional battery for your device. The grip's ergonomic design enhances the comfort of vertical (portrait) image capturing with the vertical-shooting shutter release button. The BG-C11 also includes an IR remote, which can be used to trigger the grip and camera from up to 15' (4.6 m) away. This grip is compatible with LP-E12 batteries.


*Please read  
through this entire  
manual before using the  
BG-C11 battery grip.*



# Precautions

- 1.** The BG-C11 should only be used with compatible batteries and devices specified in this manual.
- 2.** Cover the power terminals with the contact cap when the BG-C11 is not in use. This prevents electrical shorts caused by metal objects touching the power terminals.
- 3.** If you notice smoke, an unusual smell, or noise from the battery pack, discontinue use immediately. Remove the batteries and take the device to a Vello authorized reseller.
- 4.** The battery level may not display properly if the batteries are inserted before mounting the grip.
- 5.** Remove batteries from the grip when not in use.
- 6.** Do not attempt to disassemble.
- 7.** Avoid water or extreme humidity and keep in a dry and cool place.
- 8.** Keep out of reach of children.
- 9.** All images are for illustration purposes only.

# Battery Grip Overview

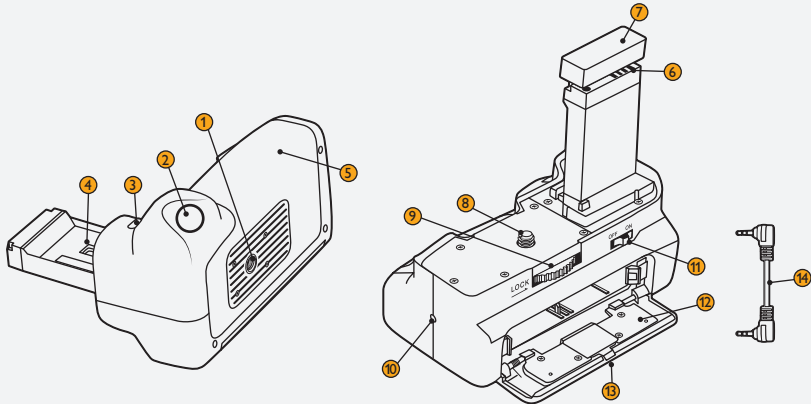

### ❶ 1/4" Tripod Socket

Allows the camera to be mounted on a tripod when the grip is mounted.

### ❷ Two-Step Shutter Release Button

Serves as an alternate shutter release button for shooting in vertical (portrait) mode.

### ❸ Integrated IR Receiver

Wirelessly triggers the camera using the included IR remote and the battery grip's integrated IR sensor.

### ❹ Camera Battery Door Slot

Stores the camera's battery chamber door when the grip is mounted.

### ❺ Anti-Slip Rubber Grip

Provides secure and comfortable grip when shooting vertically.

### ❻ Power Contacts

Slides into the camera's battery chamber and transmits power.

### ❼ Contact Cap

Protects metal power contacts. Keep this cap on when the grip is not connected to the camera.

### ❽ Mounting Screw

Connects to the camera's tripod socket.

### ❾ Attachment Wheel

Secures the grip to the camera's tripod socket.

### ❿ Shutter Release Cable Port

Accepts 2.5 mm to 2.5 mm sub mini connector of the shutter release cable.

### ⓫ On/Off Switch

Turns the grip's IR receiver and shutter release button on or off using the integrated power switch.

### ⓬ Battery Chamber Door

Secures up to two Canon LP-E12 batteries in the compartment.


### ⓭ Door Latch

Releases battery chamber door.

### ⓮ Shutter Release Cable

Carries shutter release signal from battery grip to the camera.

# IR Remote Overview

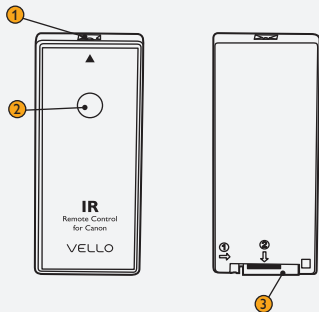

- ① IR emitter
- ② Shutter release button
- ③ Battery compartment


# Box Contents

- Vello BG-C11 battery grip
- IR remote with CR2032 battery
- Shutter release cable
- User manual
- One-Year Limited Warranty


# Specifications

Power Source	One or two Canon LP-E12 Rechargeable Batteries
Operating Temperature	32-104°F (0-40°C)
Remote Battery Compatibility	CR2032
Remote Operating Distance	Max. 15' (4.6 m)
Dimensions	4.6" x 2.9" x 3.7" (11.7 x 7.4 x 9.4 cm)
Weight (without batteries)	5.29 oz. (150 g)


# Attaching The Grip

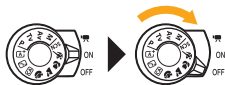


1. With the camera turned off, open the battery compartment door and remove the battery.

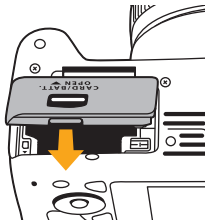


2. Gently pull the battery chamber door at a 35° angle and remove the door from the camera.

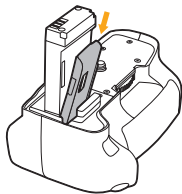


3. Slide the battery compartment door into the battery compartment door slot on the grip so that the side showing is flat with no protrusions sticking out.

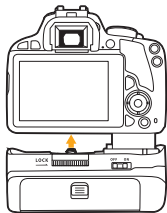


4. Insert the grip's power contacts into the camera as shown above. Ensure the camera's tripod socket and the battery grip's mounting screw are aligned.

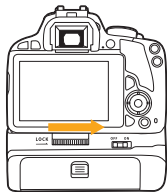


5. Rotate the attachment wheel counter clockwise to secure the grip to the camera.

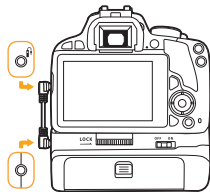

6. Connect the shutter release cable to the camera's shutter release port (ⓘ), and plug the other end into the grip's shutter release port.

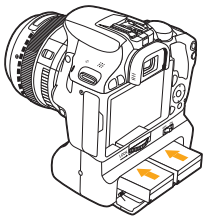

- 7.** Insert one or two batteries into the grip and turn on the camera. You will be able to see the battery power level on the LCD screen.

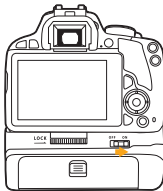

- 8.** Turn the battery grip on using the On/Off switch to activate the IR receiver and shutter release button. Putting the switch in the off position will disable the IR receiver and shutter release button.

*Note: The Vello BG-C11 can power the Canon SL1 with one or two batteries installed in the grip.*

*Note: When removing the grip, turn the camera power off, remove batteries by pressing each side release, and replace protective contact cap.*

# IR Remote

The Vello BG-C11 comes with an IR remote, which can be used to wirelessly trigger your grip and camera from up to 15' (4.6 m) away. The use of this accessory requires line-of-sight to communicate. To use the remote, follow these instructions:

1. Remove the protective plastic flap from the battery compartment.
2. Make sure the Shutter Release Cable is connected to the camera and grip.
3. Point the remote's IR emitter at the camera and grip.
4. Press the button on the remote to trigger your camera.

*Tip: If your camera's lens is set to auto-focus, one press of the remote's trigger button will focus and fire the camera.*

*Note: The included IR remote can also trigger your Canon SL1 without the grip installed. Simply set your camera to (i) Self-time:10sec/remote Mode. Pressing the button on the remote will trigger your camera.*

# ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group. © 2014 Gradus Group LLC. All Rights Reserved.



[www.vellogear.com](http://www.vellogear.com)

© Copyright 2014 Gradus Group LLC  
All other trademarks are the property of their respective owners.

GG1