



BG-N15

BATTERY GRIP

Designed for the Nikon
D750 DSLR Camera

 VELLO™

USER'S MANUAL

Introduction

Thank you for choosing Vello and congratulations on your new BG-N15 battery grip purchase. Enjoy the many benefits that a battery grip offers, such as extended shooting time and more control and comfort when shooting in a vertical (portrait) orientation.

The Vello BG-N15 is compatible with the Nikon D750 DSLR camera. The BG-N15 accepts one Nikon EN-EL15 rechargeable battery, in addition to the camera's internal battery. Six AA batteries (alkaline, Ni-MH or lithium) can be used instead for added convenience. The BG-N15 is equipped with an alternate shutter-release button, AE-L/AF-L button, multi selector, and main and sub-command dials for shooting in a vertical position.


Please read through this entire manual before using the BG-N15 battery grip.



Precautions

- 1.** The BG-N15 should be used only with the compatible devices specified in this manual.
- 2.** Use only with batteries and battery holders recommended in this manual. The BG-N15 cannot be used with other batteries or battery holders.
- 3.** When the BG-N15 is not attached to the camera, cover the power terminal with the contact cap. This prevents electrical shorts caused by metal coming into contact with the power terminals.
- 4.** When the battery holder is removed from the grip, remove the batteries or place the holder in a container to prevent electrical shorts caused by contact with other metal objects.
- 5.** The memory card access lamp may glow temporarily when the BG-N15 is mounted or removed from the camera. This is part of the normal operation.
- 6.** If you notice smoke, noise, or an unusual smell from the battery pack, discontinue use immediately. Remove the batteries and contact Vello Customer Service.
- 7.** The BG-N15 does not have a power switch. Instead, use the camera power switch to turn the power on or off.
- 8.** The battery level may not display properly if batteries are inserted before mounting the grip.
- 9.** Remove batteries from the grip when not in use.
- 10.** In cold temperatures, batteries can discharge at a faster rate. Warming up a cold battery can recover some of its lost charge and help improve its performance.
- 11.** Avoid water or extreme humidity and keep in a dry and cool place.
- 12.** Keep out of reach of children.

Overview

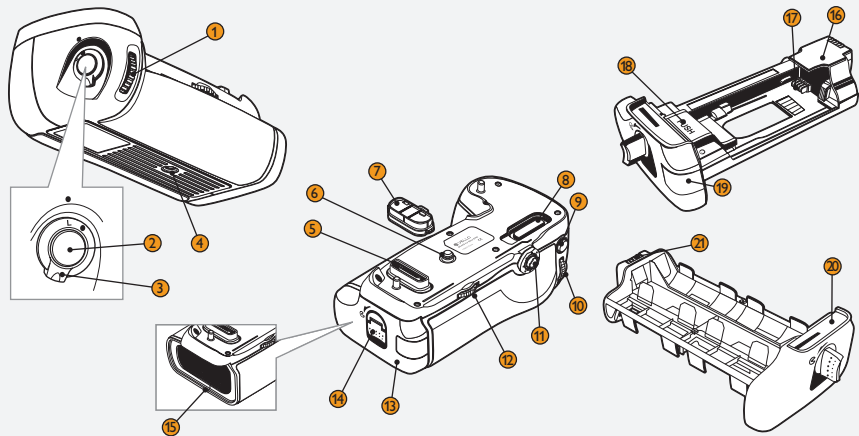

1 Sub-command Dial *

2 Shutter-Release Button *

3 Control Lock Switch

To prevent accidental triggering, the control lock switch locks the shutter-release button, AE-L/AF-L button, multi selector, and main and sub-command dials on the BG-N15. Unlock prior to use by switching to the ● position. The control lock is not a power switch.

4 Tripod Socket

5 Power/Signal Contacts

6 Mounting Screw

7 Contact Cap

8 Camera Contact Cover Holder

9 AE-L/AF-L Button *

10 Main Command Dial *

11 Multi Selector *

12 Locking Wheel

13 Battery Holder

14 Battery Holder Latch

15 Battery Chamber

16 EN-EL15 Battery Holder
Holder for Nikon EN-EL15 battery.

17 Power Terminals
(EN-EL15 Battery Holder)

18 Push Button

Ejects the battery in the EN-EL15 Battery Holder.

19 AC Power Supply Socket

Nikon EP-5B Power Supply Connector port (connector not included).

20 AA Battery Holder

Holds six AA batteries.

21 Power Terminals


(AA Battery Holder)

** These controls perform the same functions as their on-camera equivalents and are affected by changes to the Custom Settings menu. See camera manual for details.*


Attaching the Grip




1. Ensure that the power is turned off on the camera and that the Control Lock on the BG-N15 is in the **L** position before attaching the grip.

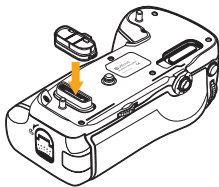


2. Remove the contact cap from the BG-N15 battery grip. When the BG-N15 is not attached to the camera, replace the contact cap to protect the contacts.

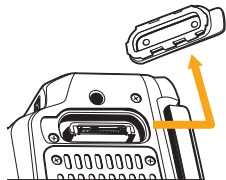

3. The contacts for the BG-N15 are on the bottom of the camera where they are protected by a rubber contact cover. Remove the contact cover from the camera before mounting the grip.

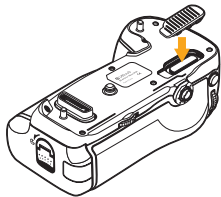


- 4.** To prevent loss, place the camera contact cover into the contact cover holder on the BG-N15.

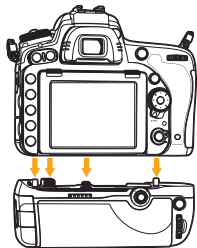

- 5.** Connect the BG-N15 grip to the camera while aligning the grip's mounting screw with the camera's tripod socket.

It is not necessary to remove the battery from the camera before mounting the grip.

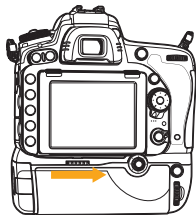


- 6.** Rotate the attachment wheel in the direction shown by the arrow until it is firmly tightened.


Inserting Batteries




1. Ensure that the power is turned off on the camera and the Control Lock on the BG-N15 is in the **L** position.

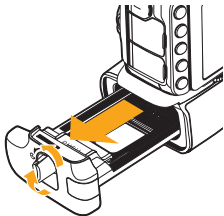


2. Lift the battery holder latch so you can rotate it counterclockwise and pull the battery holder out of the grip. The **EN-EL15** battery holder comes pre-installed.

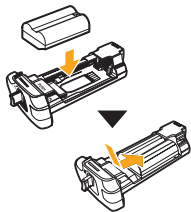

3. **Nikon EN-EL15 Battery:** Matching the indentations on the battery with the **EN-EL15** holder, press the battery down and slide it in the direction of the arrow until the power terminals click into place.

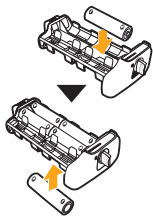

- 4. AA Batteries:** Place Six AA batteries of the same type in the **AA** battery holder as shown, while ensuring that they are in the correct orientation.

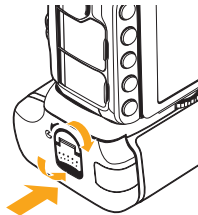









- 5.** Make sure the battery holder latch is rotated counterclockwise and slide the battery holder all the way into the grip. Rotate the latch clockwise and reposition it so it's flush with the side of the grip. Turn on your camera, unlock the BG-N15 via its Control Lock switch, and check the battery level in the control panel or viewfinder.






Battery Info

The camera displays the following battery levels.

Nikon EN-EL15 Battery:


LCD/Control Panel	Viewfinder	Description
	—	Battery fully charged.
	—	Battery partially discharged.
		
		
		Low battery. Prepare spare batteries.
 (blinking)	 (blinking)	Battery exhausted. Shutter release is disabled.

AA Batteries:

LCD/Control Panel	Viewfinder	Description
	—	Batteries fully charged.
		Low battery power. Prepare spare batteries.
 (blinking)	 (blinking)	Batteries exhausted. Shutter release is disabled.

AA Battery Settings

To ensure that the camera shows the correct battery level when AA batteries are used, choose the appropriate setting in the Custom Settings menu (Group “d”).

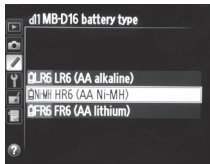


Battery Type	Menu Option to Select
AA alkaline (LR6)	LR6 (AA alkaline)
AA Ni-MH (HR6)	HR6 (AA Ni-MH)
AA Lithium (FR6)	FR6 (AA lithium)

Note: The menu screens on this page are from the D750.

Nikon Rechargeable Batteries

The camera can display information (including calibration information) for Nikon EN-EL15 batteries via the Battery Info option in the Setup Menu. For AA batteries, only battery levels are displayed.

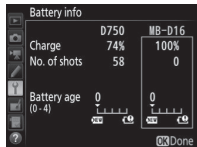


Battery Order


Set the order in which the internal camera and BG-N15 batteries are used via the Custom Settings menu (Group “d”). To view the status for both batteries, check your camera’s LCD screen. When the camera is drawing power from the BG-N15, the battery gauge for the grip is displayed in the control panel.



Removing the Batteries

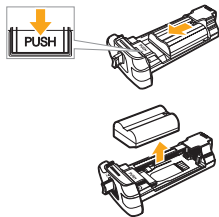

- 1. EN-EL15 Battery Holder:** While pressing and holding the PUSH button on the holder, slide the battery toward the button and lift up to remove.

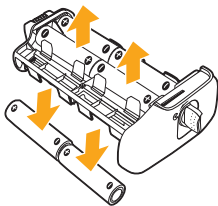

- 2. AA Battery Holder:** Remove the batteries one row at a time (as shown). Be sure that the batteries do not drop during this process.

Specifications

Power Source	One EN-EL15 rechargeable Li-ion battery or six LR6 Alkaline, HR6 Ni-MH or FR6 Lithium AA batteries or Nikon EP-5B Power Supply Connector
Operating Temperature	32°F–104°F (0°C–40°C)
Dimensions (W × H × D)	5.6" × 2" × 3" (14.2 × 5.1 × 7.6 cm)
Weight	9.1 oz. (258 g) with EN-EL15 battery holder (excluding battery)

Specifications and design are subject to change without notice.

Please note: This product is not compatible with Duracell® brand alkaline batteries.

One-Year Limited Warranty

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group. © 2015 Gradus Group LLC. All Rights Reserved.





© Copyright 2015 Gradus Group LLC
All other trademarks are the property of their respective owners

GG1