


MINI FOLDING BRACKET

FOR POINT & SHOOT CAMERAS AND CAMCORDERS

Thank you for choosing Vello.

Congratulations on the purchase of your new Vello CB-700 Mini Folding Bracket. Designed for Point & Shoot cameras and camcorders, this bracket features a comfortable rubber grip for handheld shooting in vertical or horizontal positions, and a 1/4" thread on the bottom that facilitates tripod mounting. Compatible with most shoe mount flashes and LED lights, the bracket also folds flat for easy storage.

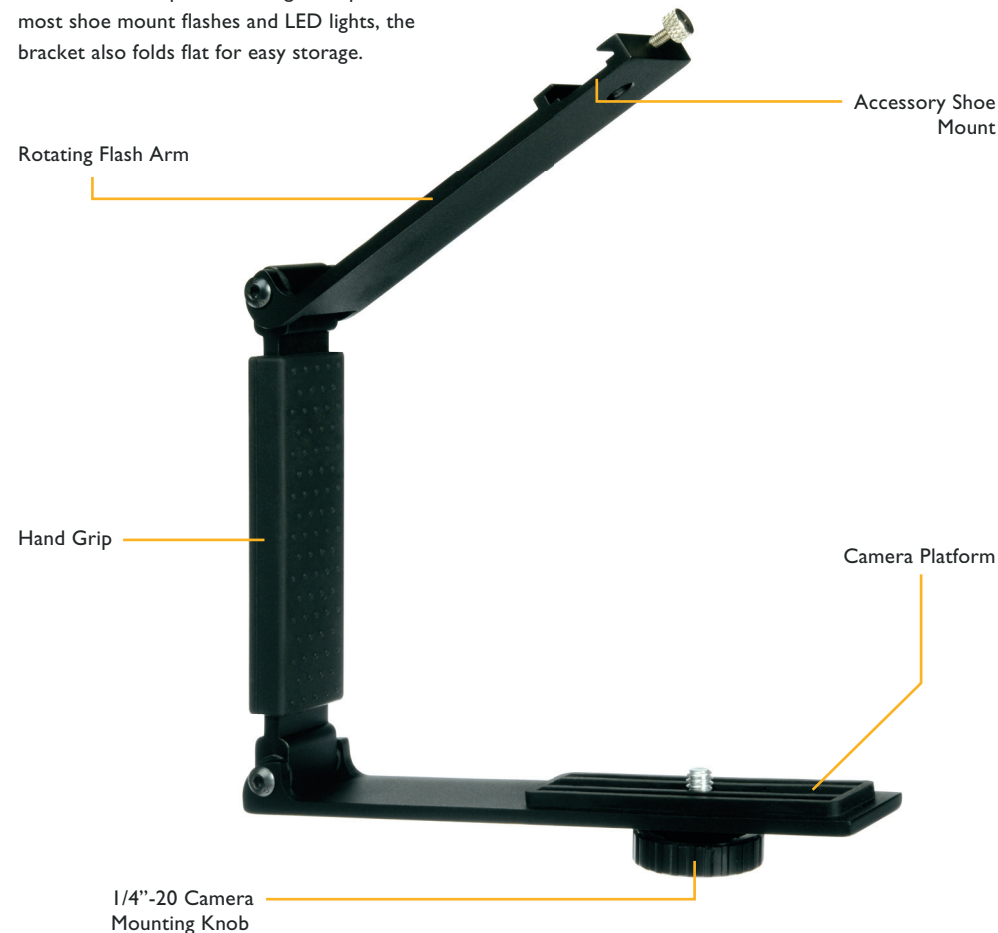

MOUNTING THE CAMERA

For a Point & Shoot camera, start with the grip of the bracket on the left, and the camera facing forward. For a camcorder, the grip should be on the right.

Mount the camera onto the bracket by screwing the mounting screw on the bottom of the bracket into the camera's tripod thread.

MOUNTING SHOE ACCESSORIES

When using a shoe mount LED light, slave flash or microphone, mount the device by sliding it onto the cold shoe adapter of the bracket. To secure it, tighten the screw on the bracket's cold shoe adapter.

INSTALLING THE TTL CABLE

When using a TTL cable, install the camera-end of the TTL cable by sliding it forward into the camera's hot shoe mount.


Mount the flash-end of the TTL cable onto the cold shoe adapter of the bracket. To secure it, tighten the screw on the bracket's cold shoe adapter, and then tighten the locking collar on the TTL cable.

Mount the flash onto the TTL cable by sliding it forward into the hot shoe mount.

Note: Check that all connections are secure before use.


USING THE BRACKET FOR HORIZONTAL SHOOTING

Position the flash arm so that it is raised directly above the top of the camera's body with the flash mount centered above the lens when holding the camera horizontally.

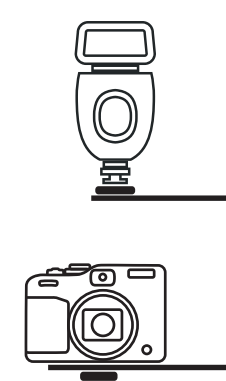

USING THE BRACKET FOR VERTICAL SHOOTING

Rotate the flash arm 180° to center the flash above your lens when holding the camera vertically.

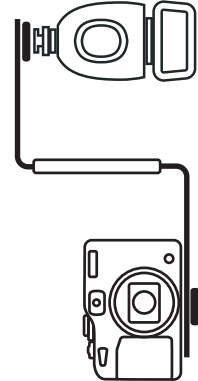

Limited Five-Year Warranty

Vello provides a limited warranty that this product is free from defects in materials and workmanship to the original purchase under normal use for a period of five (5) years from the original purchase date or thirty (30) days after replacement whichever occurs later. Vello's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, VELLO MAKES NEITHER ANY EXPRESS WARRANTIES, NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. To obtain a replacement during the time of this warranty, please return the defective item with proof of purchase, along with an RMA number to the place of purchase. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.