

# EZ-FLIP GEL SET

USER MANUAL



## THANK YOU FOR CHOOSING VELLO

The Vello EZ-Flip Gel Set contains 30 assorted color gels and a reversible silver reflector/black flag to control the light from your camera-mounted flash. When the light from your flash casts a color that is unflattering or harsh on skin tones, use one of the gels to acquire the correct

shade. If you want to get creative with the color in your photos, quickly insert one of the gels into the EZ-Flip Gel Holder and watch how your photograph transforms. With the included EZ-Flip Gel Holder, you can position any of the assorted gels in front of your flash with a flick of

the wrist, and move it back out of the way just as quickly. It fastens to the flash head via the hook-and-loop strap instead of the hassle of rubber bands and tape. Everything fits in the included nylon carrying case, which makes this a great portable tool that won't take up space in your bag.

## CONTENTS

- 30 × assorted colored gels
- Silver reflector/black flag
- EZ-Flip Gel Holder with hook-and-loop strap
- Nylon carrying case



## PRECAUTIONS

- Please read and follow these instructions and keep this manual in a safe place.
- Keep this unit away from water and any flammable gas or liquid.
- Keep this unit away from children.
- Make sure this item is intact and that no parts are missing.
- Handle this unit with care.
- All photos in this manual are for illustrative purposes only.

## ATTACHING THE EZ-FLIP GEL HOLDER

1. Place the EZ-Flip Gel Holder onto the flash head with the rubber side of the hook-and-loop strap facing down. Make sure the unit is facing forward with the gel holder flipped over, in front of the flash.
2. Wrap the hook-and-loop strap around the head of the flash unit and secure tightly so the gel holder does not slip. You can have the gel holder in front of the flash or flip it out of the way at your convenience.



## INSERTING A COLOR GEL

Colored gels can be used for coloring, warming, cooling, or color correcting your photos.

1. Select a colored gel and slide it behind the gel holder tabs.
2. Position the gel holder in front of the face of the flash.



*Tip: Each side of the gel holder has tabs which can be used with multiple gels together for different color combinations.*



## USING THE BLACK FLAG

The black flag is used when you need to control the spill light from your flash. This is helpful for blocking light from your subject, or when you do not want light bouncing to other areas and affecting your photos. Typically, this is used in off-camera strobe applications.

1. Insert the black flag into either side of the EZ-Flip Gel Holder so that the silver side is facing the flash.
2. Position the EZ-Flip Gel Holder so that the black flag blocks the light of the flash from the area you do not want illuminated.



## USING THE SILVER REFLECTOR

The silver reflector is used to bounce light while adding a saturated, soft look. This is ideal when shooting portraits or close-ups.

1. Insert the reflector into either side of the EZ-Flip Gel Holder so that the silver side is facing the flash.



2. Adjust the angle of your flash's head so that it is pointing upwards.

- ▶ 3. Flip the gel holder to a 45° angle above the front of the flash for optimal use. You can then make fine adjustments to dial in the amount light you want to bounce.

*Tip: You can use any of the color gels in combination with the silver reflector.*

## SPECIFICATIONS

<b>Dimensions (H x W x L)</b>	4" x 4" x 2" (10.1 x 10.1 x 5.1 cm)
<b>Weight</b>	4 oz. (113.4 g)
<b>Gel Dimensions (H x W)</b>	2.25" x 3.5" (5.7 x 9 cm)

## ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit [www.vellogear.com](http://www.vellogear.com) or call Customer Service at 212-594-2353.



Product warranty provided by the Gradus Group.

[www.gradusgroup.com](http://www.gradusgroup.com)

VELLO is a registered trademark of the Gradus Group.

© 2015 Gradus Group LLC. All Rights Reserved.

[www.vellogear.com](http://www.vellogear.com)

All other trademarks are the property of their respective owners.  
© Copyright 2015 Gradus Group

GG1