



SCREEN PROTECTOR ULTRA

ULTRA-CLEAR
OPTICAL GLASS

 VELLO™

USER MANUAL

Introduction

Thank you for choosing Vello.

Congratulations on the purchase of your Vello Screen Protector Ultra. This screen protector is designed for long-term use to protect your camera's LCD from scratches, dust, smears, and even impact. It adheres to the LCD without leaving behind any sticky residue, and it's rigid, so it's easy to apply without trapping any air bubbles underneath. The Vello Screen Protector Ultra is made from ultra-clear, UV-protective Japanese optical glass that won't affect the LCD's image quality—in fact, you can barely tell it's there!

Please read these instructions carefully before applying your Vello Screen Protector Ultra.

Box Contents

- Vello Screen Protector Ultra
- Wet wipe
- Microfiber cleaning cloth
- Cleaning tape
- Plastic applicator
- User manual (this booklet)



1. Remove any films or other intervening substances from your camera's LCD.



2. Clean the LCD with the wet wipe and then wipe it dry with the microfiber cleaning cloth.



3. Peel off the backing from the cleaning tape and use it to wipe away any remaining dust from your camera's LCD.



4. Peel off tape A from the screen protector. Be careful not to get any fingerprints on this side of the screen protector.



5. Make sure your camera is on a stable surface, and align the screen protector with your camera's LCD.



6. Press down firmly on the center of the screen protector and push outwards to apply.



7. Use the plastic applicator to smooth out any air bubbles by pushing them out to the edge of the screen protector.



8. Peel off tape B from the screen protector.

To remove the Vello Screen Protector Ultra, push the screen protector to the side until you can lift it up to remove it completely. Make sure to clean the camera's LCD before reapplying.

One-Year Limited Warranty

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.
www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group.
© 2014 Gradus Group LLC. All Rights Reserved.



All other trademarks are the property of their respective owners