

LENS ADAPTER MANUAL

LA-MFT-CFD
LA-CEF-CFD



INTRODUCTION

Thank you for choosing a Vello Lens Adapter. Vello lens adapters allow you to use lenses from manufacturers other than the maker of your camera body. Vello Lens Adapters fit securely to the lens, but not so tightly that they are difficult to remove. Please follow these instructions to mount and remove your Vello Lens Adapter.

Although the lens will fit physically, automatic diaphragm (AE metering), and other functions dependent on communication between the camera body and lens, will be disrupted by a lens adapter. You will need to set exposures manually or meter in aperture priority (stop-down) mode. The lens adapter adds a 1.25 magnification to the lens. Focusing to infinity is retained.

All images are for illustrative purposes only.

Some Canon FD lenses have a breech-lock mount instead of a bayonet mount with a release button. If your Canon FD lens has a breech-lock mount, follow these instructions. If your Canon FD lens has a bayonet mount, follow the next set of instructions.

BREECH-LOCK MOUNT

TO MOUNT THE LENS ADAPTER

1. Line up the alignment dots on the lens adapter and the camera. Rotate the lens adapter clockwise until it locks into place.





2. Make sure the locking collar on the lens is rotated completely counterclockwise (A).
Note: On some lenses, this is not necessary.

Rotate the collar on the lens adapter in the direction of the arrow to the OPEN position (B).



3. Line up the alignment dots on the lens and the lens adapter.



4. Rotate the locking collar on the lens clockwise until it is secure.



5. Rotate the collar on the lens adapter in the direction of the arrow to the LOCK position.

TO REMOVE THE LENS ADAPTER



1. Rotate the locking collar on the lens counterclockwise to release the lens.



2. Press and hold the lens release button on the camera. Rotate the lens adapter counterclockwise to release.

BAYONET MOUNT

TO MOUNT THE LENS ADAPTER



1. Line up the alignment dots on the lens adapter and the camera. Rotate the lens adapter clockwise until it locks into place.



2. Rotate the collar on the lens adapter in the direction of the arrow to the OPEN position.



3. Line up the alignment dots on the lens and the lens adapter. Rotate the lens clockwise until it locks into place.



4. Rotate the collar on the lens adapter in the direction of the arrow to the LOCK position.

TO REMOVE THE LENS ADAPTER



1. Press and hold the release button on the lens.



2. Rotate the lens counterclockwise to release.



3. Press and hold the lens release button on the camera. Rotate the lens adapter counterclockwise to release.

For Micro Four-Thirds (MFT) cameras, enable the “Shoot without Lens” function in the menu of the camera.

Tip: When shooting at a low f/stop, rotate the collar on the lens adapter to OPEN position to let in more light for easier focusing. Once you have focused the image, rotate the collar on the lens adapter to the LOCK position before taking the picture.

ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353. Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group.

© 2014 Gradus Group LLC. All Rights Reserved.





www.vellogear.com

© Copyright 2014 Gradus Group

Vello and other names of Vello products are trademarks of Gradus Group. Other product and corporate names mentioned herein are trademarks of their respective holders.

GG2