



CB-300

QUICKSHOT FLASH BRACKET MANUAL




INTRODUCTION

Thank you for choosing a Vello Rotating Flash Bracket. The Vello CB-300 Rotating Flash Bracket accepts SLR and medium format cameras, allowing you to position a flash directly above the lens in horizontal or vertical orientation. The adjustable flash shoe is capable of accommodating almost any portable flash.

The bracket is all metal yet lightweight. It includes a cork pad to prevent the camera from slipping on the mount. The height of the upright arm of the bracket is adjustable. There is also a 1/4"-20 socket for tripod mounting. Integrated feet allow you to securely set your camera down mid-session. Please follow the instructions below to get the most out of your Vello Rotating Flash Bracket.

FEATURES DIAGRAM

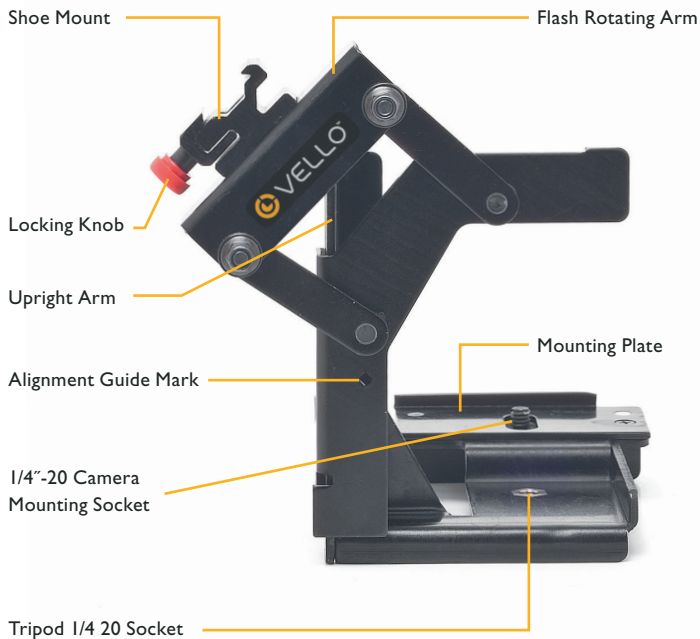

TO MOUNT THE CAMERA



1. Mount the camera to the plate by screwing the mounting knob into your camera's tripod socket.



2. Before tightening the mounting knob, make certain that the camera is flush against the retaining lip of the plate.

The top plate can be removed if necessary to accommodate certain models of larger cameras. Use a screwdriver to remove the screw holding the plate to the bracket.


ADJUSTING THE UPRIGHT ARM

The upright bracket can be adjusted to properly center the flash unit and to accommodate larger cameras.



1. Loosen the two screws on the side of the upright arm.




2. Adjust the bracket's position. The center of the lens should align with the  shaped hole in the bracket.



3. Retighten the screws. The flash will now be centered above the lens when you switch to a vertical orientation.

MOUNTING THE FLASH

The Vello Rotating Flash Bracket features an adjustable cold shoe.

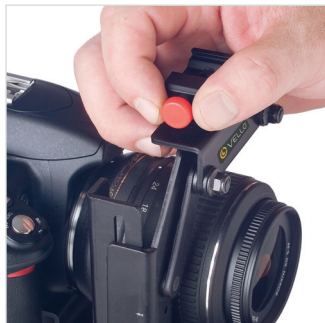

1. Turn the red knob counter-clockwise until the shoe mount is open wide enough to accommodate the flash.



2. Tighten the red knob until the flash is secure.



3. Connect your flash to your camera with the appropriate sync cord for your model of flash and camera (not included). Sync cords can be obtained from your photo equipment dealer.

ROTATING THE FLASH



1. The Vello Rotating Flash Bracket allows you to hold your camera as you normally would, right hand holding the camera, ready to press the shutter button.



2. To switch from horizontal (landscape) to vertical (portrait) positioning, grasp the flash unit near the shoe mount and pull the rotating arm down clockwise.



3. At the same time, turn the camera to the vertical orientation.

FIVE YEAR LIMITED WARRANTY

Vello provides a limited warranty to the original purchaser that this product is free from defects in materials and workmanship under normal consumer use for a period of five (5) years from the original purchase date. Vello's responsibility shall be limited solely to repair or replacement, at its option. This warranty does not extend to damage or failure which results from misuse, abuse, neglect, accident, alteration, improper installation or maintenance. Except as provided herein, Vello makes no express or implied warranty of merchantability or fitness for any particular purpose. To exercise this warranty during the warranty period, please return the defective item with proof of purchase and RMA number to the place of purchase. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



www.vellogear.com