



SUMMIT^{SS}

TRIPOD KIT



SUMMIT^{SS}

TRIPOD KIT

Features

5-section legs for maximum height with minimum packing length.

Light weight for an easy carry.

Twist leg locks for variable height adjustment and reduced bulk.

Compact ball head with quick-release plate and locking mechanism.

Variable leg angle adjustments allow for flexible positioning.

Balance hook holds extra weight for greater stability in windy conditions.

Rubber feet stand sure-footed on slick surfaces.

Specifications

Height Range	6.3–54.5"
Maximum Load	5 pounds
Leg Sections	5
Leg Angles	3
Weight	1.8 pounds
Folded Height	14.0"
Folded Width	3.8"



- 2 -

SUMMIT^{SS}

TRIPOD KIT

Our ultimate field-packing tripod, the Summit™ is the perfect combination of size, weight, rugged build and fast operation. No other tripod can get out of your pack and on target quicker than a Summit.

Compact Ball Head



- 3 -

Adjusting the ball head

The **Ball Head** can be adjusted to any angle. Loosen or tighten the **Positioning Knob** to adjust the plate angle.

To attach or detach the quick-release plate, pull the **Throw Lever** out. Attach the quick-release plate to the desired optic or camera.



Balance Hook

To help stabilize the tripod in windy conditions, attach the **Balance Hook** and hang a weight (not supplied) from it.

- 4 -



Adjusting the center column

Loosen and tighten the **Column Height Adjustment Knob** to raise or lower the center column.



For very low heights, the center column can be split by unscrewing and removing the lower section.



- 5 -



Adjusting the leg length

Grasp the rubber section at the very end of the tripod leg and rotate counter-clockwise until you have felt four distinct clicks. While maintaining grip on rubber end section, extend the leg to desired length. When leg is at desired length, twist the rubber end section clockwise to lock in place. Leg will extend to a maximum of five sections.

To collapse the legs, grasp the rubber end section and rotate counter-clockwise until you have felt four clicks. Locks will then be released and leg can be collapsed. Twist clockwise to re-lock legs.



Twist to Lock and Unlock Leg

Adjusting the leg angle

The legs of the Summit SS can be set at one of three angles. To adjust the leg angle, slide the **Release Tab** to the right and pivot the leg outward to the desired angle.

1. Push Release Tab to Right



2. Pivot Leg and Engage Release Tab at Desired Angle



- 6 -

THE VORTEX 3-YEAR WARRANTY

This tripod is warranted to be free of defects in materials and workmanship for three years after purchase. If found to be defective in materials or workmanship upon our inspection, Vortex Optics will repair or replace the product or part.

Rest assured, if your tripod should ever require repair, all you need do is contact Vortex Optics at 800-426-0048 for prompt, professional, and friendly service.



Vortex Optics

2120 West Greenview Drive
Middleton, WI 53562
service@vortexoptics.com

Visit vortexoptics.com for more information. Canadian customers may visit vortexcanada.net for customer service information.

Manual #ST-4-11A