

VSN V.45


Android™ 4.2.2, Jelly Bean


CONTENTS

1. Introduction to basic commands	3
2. Phone App Features	6
3. Paste/copy	7
4. Email Settings.....	7
5. Desktop Features	9
6. BT/Wi-fi Features	11
7. Airplane Mode	12
8. Screen lock/ unlock.....	13
9. Restore to factory default	13
10. Storage Settings	13
11. How to change the language	14
12. Changing the mobile phone input method.....	144
13. Auto- Rotating Display.....	15
14. Browser Features.....	15

Introduction to Basic Commands

Menu button  : Opens a set of sub-menu functions. If held, opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it left or right.


Home button  : Opens Home. If you're viewing a left or right Home screen, opens the central Home screen. Note that using this key will not really exit the application, the application will continue to run in the background.

Back button  : Opens the previous screen you were working on even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.

Introduction to Widgets

 
Widgets are like windows inside your apps. They're available from an All Apps tab for you to move onto your Home screens.

To see your widgets:

1. Touch the All Apps icon  on your Home screen.
2. Touch Widgets at the top of the screen.


From the main Widgets screen, you can

- Move between screens: Swipe left or right.
- Drag a widget to a Home screen: Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

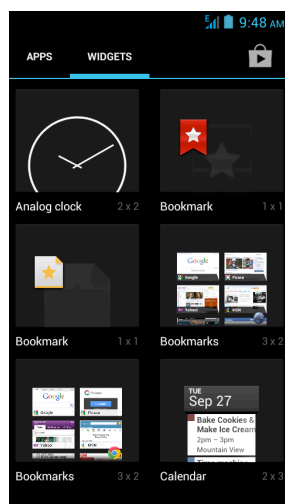


Send MMS

Click “+”, to add additional content.

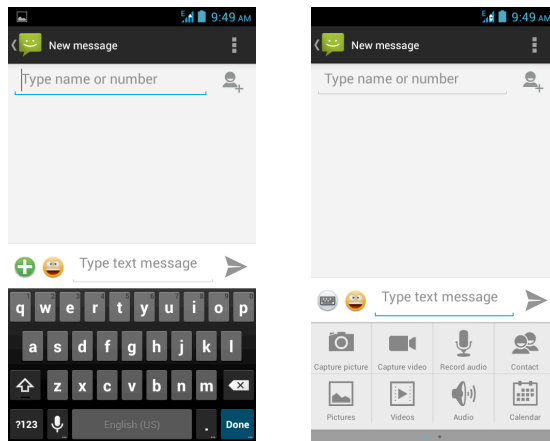

SMS notification tone


Enter the messaging- click the menu button, select "Settings" function - select "Notification" function

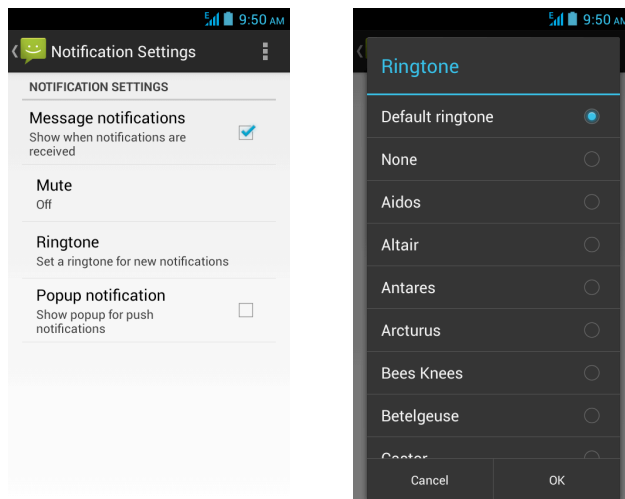

View the sender information

Access to the message screen - select the “message” - click “” – click


, then you can view the sender information.

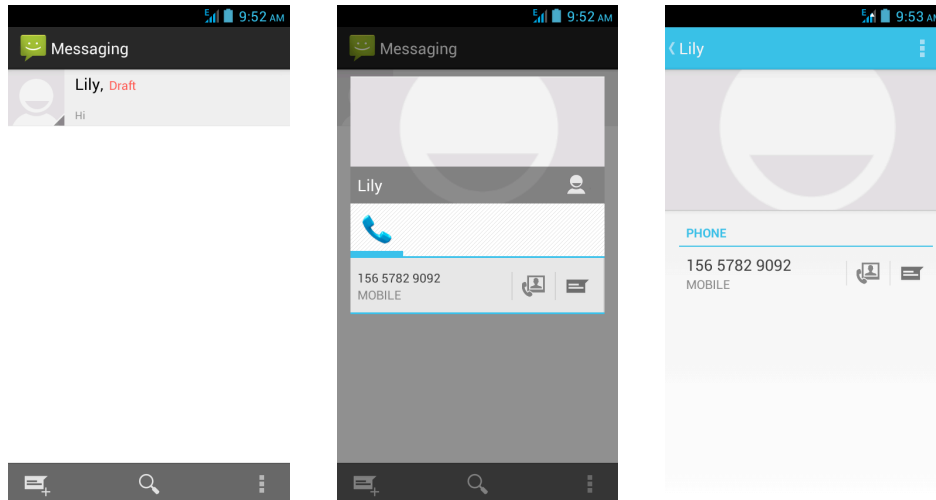

Message shortcut keys

Enter the message screen- long press the “message”, then shortcut keys-appear.



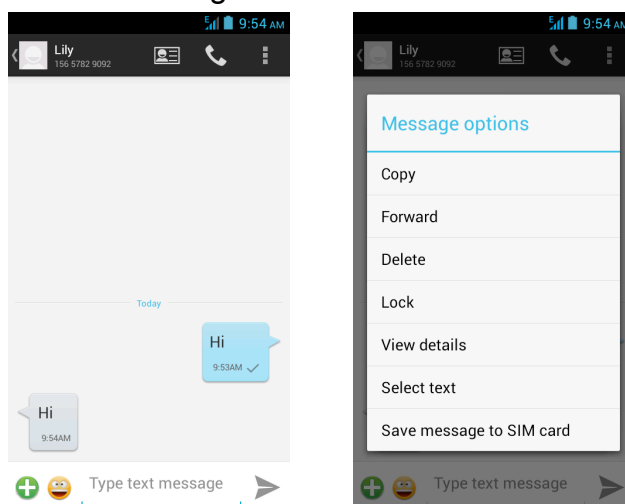



Shortcuts include: Copy, Forward, Delete, Lock, View Details, Select text, and save message.




Phone App Features

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.


To dial using the Phone app:



- Touch the Phone Icon  on a Home or All Apps screen. Notice the three tabs at the top of the phone. You can make calls from any of them.
- The Dialer tab  lets you dial manually. Touch the keys to enter the number, then touch the Phone icon below the keypad to dial. If you enter a wrong number, touch  to erase digits one by one. To see numbers for all your contacts, touch . You can also search your contacts from here. To dial an international number, touch & hold the 0 key to enter the plus (+) symbol. Then enter the international prefix for the country, followed by the full phone number.
- The Call log tab  shows recent calls. Touch a call to return it.
- The Favorites tab  shows the numbers you usually call. Touch to dial.

To end a call in progress, touch the End Call icon .

Call History Features


Delete call records

Enter the call log interface - choose the contact– select the delete function- click “” icon

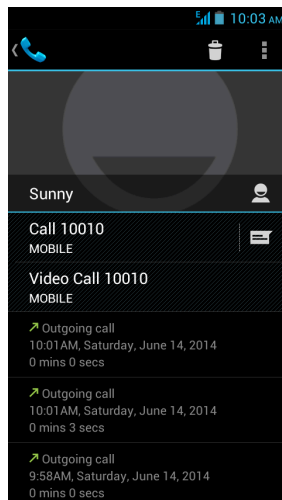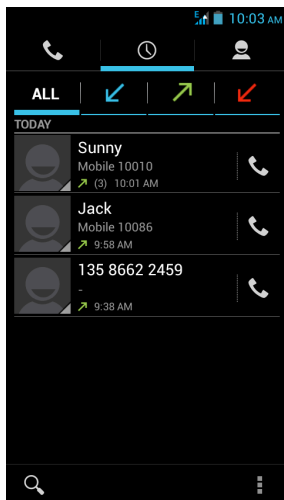

Paste/Copy Text Features

 Select the text you want to manipulate. Long press the text field, there shortcut keys will show- " select All " " cut " , "copy " , "paste All"

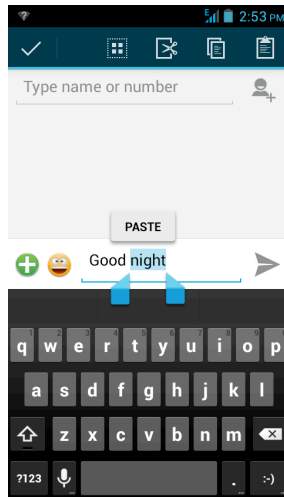


E-mail Features

Configuring mail account

Enter the Program Group screen - select "Email" application - enter your e-mail address and password, if the system automatically recognizes the mailbox information, will automatically configure; if the system does not recognize, will require users to type IMAP mailbox, or POP3, enter the appropriate configuration information.


Configure multiple email accounts

 Enter the Program Group screen – select "Email" application - click on the “menu” button- select setting function - select "Add Account" feature

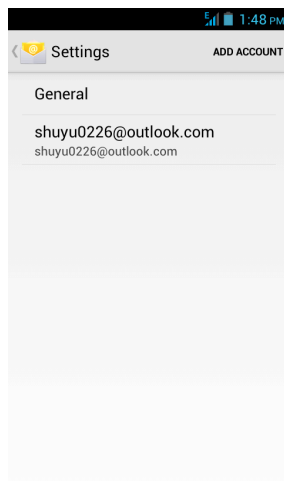



Delete email account

 Enter the Program Group screen – select "Email" application - click on the menu button- select setting function – select account - select the "Remove Account" function.

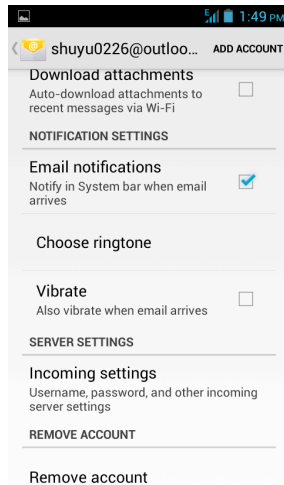


Email check frequency setting

  Enter the "Email" application - click on the menu button- select setting function – select account – select "Inbox check frequency" function.

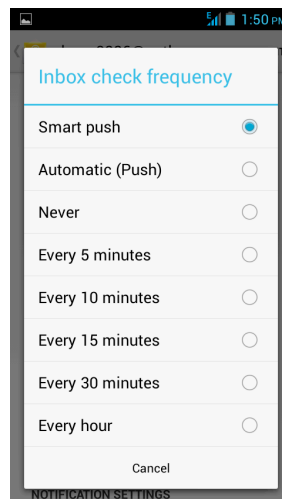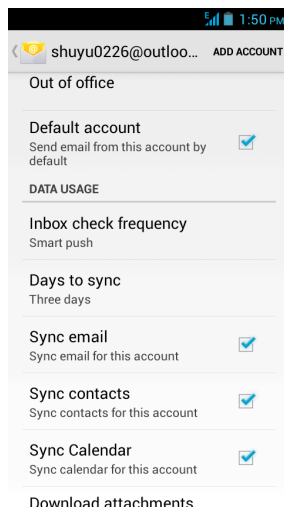


Desktop Features

 The common features on the desktop include personal home screen customization. Long press the preferred application, the application will be placed to the desktop.

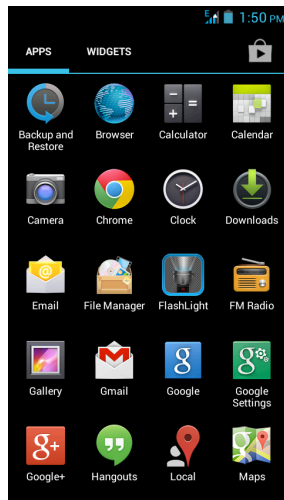


Wallpapers

 On the desktop - long press the home screen, then shortcut keys – select the "Wallpaper" feature

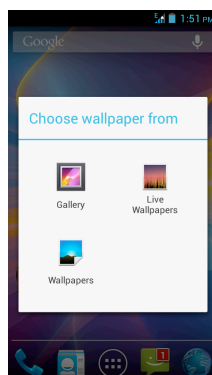


Application Packet

 On the home screen – slide the current screen to another application – click the application to open New Folder

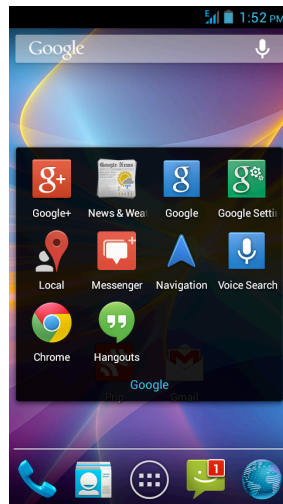



Changing the folder name

 Open the folder on the desktop - click "Input box" - rename the folder

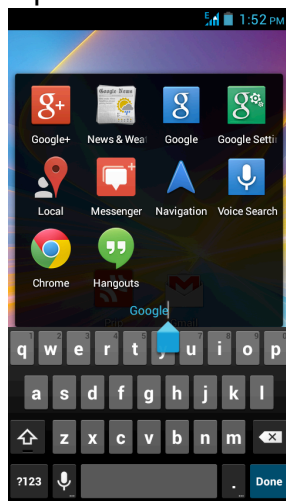


Adding widgets to your desktop

  In the empty space on the home screen - long press on the widget you like and it will be placed on the home screen.

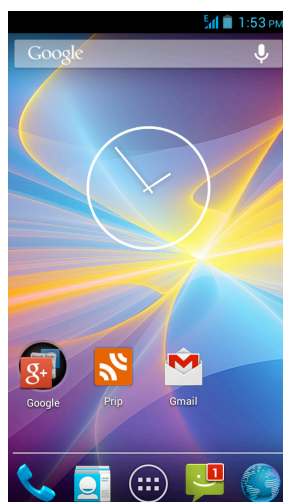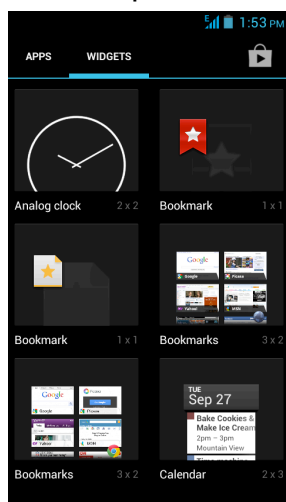

Add a URL to the desktop

 In the widgets space -long press the “Bookmark” widget - choose a bookmark

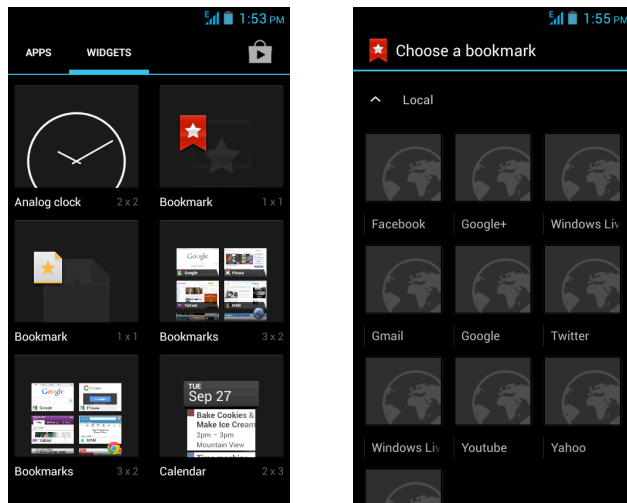


Add a playlist to your desktop

In the widgets space -long press the “Music playlist” widget - select a playlist
(Operation method and procedure displayed above)

BT/WI-FI Features


Bluetooth Function

 Click "Settings" - open "Bluetooth" to see all visible Bluetooth devices

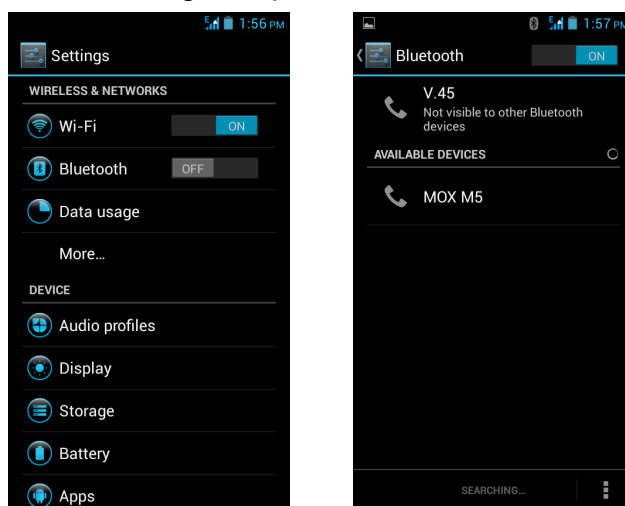


Wifi Features

 Click "Settings"-open "Wi-Fi" switch- select "Add NETWORK ", select the desired access APN

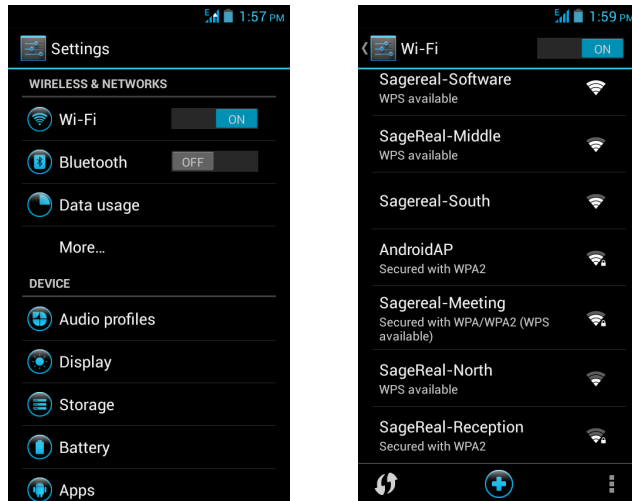


Airplane Mode Function

 Click "Settings"- select "More"- open "Flight Mode" function

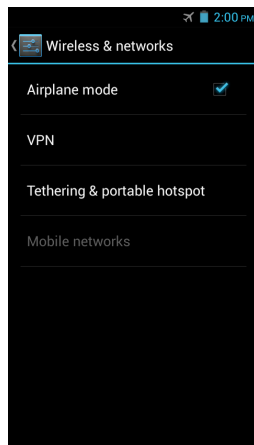


 Or long press the power button - select the "Flight Mode" function

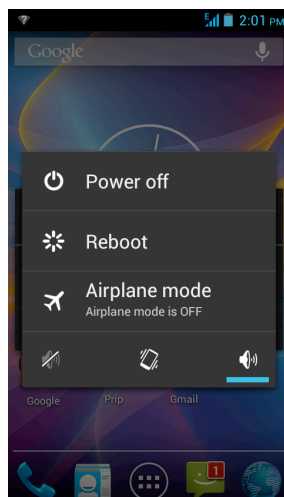


Screen lock/ unlock

 Click "Settings"- select "Security"- select the "Screen lock"- then click Pattern

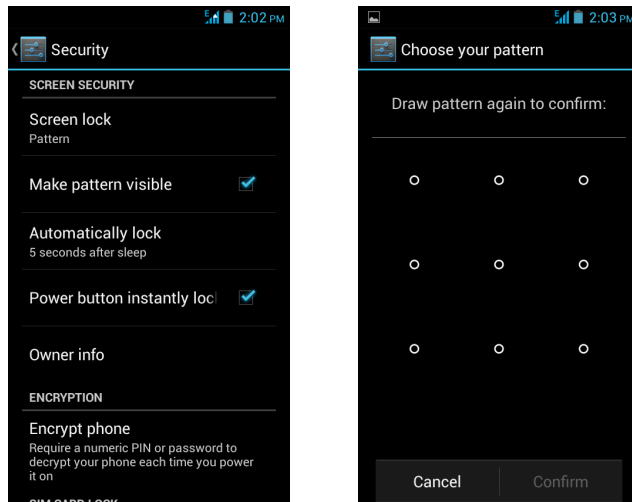


Restore to factory default

 Click "Settings"- select "Backup & reset"- select "Factory data reset"

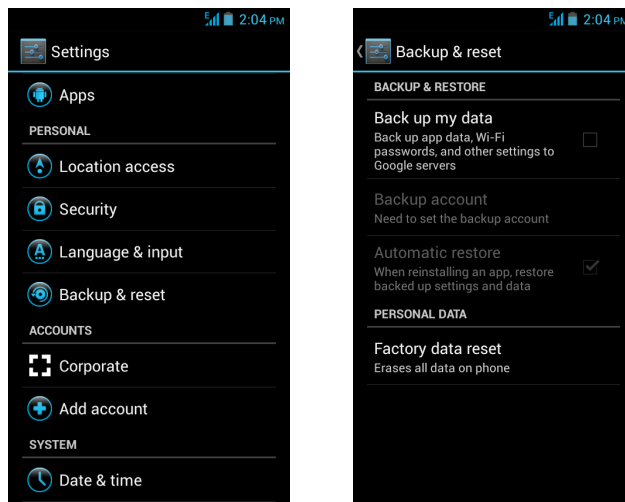


Storage Settings

 
Click "Settings"- select "Storage"

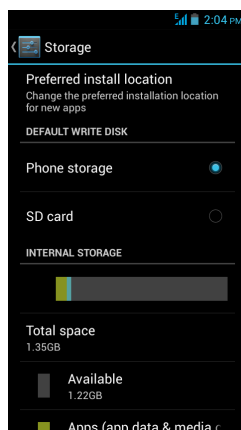


How to change the language

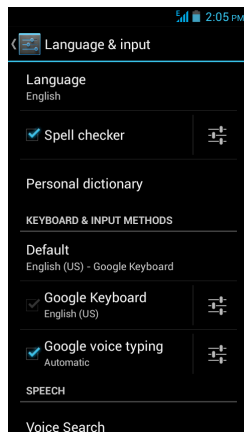 


Input set

  Click "Settings"-select "Language & input"- click “” button

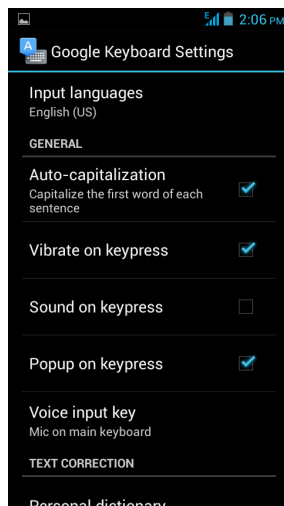

Changing the mobile phone input method

 Click "Settings" – Select "Language & input"-Then click Default


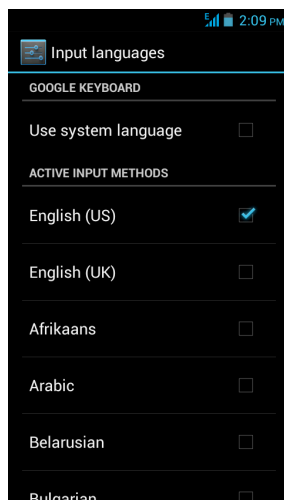


Auto- Rotating Display

Click "Settings"- "Display"- Check “Auto rotate screen”, hence based on the placement of the phone, the display will automatically change direction too.

Browser Features

  Open browser - click “url input area”- enter the “URL of web browsing”

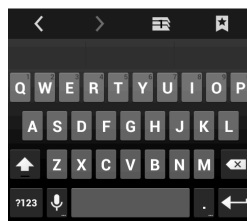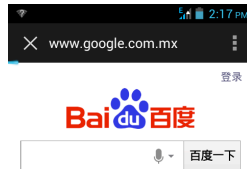

Download Web page images or other objects

