



BUB38G

BUB60G

BUB80G

# Portable Power Pack

Pocket-Sized USB Battery Charger  
for Smartphones & Mobile Devices

User Manual



XUMA™




# Thank you for choosing Xuma.

Congratulations on the purchase of your new Xuma Portable Power Pack. Our Portable Power Packs comprise pocket-sized batteries and universally compatible USB ports for rapid charging of USB-powered mobile devices like smartphones, digital cameras, GPS systems, and MP3 players. Added features like battery power indicator lights and an integrated LED flashlight make this convenient accessory a must-have when you're on the go.



Here are some basic instructions to get you acquainted with the Portable Power Pack and the charging process.

## Product Overview

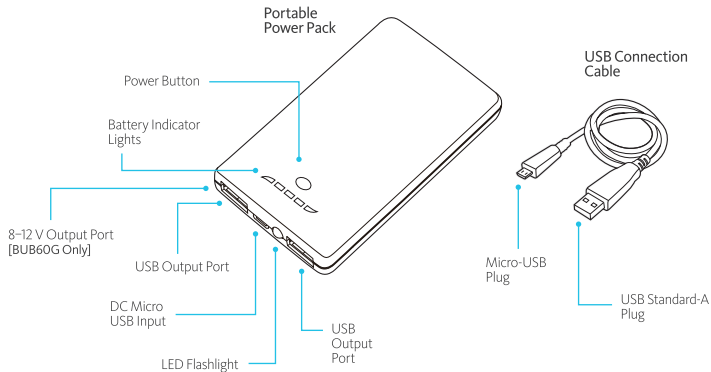

## Specifications

Portable Power Pack Specifications			
	BUB38G	BUB60G	BUB80G
Capacity	3,800mAh	6,000 mAh	8,000 mAh
Battery Cell Type	Li-Polymer	Li-Ion	Li-Polymer
Input Voltage	5V DC up to 1A	5V DC up to 2A	5V DC up to 2A
Output Voltage	5V DC up to 2A	USB Port: 5V DC up to 2A DC Port: 8–12V at 1A	5V DC up to 2A
Dimensions	4×2.3×0.4 in. (100×59×11 mm)	4.9×2.8×0.5 in. (124.5×71.1×12.7 mm)	4.9×2.8×0.5 in. (124.5×71.1×12.7 mm)
Weight	3.3 oz. (94 g)	6.1 oz. (171 g)	6.1 oz. (173 g)

## Box Contents

1. XUMA Portable Power Pack
2. USB to Micro-USB cable
3. User Instruction Manual (this booklet)

## Key Features

1. Compact Design:  
Allows for convenient charging while on the go
2. USB Charging Port:  
Output connection port accepts all USB Standard-A plugs
3. Long-Lasting Battery Life:  
Allows for hundreds of charges
4. Built-In Features:  
Integrated battery power indicator lights and mini flashlight

## Charging the Portable Power Pack

1. Insert the Micro-USB plug of the included cable into the DC Micro-USB Input port of the Portable Power Pack.
2. Insert the Standard-A plug on the other end of the cable into the USB port of your computer or an AC adapter.
3. The LED indicator lights on the Portable Power Pack will flash in sequence to indicate the status and progress of the charging. When all the LED indicator lights are lit and no longer blinking, charging is complete and your Portable Power Pack is at full power and ready for use.

## Charging Mobile Devices

1. Insert the cable's USB Standard-A plug into the corresponding USB port located on the Portable Power Pack.
2. Insert the Micro-USB plug on the other end of the cable into the Micro-USB charging port of your compatible device.
3. Press the power button on the Portable Power Pack to begin the charging process.



If your device does not have a Micro-USB charging port or requires a different connector, you can use your device's USB charging cable or any other appropriate charging cable, as long as it has the corresponding connectors, including the USB Standard-A male connector required in order to plug into the Portable Power Pack.

**For model BUB60G only:** The 8–12 V DC output port may require a special cable (available with kit BUB-CTK) in order to connect to the charging port of your laptop or other, similar devices.

## Battery Power Indicator Feature

1. The battery power indicator lights display the amount of power remaining in the Portable Power Pack. When all the battery indicator lights are lit, the Portable Power Pack has a full charge and is ready for use. If only one battery indicator light is lit, battery power is low to minimal and we recommend recharging the Portable Power Pack at this point.
2. When the battery indicator lights do not turn on, this means that your Portable Power Pack is out of power and you need to recharge it.
3. To turn on the battery indicator lights, press the power button. The battery indicator lights will remain lit for approximately ten to twenty seconds or until you press the power button again to turn them off.

## Using the Built-In LED Flashlight

1. The Portable Power Pack features an integrated LED flashlight that can provide approximately two hundred hours of continuous illumination on a full charge.
2. To turn on the LED flashlight, press and hold the power button for approximately five seconds.
3. Press and hold the power button again for approximately five seconds to turn it off.

## Precautions

- Do not attempt to disassemble, repair, or perform any unauthorized modifications on this device.
  - Do not handle this device with wet hands, immerse it in liquids, or expose it to water or rain; failure to comply may result in fire or electric shock.
  - This device may contain small parts that can pose a choking hazard; keep out reach of children.
  - Do not operate this device in the presence of flammable gas or vapors.
  - Do not store jewelry, keys, or other metal items together with the product in order to avoid damaging the USB ports.
  - Do not use or leave this device in conditions of extreme heat, severe cold, or high humidity.
  - If the product emits an unusual odor, becomes abnormally hot, or changes in color or shape, stop use immediately.
  - Ensure that the power is off before connecting or disconnecting cables; do not insert or remove the USB cable forcibly, as that may cause damage to the ports.
  - Charge the device fully before using. If the device will not be used for extended durations, charge it every three to four months to properly maintain it; when the battery is depleted, it may take ten minutes for the indicator lights to begin flashing to indicate charging.
  - Please dispose of packaging and old devices in accordance with appropriate environmental regulations.
-

## LIMITED ONE-YEAR WARRANTY

This XUMA product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Xuma Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Xuma along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information, or to arrange service, visit [www.xumausa.com](http://www.xumausa.com) or call Customer Service at 212-594-2353. Xuma is a Gradus Group Brand. Product warranty provided by the Gradus Group. [www.gradusgroup.com](http://www.gradusgroup.com)

Xuma is a registered trademark of the Gradus Group. © 2014 Gradus Group LLC. All Rights Reserved

---

