


※このスタンドを正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。



- 組み立て作業は、必ず2人以上で行ってください。
- 本機を組み立てたり、移動したりする際は、手をはさんだり、足の上に落とさないよう、十分に注意してください。
- 安全に作業できるスペースを確保してください。
- 電動工具を使用して組み立てないでください。ネジが空回りする恐れがあります。

部品の確認

組み立てる前に、部品が揃っていることを確認してください。

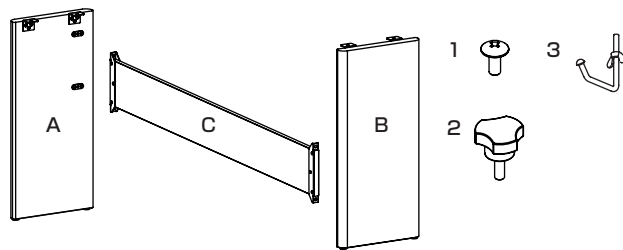

A	サイド・ボード (左)	1 個
B	サイド・ボード (右)	1 個
C	センター・ボード	1 個
1	ネジ a (M6×18mm)	4 個
2	ノブ・ボルト	4 個
3	ヘッドホン・フック	1 個

組み立て手順

※プラス・ドライバーをご用意ください。


※各ネジはしっかり締め付け、安定した水平な場所に設置してください。

※作業中、ペダル・コードや電源コードをはさまないように注意してください。

1 スタンドの組み立て

最初はネジを緩めに締めて全体を組みます。そして、ゆがみを補正しながら締め付けるとうまく組み上げることができます。


1. サイド・ボード (右) (金具が内側になるように) をネジ a (M6×18mm) でセンター・ボードに固定します。
2. サイド・ボード (左) も同様にネジ a (M6×18mm) で固定します。

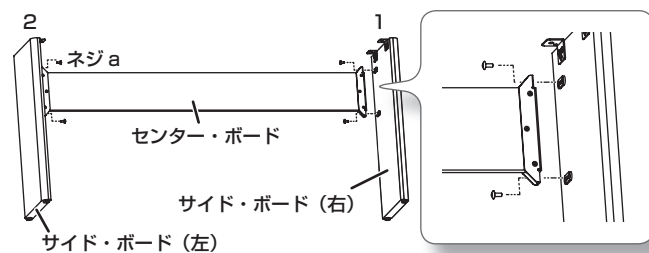

2 本体とスタンドの組み立て

1. ピアノ本体をスタンドの上に乗せ、ノブ・ボルト4本でしっかりと固定します。


※本体を持つときは、手をはさまないように注意してください。

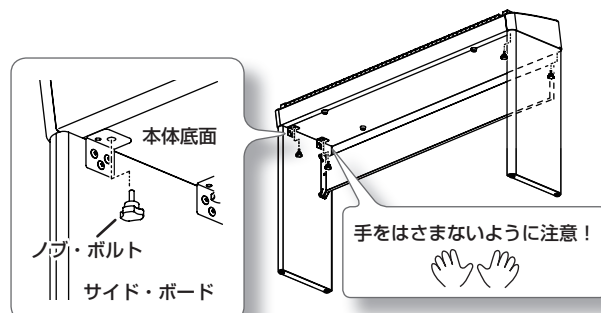

3 ヘッドホン・フックの取り付け

1. ヘッドホン・フックを、本体下にある穴に差し込みながら回します (下図参照)。
2. ヘッドホン・フックの蝶ネジを回して、ヘッドホン・フックを固定します。

別売の CD ドライブを取り付けている場合は、CD ドライブの右隣に取り付けてください (CD ドライブ対応機種のみ)。

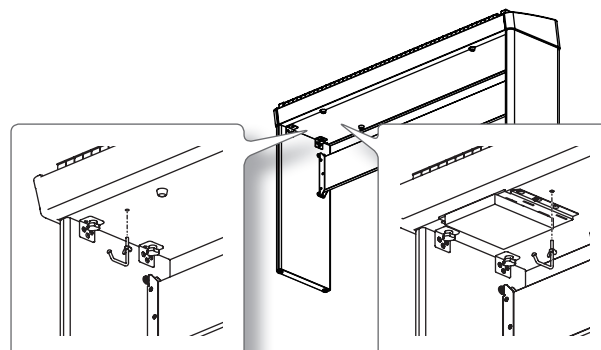

※製品の仕様および外観は、改良のため予告なく変更することがあります。


* Before using this stand, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." Additionally, the manual should be saved and kept on hand as a convenient reference.



- Make sure that another person is on hand to help with the assembly and setup.
- Be very careful, when you assemble and move the piano, to make sure that you do not drop it on your hands or feet.
- Prepare an area in which you can perform the assembly safely.
- Do not use a power tool (e.g., an electric screwdriver) to assemble the stand. You risk damaging or stripping the screws.

Parts Check

Before you begin assembling the stand, check that all the parts were supplied.

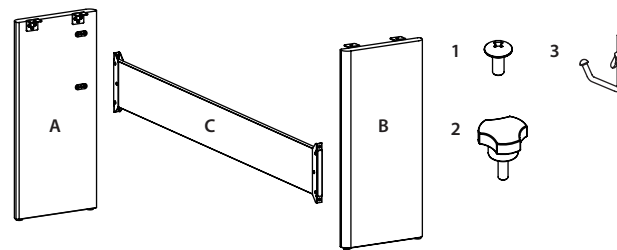

A	Side board (left)	1
B	Side board (right)	1
C	Center board	1
1	Screw "a" (M6 x 18 mm)	4
2	Knob bolt	4
3	Headphone hook	1

Assembly Procedure

* You will also need to have a Phillips screwdriver.


* Fasten each screw tightly, then place the stand in a stable and horizontal place.

* Do not allow the pedal cord or power cable to get twisted or pinched while assembling the stand.

1 Stand Assembly

At first, assemble the entire stand in a temporary fashion, without really tightening the screws. Then, after checking the overall alignment of the boards (and gently shifting certain parts where necessary), go around and tightly fasten each of the screws.


1. Attach the side board (right) for the right sides to the center board (so that the metal parts face inside) using screws "a" (M6 x 18 mm).
2. Use screws "a" (M6 x 18 mm) to attach the side board (left) in the same way.

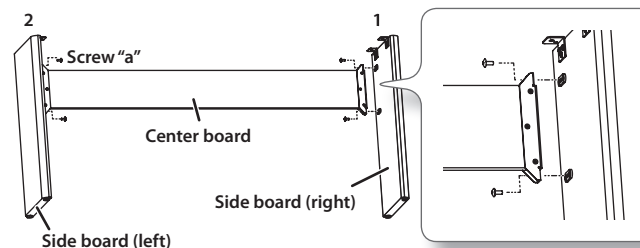

2 Installing the Piano on the Stand

1. Set the piano on the stand, then firmly attach the four knob bolts.


* When handling the piano, firmly grasp it. Be careful, so you do not get your fingers pinched.

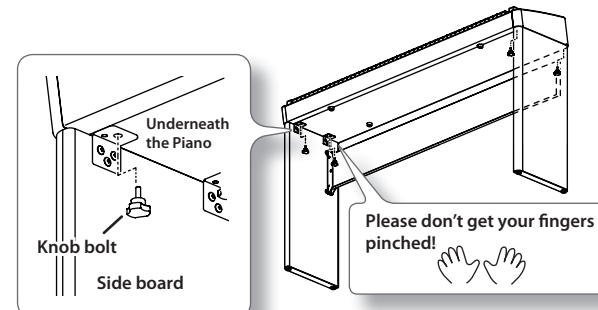

3 Attaching the Headphone Hook

1. Press and twist the headphone hook included with the piano into the hole in the bottom of the piano (refer to the figure below).
2. Turn the thumbscrew of the headphone hook to secure the headphone hook.

If the optionally available CD drive is installed, attach the headphone hook at the right of the CD drive (CD drive compatible model only).

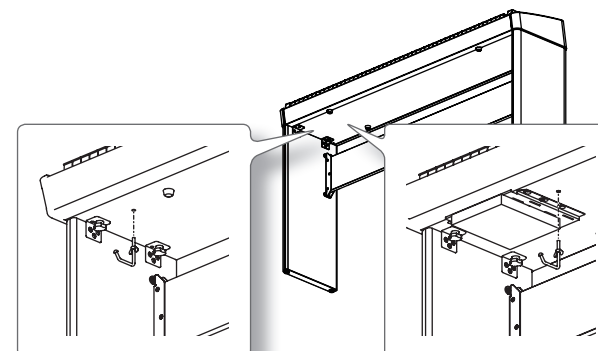






* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.










安全上のご注意

火災・感電・傷害を防止するには

⚠ 警告と ⚠ 注意の意味について		図記号の例	
 警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。	 △は、注意（危険、警告を含む）を表わしています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。	
 注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。	 ⊘は、禁止（してはいけないこと）を表わしています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表わしています。  ●は、強制（必ずすること）を表わしています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。	

----- 以下の指示を必ず守ってください -----

 警 告	 注 意
このスタンドを分解したり（取扱説明書に記載されている指示を除く）、改造したりしないでください。 	このスタンドはローランド FP-7 / FP-4 シリーズ専用です。他の製品と組み合わせると、不安定な状態となって落下や転倒を引き起こし、けがをするおそれがあります。 
修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。 	取扱説明書に記載の注意事項が守られていても、取り扱いによってはスタンドから本製品が落下したりスタンドが転倒したりする可能性があります。使用にあたっては事前に安全を確認したうえでお使いください。 
次のような場所に設置しないでください。  <ul style="list-style-type: none">• 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）• 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所• 湯気や油煙が当たる場所• 塩害の恐れがある場所• 雨に濡れる場所• ほこりや砂ぼこりの多い場所• 振動や揺れの多い場所	このスタンドの上に乗ったり、スタンドの上に重いものを置かないでください。 
このスタンドを、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。 	指定の機器（ローランド FP-7 / FP-4 シリーズ）だけに取り付け、取り付け時には付属のノブ・ボルトだけを使用してください。 
お客様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。 	付属のネジ、ノブ・ボルト、ヘッドホン・フックの蝶ネジは、小さなお子様が悪って飲み込んだりすることのないようお子様の手の届かないところへ保管してください。 
このスタンドを落としたり、このスタンドに強い衝撃を与えないでください。 	

使用上のご注意

設置について

- 直射日光の当たる場所や、発熱する機器の近く、閉め切った車内などに放置しないでください。また、至近距離から照らす照明器具（ピアノ・ライトなど）や強力なスポット・ライトで長時間同じ位置を照射しないでください。変形、変色することがあります。

お手入れについて

- お手入れは、柔らかい布で乾拭きするか、堅く絞った布で汚れを拭き取ってください。木目にそって全体を均一の力で拭きます。同じ所ばかり強くこすると、仕上げを損なう恐れがあります。
- 変色や変形の原因となるベンジン、シンナーおよびアルコール類は、使用しないでください。

修理について

- お客様がこのスタンドを改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合もあります。
- 当社では、この製品の補修用性能部品（製品の機能を維持するために必要な部品）を、製造打切後 8 年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間が経過した後も、故障箇所によっては修理可能な場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。

その他の注意について


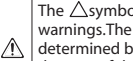

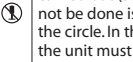
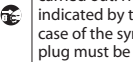
- 輸送や引っ越しをするときは、このスタンドが入っていたダンボール箱と緩衝材、または同等品で梱包してください。
- このスタンドが入っていた梱包箱や緩衝材を廃棄する場合、各地域のゴミの分別基準に従って行ってください。

本機を移動される場合














- 移動は 2 人以上で行ってください。
- 移動する前に AC アダプターなどを外してください。
- 水平になるように持ち上げてください。
- 手をはさんだり、足の上に落とさないように注意してください。

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices		About the Symbols	
 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.	 The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.	
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.	 The ⊘ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.  The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.	

----- ALWAYS OBSERVE THE FOLLOWING -----

 WARNING	 CAUTION
Do not open or perform any internal modifications on the stand. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user-installable options.) 	This stand intended for use only with Roland FP-7/FP-4 series. Use with other apparatus is capable of resulting in instability causing possible injury. 
Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor. 	Even if you observe the cautions given in the owner's manual, certain types of handling may allow this product to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product. 
Never install the unit in any of the following locations.  <ul style="list-style-type: none">• Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are• Damp (e.g., baths, washrooms, on wet floors); or are• Exposed to steam or smoke; or are• Subject to salt exposure; or are• Humid; or are• Exposed to rain; or are• Dusty or sandy; or are• Subject to high levels of vibration and shakiness.	Never climb on top of, nor place heavy objects on the stand. 
Make sure you always have the stand placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 	Install the stand only into the specified unit (Roland FP-7/FP-4 series). Use only the included knob bolts during the installation. 
In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 	Keep the included screws, the knob bolts, the thumbscrew of the headphone hook in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 
Protect the stand from strong impact. (Do not drop it!) 	

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

IMPORTANT NOTES

Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.

Maintenance

- To clean the unit, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/ or deformation.

Additional Precautions

- When you need to transport the stand, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

When Moving the Piano

- You must use two or more people when moving the piano.
- Before moving the piano, disconnect the AC adaptor and other cables.
- Keep the piano level when lifting it.
- Be careful not to pinch your hands or drop the piano on your feet.