




QR-EX3
Installation Instructions

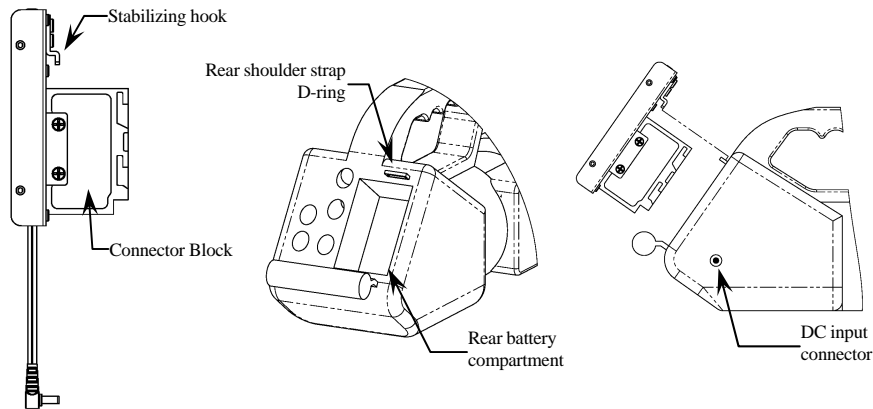

1. Place connector block on QR-EX3 into rear battery compartment of the Sony PMW-EX3 camera.
2. To lock QR-EX3 into place, push down on the QR-EX3 until the connector block locks into PMW-EX3 battery compartment. Be sure to align the stabilizing hook of the QR-EX3 on the rear shoulder strap D-ring on rear of PMW-EX3 camera to ensure a secure fit.
3. Connect the supplied power cable on QR-EX3 into the DC input connector on the side of PMW-EX3 camera.

World Headquarters 14 Progress Drive, Shelton, CT U.S.A. Tel (203) 929-1100 support@antonbauer.com
Anton/Bauer Singapore 6 New Industrial Road, #02-02 Hoe Huat Ind. Bld., Singapore Tel 65 297-5784
Europe Eurode Business Center, Eurode-Park1, 6461KB Kerkrade, The Netherlands Tel +31 45-563-9220 eurosupport@antonbauer.com
www.antonbauer.com 7595-0353 Rev A